STR-DB830/DB930/V929X

SERVICE MANUAL

Ver 1.1 2002. 02

US Model
STR-DB930/DB830
Canadian Model
STR-DB930
AEP Model
STR-DB930/DB830
E Model
Australian Model
STR-DB930
Chinese Model
STR-V929X

Photo : STR-DB930 (BLACK model)

Manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION : With 8 Ω loads, both channels driven, from 20 - 20,000 Hz ; rated 110 W (STR-DB930) and 100 W (STR-DB830) per channel minimum RMS power, with no more than 0.05 % total harmonic distortion from 250 mW to rated output (USA model only).

Amplifier section

POWER OUTPUT

Stereo mode

North American model

(8 Ω 20 Hz - 20 kHz, THD 0.05 %)
STR-DB930 : 110 W + 110 W
STR-DB830 : 100 W + 100 W
(4 Ω 20 Hz - 20 kHz, THD 0.05 %)
STR-DB930 : 100 W + 100 W
STR-DB830 : 90 W + 90 W

Other model

100 W + 100 W (8 ΩDIN 1kHz)
100 W + 100 W (4 ΩDIN 1kHz)
90 W + 90 W (8 Ω 20Hz-20kHz,thd0.05%)
90 W + 90 W (4 Ω 20Hz-20kHz,thd0.05%)

Surround mode

North American model

(8 Ω 20 Hz - 20 kHz, THD 0.09 %)
STR-DB930 : Front : 110 W + 110 W
Center[a] : 110 W
Rear[a] : 110 W + 110 W
STR-DB830 : Front : 100 W + 100 W
Center[a] : 100 W
Rear[a] : 100 W + 100 W
(4 Ω 20 Hz - 20 kHz, THD 0.09 %)
STR-DB930 : Front : 100 W + 100 W
Center[a] : 100 W
Rear[a] : 100 W + 100 W
STR-DB830 : Front : 90 W + 90 W
Center[a] : 90 W
Rear[a] : 90 W + 90 W

Other model

(8 Ω 20 Hz - 20 kHz, THD 0.09 %)
Front : 90 W + 90 W
Center[a] : 90 W
Rear[a] : 90 W + 90 W
(4 Ω 20 Hz - 20 kHz, THD 0.05 %)
Front : 90 W + 90 W
Center[a] : 90 W
Rear[a] : 90 W + 90 W

a) Depending on the sound field settings and the source, there may be no sound output.

Dynamic power output

STR-DB930 : 165 W + 165 W, 8 Ω
250 W + 250 W, 4 Ω
STR-DB830 : 155 W + 155 W, 8 Ω
240 W + 240 W, 4 Ω

Frequency response

PHONO : RIAA
equalization curve ±0.5 dB
CD, TAPE, MD/DAT, TAPE/MD, DVD/LD, TV/SAT, VIDEO 1,2, andVIDEO3:
10 Hz - 50 kHz + 0.5/-2 dB(with sound field, equalizer, and bass boost bypassed)

Inputs(Analog)

PHONO :
Sensitivity : 2.5 mV
Impedance : 50 kΩ
S/N[b] : 86 dB(A, 2.5 mV[c])

— Continued on next page —

FM STEREO FM-AM RECEIVER

9-928-896-12
2002B1600-1
© 2002.02
Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

SONY®

5.1CH INPUT, CD, DVD/LD, TAPE,
MD/DAT, TAPE/MD, TV/SAT,
VIDEO 1, 2, and VIDEO 3 :
Sensitivity : 150 mV
Impedance : 50 kΩ
S/N[b] : 96 dB(A, 150 mV[c])

b) INPUT SHORT
c) Weighted network, input level

Input(Digital)
DVD/LD (coaxial) :
Sensitivity : -
Impedance : 75 Ω
S/N : 100 dB(A, 20 kHz LPF)
DVD/LD, TV/SAT, MD/DAT (Optical)
Sensitivity : -
Impedance : -
S/N : 100 dB(A, 20 kHz LPF)
Outputs TAPE, MD/DAT, TAPE/MD, (REC OUT)
; VUDEO 1, 2 (AUDIO OUT) :
Voltage : 150 mV
Impedance : 10 kΩ
FRONT L/R, CENTER, REAR L/R, SUB
WOOFER :
Voltage : 2V
Impedance : 1 kΩ
PHONES :
Accepts low-and high-impedance headphones
BASS BOOST +6 dB at 70 Hz
Sampling Frequency 48 kHz
EQ BASS : 100 Hz - 1.0 kHz(21 steps)
MID : 500 Hz - 5.0 kHz(21 steps)
TREBLE : 1.0 kHz - 10 kHz(21 steps)
Gain levels : ±10 dB, 1 dB step

FM tuner section

Tuning range 87.5 - 108.0 Hz
Antenna terminals
75 Ω, unbalanced
Sensitivity Mono : 18.3 dBf, 2.2 µV/75 Ω
Stereo : 38.3 dBf, 22.5 µV/75 Ω
Usable sensitivity
11.2 dBf, 1 µV/75 Ω
S/N Mono : 76 dB
Stereo : 70 dB
Harmonic distortion at 1 kHz
Mono : 0.3 %
Stereo : 0.5 %
Separation 45 dB at 1 kHz
Frequency response 30 Hz - 15 kHz +0.5/-2 dB
Sencitivity 60 dB at 400 kHz

AM tuner section

North American and E models
With 10-kHz tuning scale : 530 - 1,710 kHz[d]
With 9-kHz tuning scale : 531 - 1,710 kHz[d]
Other models
531 - 1,602 kHz
Antenna Loop antenna
Usable sensitivity
50 dB/m(at 1,000 kHz or 999 kHz)
S/N 54 dB(at 50 mV/m)
Hermonic distortion
0.5 %(50 mV/m, 400 kHz)
Selectivity At 9 kHz : 35 dB
At 10 kHz : 40 dB

d) You can change the AM tuning scale to 9kHz. After tuning in any AM station, turn off the receiver. Hold down the TUNING + button and press the I/⏻ button. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz, repeat the procedure.

Video section

Inputs Video : 1 Vp-p 75 Ω
S-video : Y : 1 Vp-p 75 Ω
C : 0.286 Vp-p 75 Ω
Outputs Video : 1 Vp-p 75 Ω
S-video : Y : 1 Vp-p 75 Ω
C : 0.286 Vp-p 75 Ω

General

System Tuner section :
PLL quarts-locked digital synthesizer system
Preamplifier section :
Low-noise NF type equalizer
Power amplifier section :
Pure-complementary SEPP
Power requirements
USA, Canadian models
120V AC, 60Hz
Australian model
240V AC, 50Hz
Other model
220 – 230V AC 50/60Hz
Power consumption
STR-DB930
Canadian :400 VA
Other models :290 W
STR-DB830
North American models : 280 W
AC outlets
North American models : 2 switched, total 120 W/1A
Other models : 1 switched, max 100 W
Dimensions 430 × 405 × 160.5 mm
(17 × 16 × 6 3/8 in.)
including projecting parts and controls
Mass(Approx.)
13 kg(28 lb 11oz)
Supplied accessories
- FM wire antenna (1)
- AM loop antenna (1)
- Audio/video/control S connecting cord (1)
- CONTROL A1 connecting cord (1)
- FM antenna adapter (1)

STR-DB930, V929X only
- Remote commander RM-LJ302 (remote) (1)
- LR6 (size-AA) alkaline batteries (3)

STR-DB830 only
- Remote commander RM-PP402 (remote) (1)
- LR6 (size-AA) batteries (2)

Design and specifications are subject to change without notice.

MODEL IDENTIFICATION

– BACK PANEL –

MODEL	PARTS No.
DB930: US model	4-217-716-0☐
DB930: Canadian model	4-217-716-1☐
DB930: Malaysia, Singapore models	4-217-716-2☐
V929X	4-217-716-3☐
DB930: Australian model	4-217-716-4☐
DB930: AEP model	4-217-716-5☐
DB830: US model	4-217-716-6☐
DB830: AEP model	4-217-716-7☐

SAFETY CHECK-OUT

(US model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.

2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

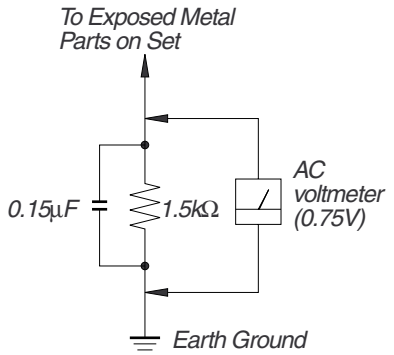

Fig. A. Using an AC voltmeter to check AC leakage.

TABLE OF CONTENTS

1. GENERAL ····

2. SERVICEING NOTE ····

3. TEST MODE ····

4. DIAGRAMS

4-1. Block Diagram Main Section ····
4-2. Block Diagram Power Section ···· 9
4-3. Circuit Board Location ····
4-4. Schematic Diagram Digital Section(1/3) ···· 13
4-5. Schematic Diagram Digital Section(2/3) ···· 15
4-6. Schematic Diagram Digital Section(3/3) ···· 17
4-7. Printed Wiring Board Digital Section(1/2) ···· 19
4-8. Printed Wiring Board Digital Section(2/2) ···· 21
4-9. Printed Wiring Board Display Section ···· 23
4-10. Schematic Diagram Display Section ···· 25
4-11. Printed Wiring Board Speaker Switch Section ···· 27
4-12. Schematic Diagram Speaker Switch Section ···· 29
4-13. Printed Wiring Board Rear AMP Section ···· 31
4-14. Schematic Diagram Rear AMP Section ···· 33
4-15. Printed Wiring Board Power Section ···· 35
4-16. Schematic Diagram Power Section ···· 37
4-17. Printed Wiring Board Video Section ···· 39
4-18. Schematic Diagram Video Section ···· 41
4-19. Printed Wiring Board Main Section ···· 43
4-20. Schematic Diagram Main Section(1/2) ···· 45
4-21. Schematic Diagram Main Section(2/2) ···· 47
4-22. IC Pin Function ····
4-23. IC Block Diagrams ····

5. EXPLODED VIEWS

5-1. Front Panel Section ····
5-2. Chassis Section ····

6. ELECTRICAL PARTS LIST ···· 66

与安全有关的零部件须知

在原理图上用阴影及 ⚠ 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

SECTION 1
GENERAL

Identifying the Parts

Front Panel

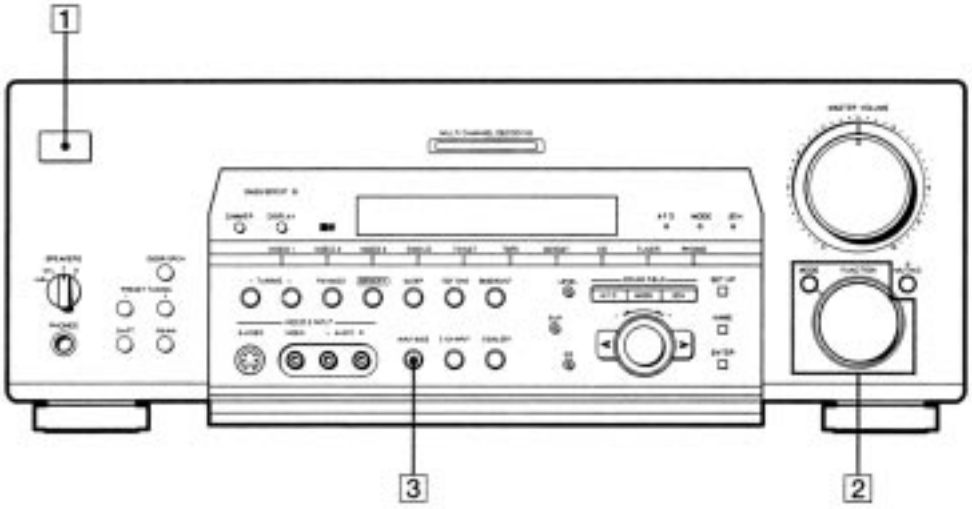

1 I/⏻ switch
2 FUNCTION control
MODE button
3 INPUT MODE button

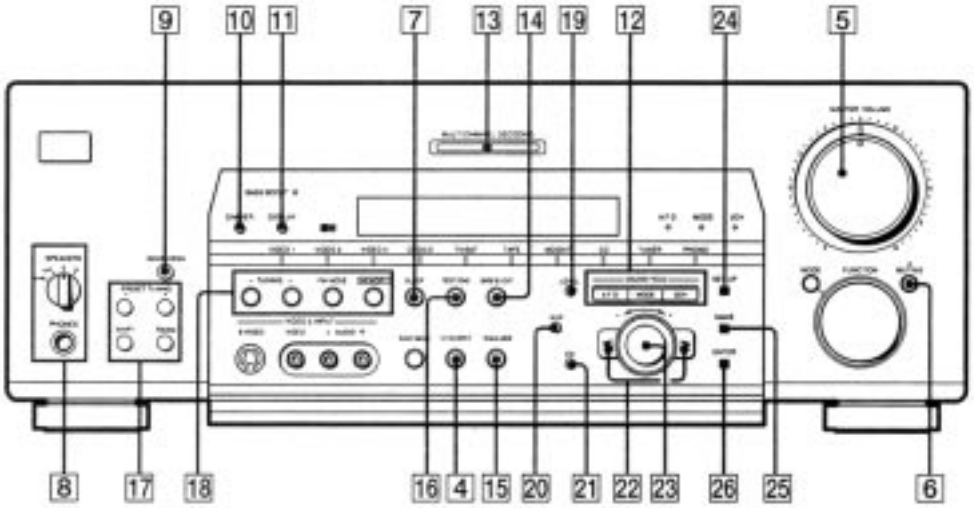

4 5.1CH INPUT button
5 MASTER VOLUME control
6 MUTING button
7 SLEEP button (EXCEPT AEP)
RDS PTY button (AEP model)
8 SPEAKERS selector
PHONES jack
9 DOOR OPEN button
10 DIMMER button
11 DISPLAY button
12 A.F.D button/indicator
MODE button/indicator
2CH button/indicator
13 MULTI CHANNEL DECODING indicator
14 BASS BOOST button
15 EQUALIZER button
16 TEST TONE button (EXCEPT AEP)
RDS EON button (AEP model)
17 PRESET TUNING +/- buttons
SHIFT button
FM/AM button
18 TUNNIG +/- buttons
FM MODE button
MEMORY button
19 LEVEL button
20 SUR button
21 EQ button
22 Cursor buttons (</>)
23 Jog dial
24 SET UP button
25 NAME button
26 ENTER button

Rear Panel

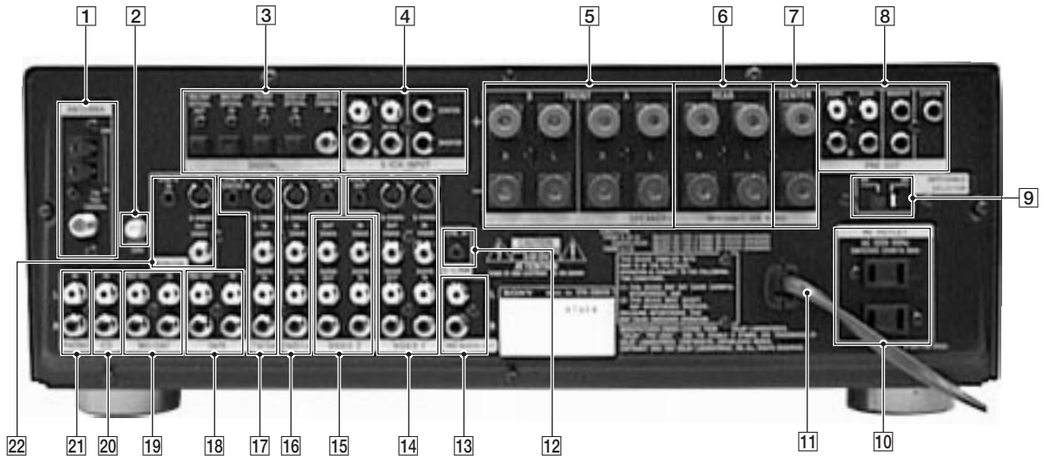

1	ANTENNA	12	S-LINK
2	SIGNAL GND	13	2ND AUDIO OUT
3	DIGITAL	14	VIDEO 1
4	5-1 CH INPUT	15	VIDEO 2
5	SPEAKERS (FRONT)	16	DVD/LD
6	SPEAKERS (REAR)	17	TV/SAT
7	SPEAKERS (CENTER)	18	TAPE
8	PREOUT	19	MD/DAT
9	IMPEDANCE SELECTOR	20	CD
10	AC OUTLET	21	PHONO
11	AC power cord	22	MONITOR

SECTION 2
SERVICING NOTE

1. When the front panel is removed, the VR board is removed at the same time. Consequently the LEDs cannot be turned on and the sound volume cannot be increased or decreased from the remote control.

2. When servicing the DIGITAL board, be sure to connect the earth land of the DIGITAL board with the chassis frame so that the earth potential of the DIGITAL board must not be floated from the chassis frame.

SECTION 3
TEST MODE

FLUORESCENT INDICATOR TUBE TEST MODE

* All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.
* Procedure:
  While depressing the ENTER, the LEVEL and the EQ buttons simultaneously, press the power [I/⏻] button to turn on the main power. All segments turn on at the same time, then each segment turns on press the ENTER button.

FACTORY SET MODE

* All preset contents are reset to the default setting.
* Procedure:

While depressing the SET UP, the LEVEL and the ENTER buttons simultaneously, press the power [I/⏻] button to turn on the main power. The message Factry Set appears and the present contents are reset to the default values.

ALL CLEAR MODE

* All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.
* Procedure:
  While depressing the SET UP button simultaneously, press the power [I/⏻] button to turn on the main power. The machine enters the DEMO mode.DEMO mode: Wait a while, then the demonstration starts. If the power [I/⏻] button is pressed often the demonstration has started, the power is turned off, and the demonstration resumes if the power [I/⏻] button is pressed again. ALL CLEAR mode; If the power [I/⏻] button is pressed often the machine enters the DEMO mode, but before the demonstration starts, the display is turned off. Press [I/⏻] again. No response is returned. The press [I/⏻] again. The preset data is cleared and the machine enters the normal power-on state.

SOUND FIELD CLEAR MODE

* The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.
* Procedure:
  While depressing the SOUND FIELD MODE button, press the power [I/⏻] button to turn on the main power. The message S.F Initialize appears and initialization is performed.

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE (US,Canadian Model)

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
* Procedure:
  Set the FUNCTION to AM. Turn off the main power.
  While depressing the TUNING+ button or the PRESET TUNING + button, press the power [I/⏻] button to turn on the main power. Either the message AM 9kHz Step or AM 10kHz Step appears. Select the desired step.

DSP TEST MODE

* It tests whether the DSP works correctly or not. When the DSP test is activated, the test data is output from the DSP (IC1401: CXD2712R) of the DIGITAL board and is written in the RAM (IC1402: IDT71V016S). When the test data is read from the RAM by the DSP, the data output must be equivalent to the original data. If they disagree, an error is triggered. Errors can be caused by the broken data line or defective soldering.
* Procedure
  While pressing the SETUP, LEVEL and SUR buttons, press the POWER button to enter the DSP test mode. The message DSP TEST MODE appears. When an error occurs, the message DSP2 ERROR is displayed. When there is no error, the message DSP2 NO ERROR appears and the 1 kHz signal is output to all channels. Then, the mode can be switched the (SIGN WAVE) (THROUGH) and (INPULSE) mode.

AUTOBETICAL MODE (AEP Model only)

* This mode is installed in the Europe models only. When this mode is used, the receiver scans the broadcasts that can be received by tuner, and sets up the broadcasts. Be sure to start scanning after connecting the antenna.
  Procedure:
  Check that the antenna is connected. Press the POWER button while pressing the MEMORY button to turn on the power. The message “Autobetical select” appears and scanning starts by tuner.

VERSION MODE

* When this mode is used, the microprocessor version number is displayed.
* Procedure:
  Press the POWER button while pressing the ENTER, LEVEL, and SUR buttons to turn on the power. The microprocessor version number appears as follows.

SECTION 4
DIAGRAMS

4-1. BLOCK DIAGRAM MAIN SECTION

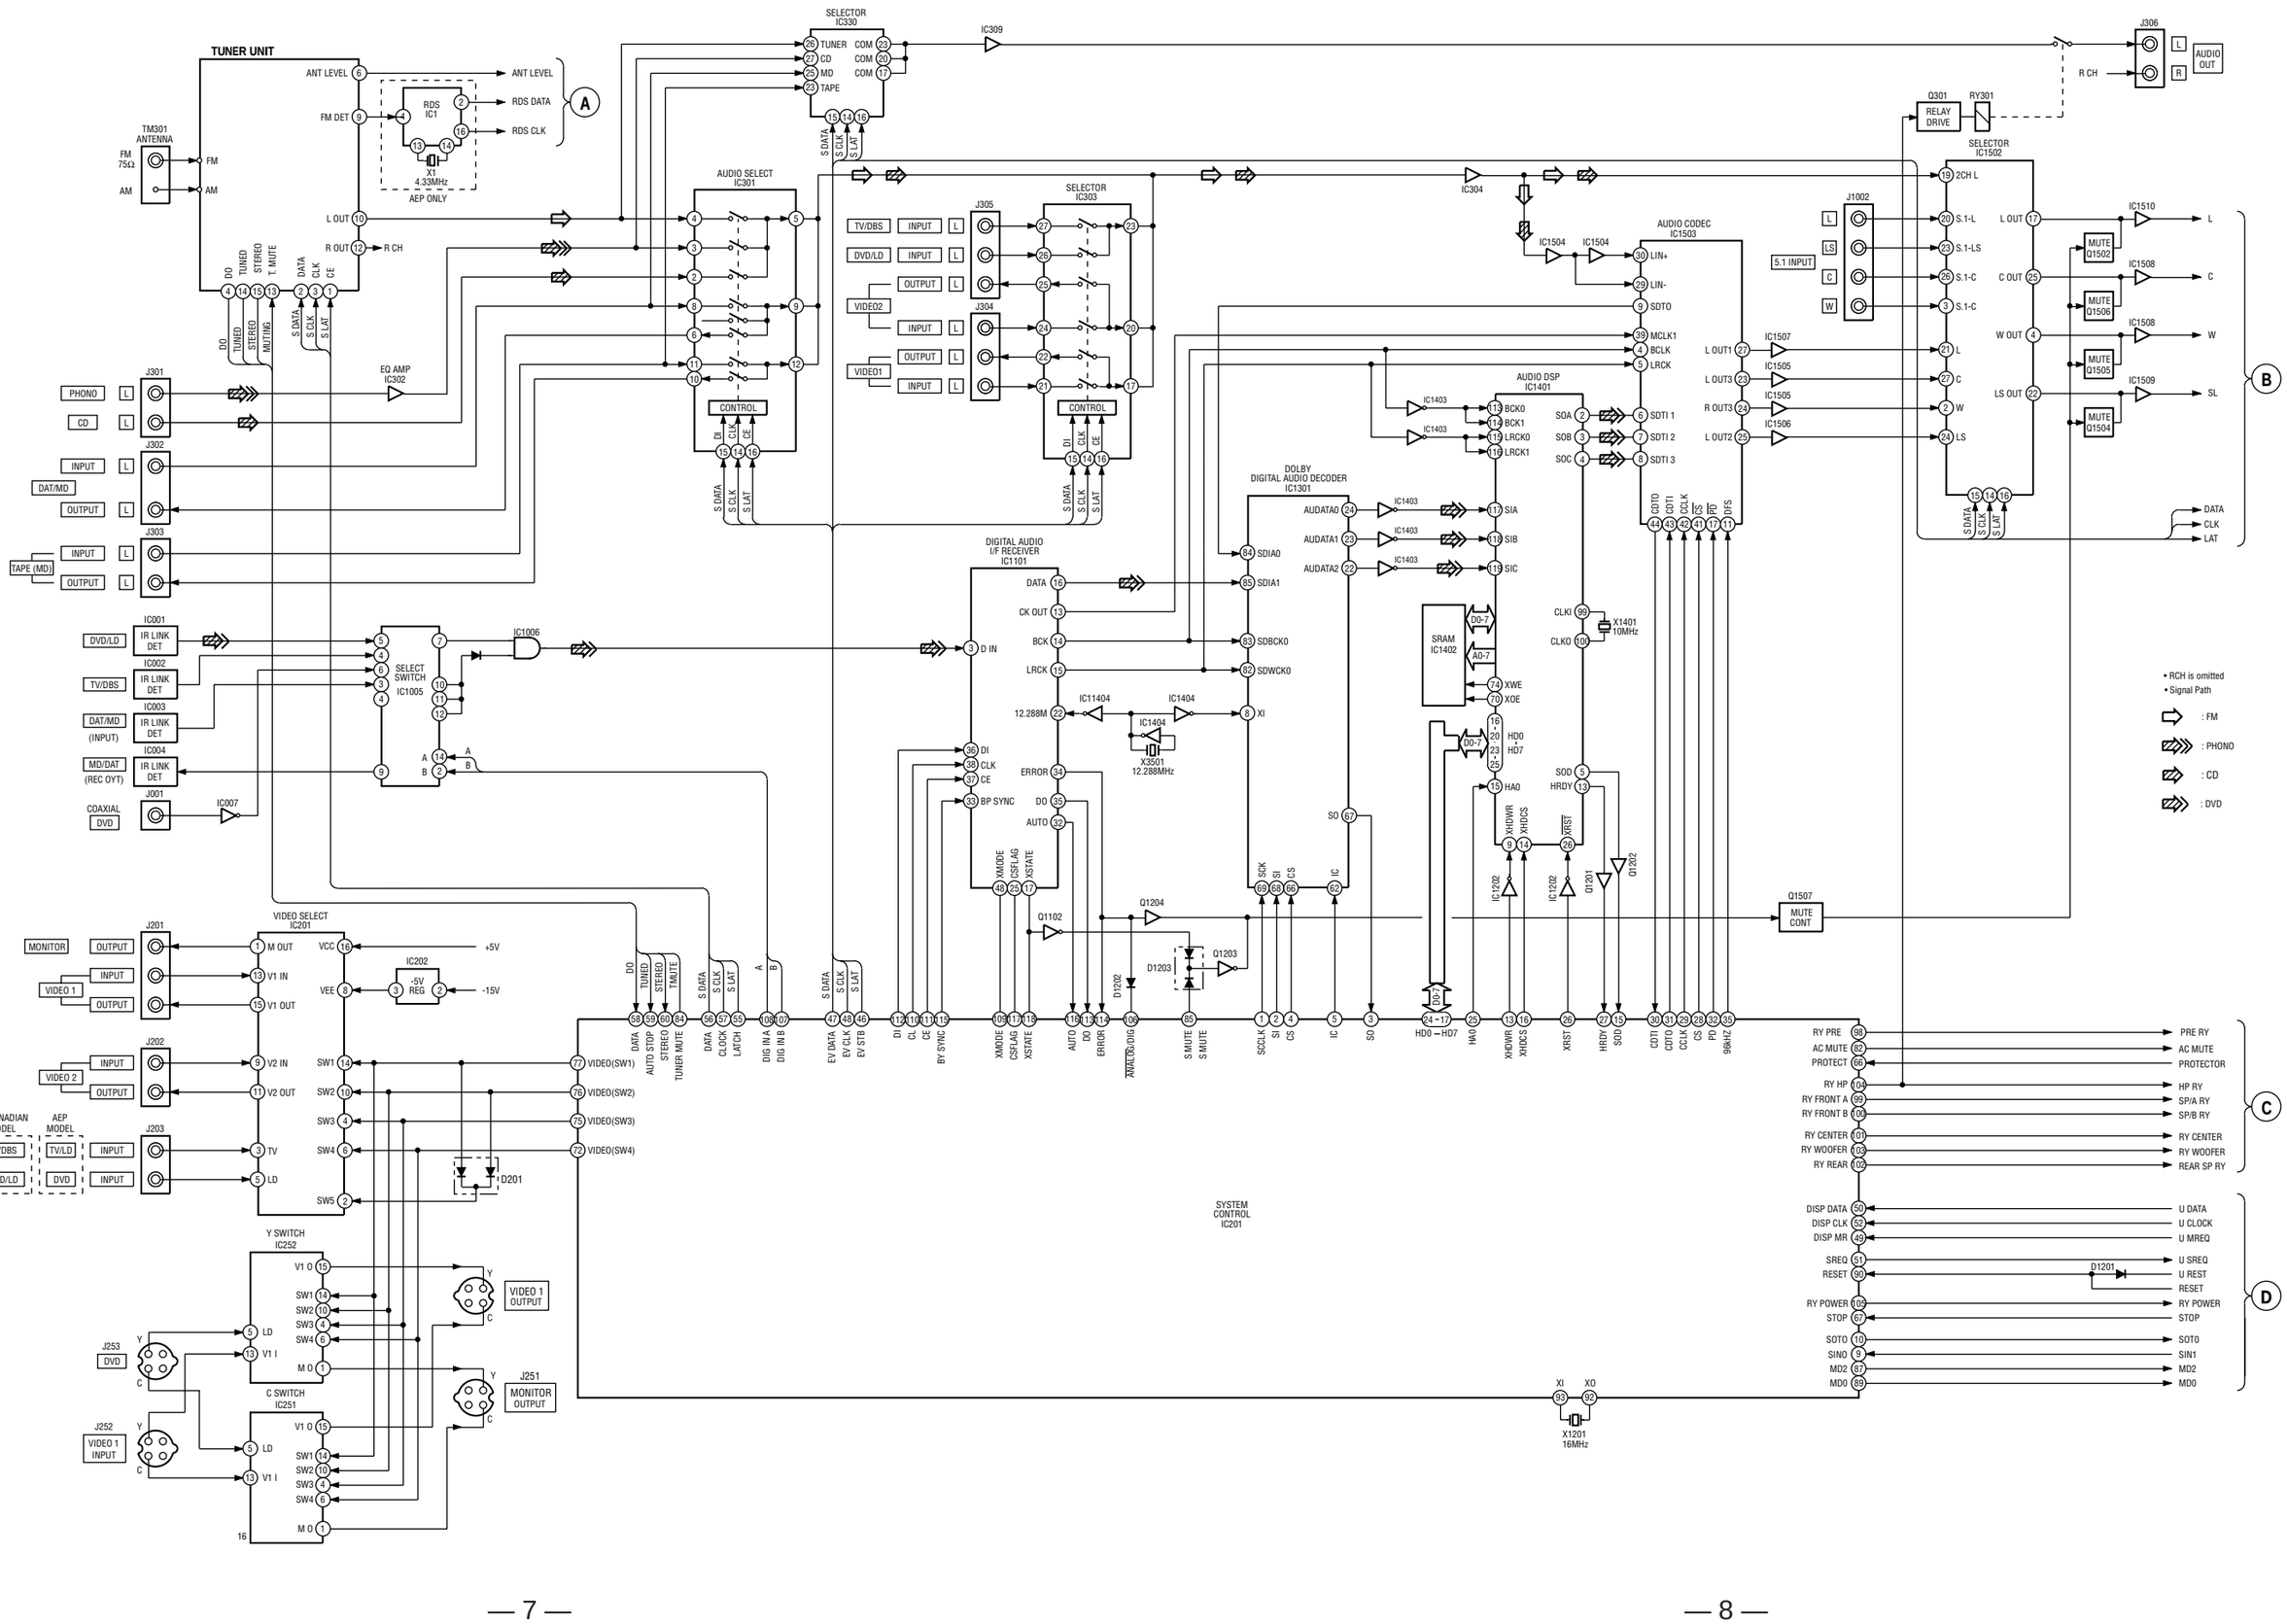

4-2. BLOCK DIAGRAM POWER SECTION

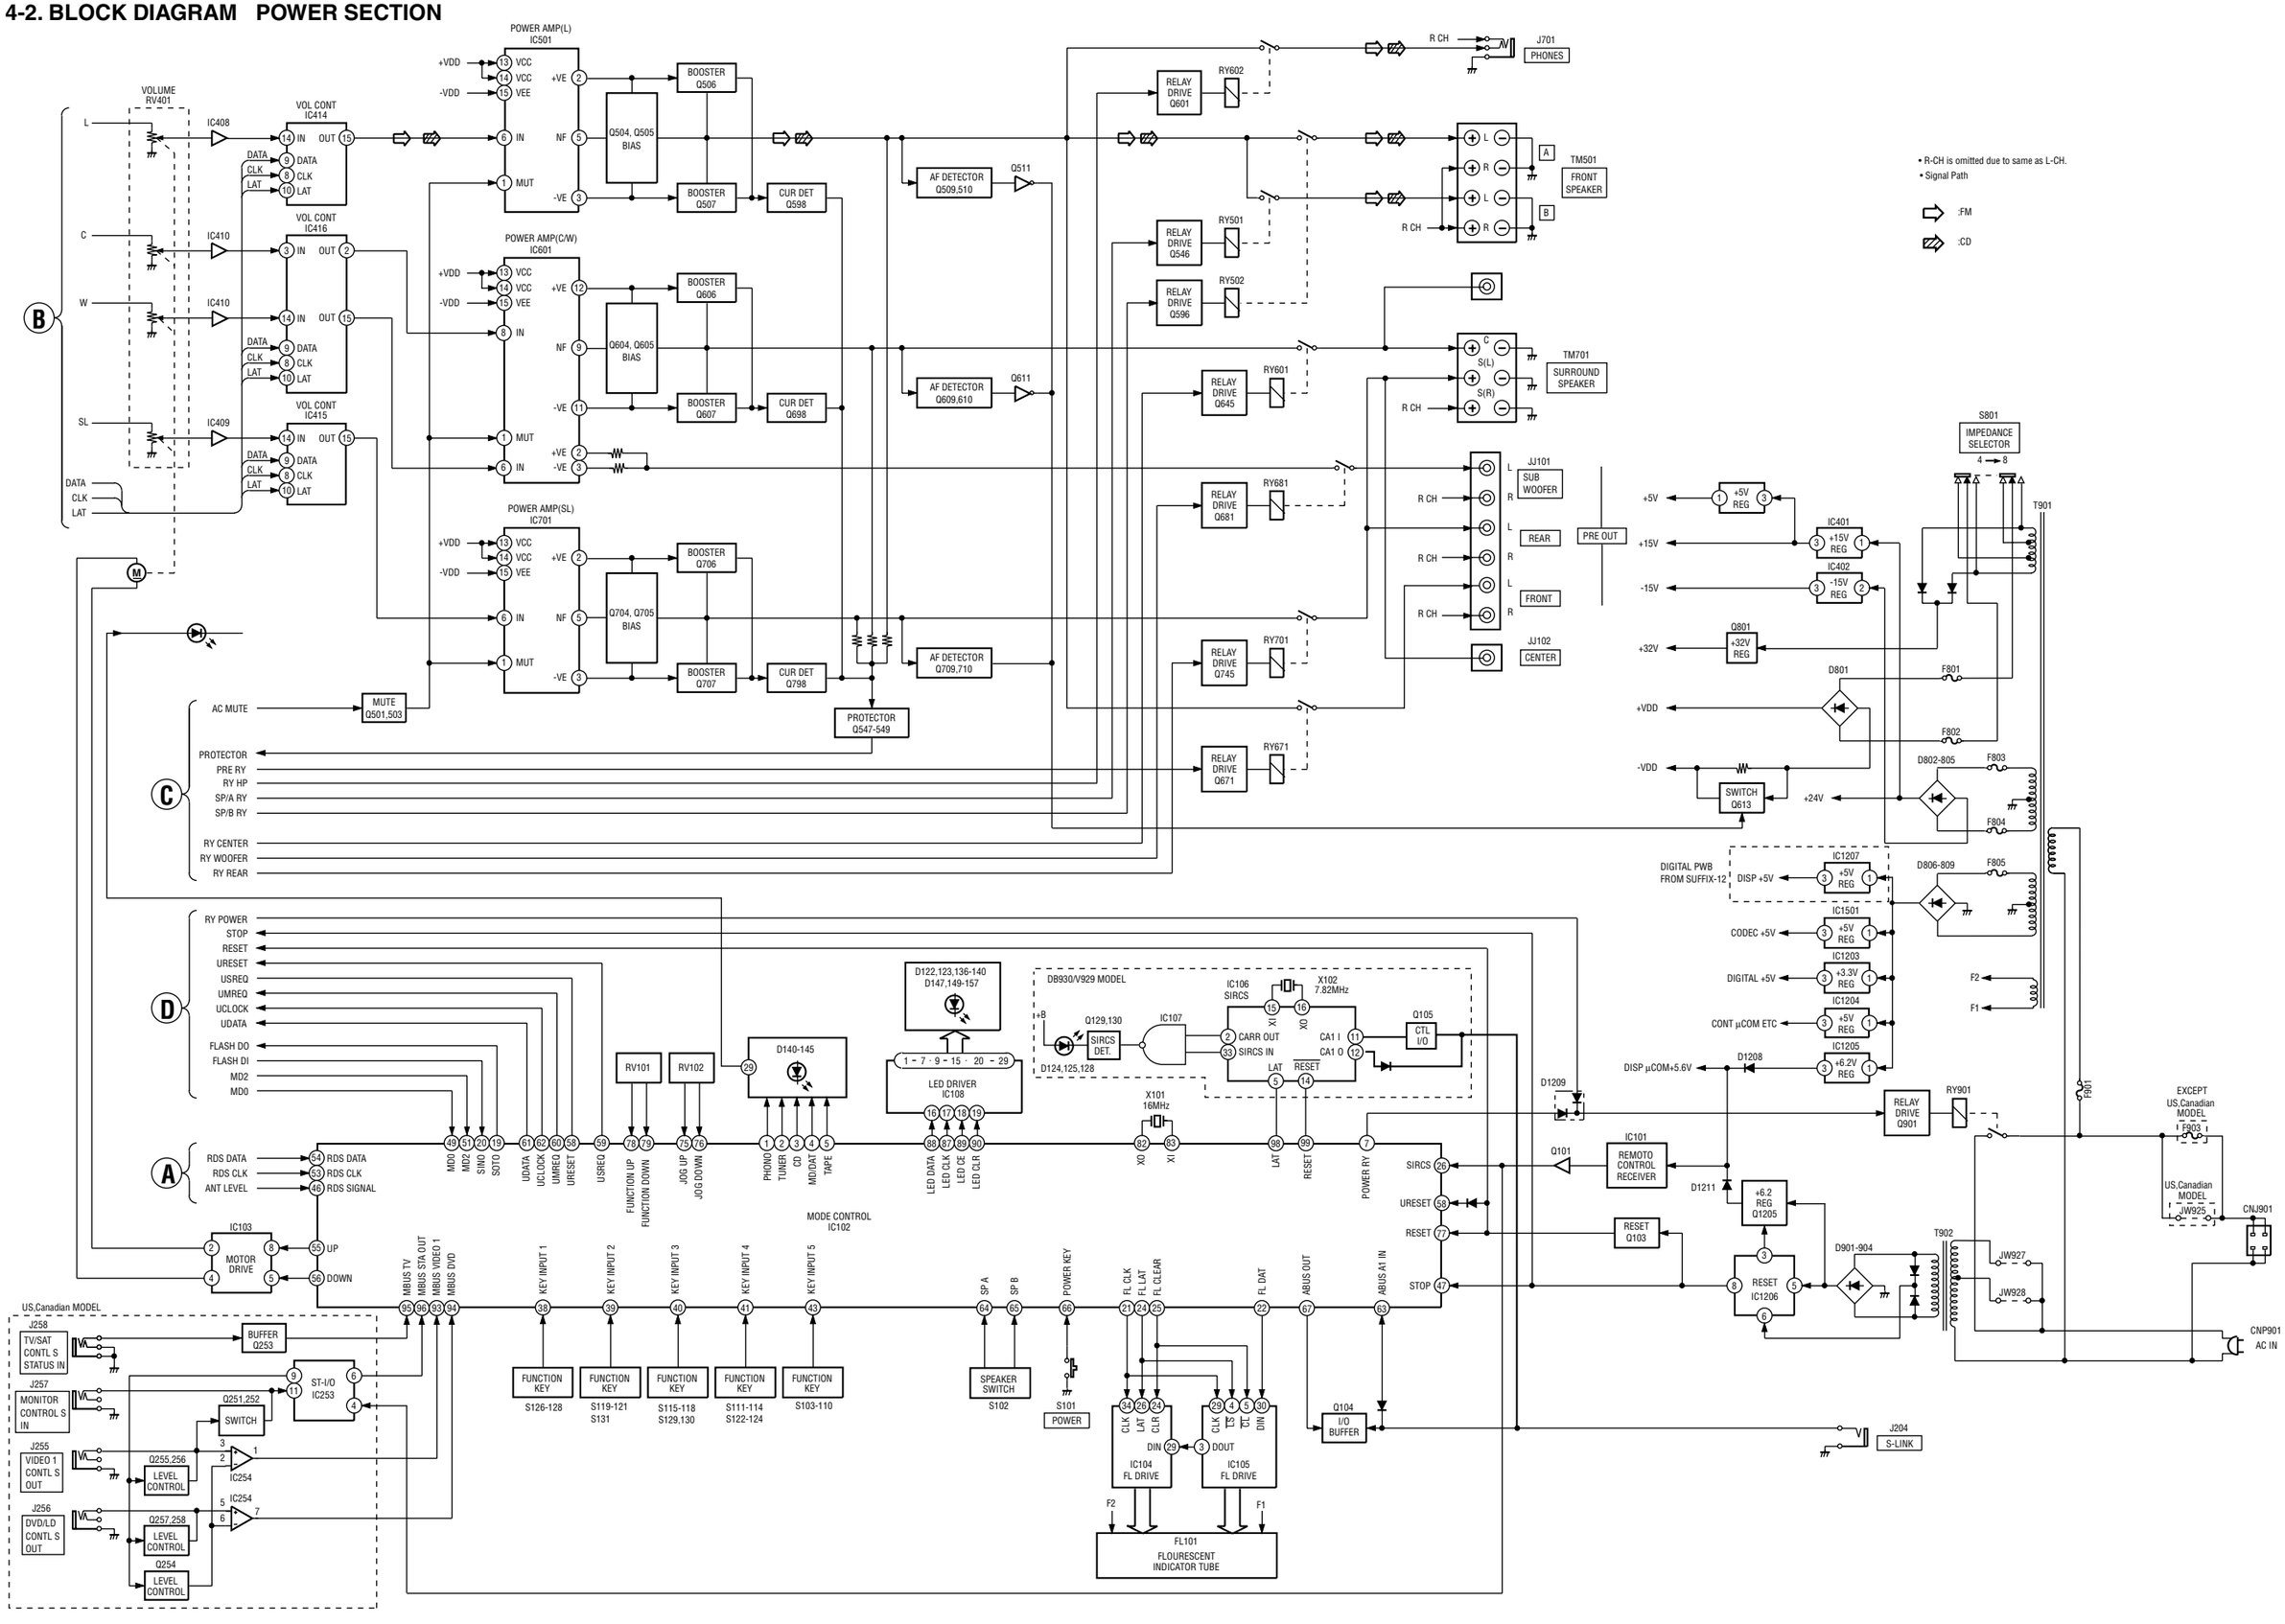

4-3. CIRCUIT BOARD LOCATION

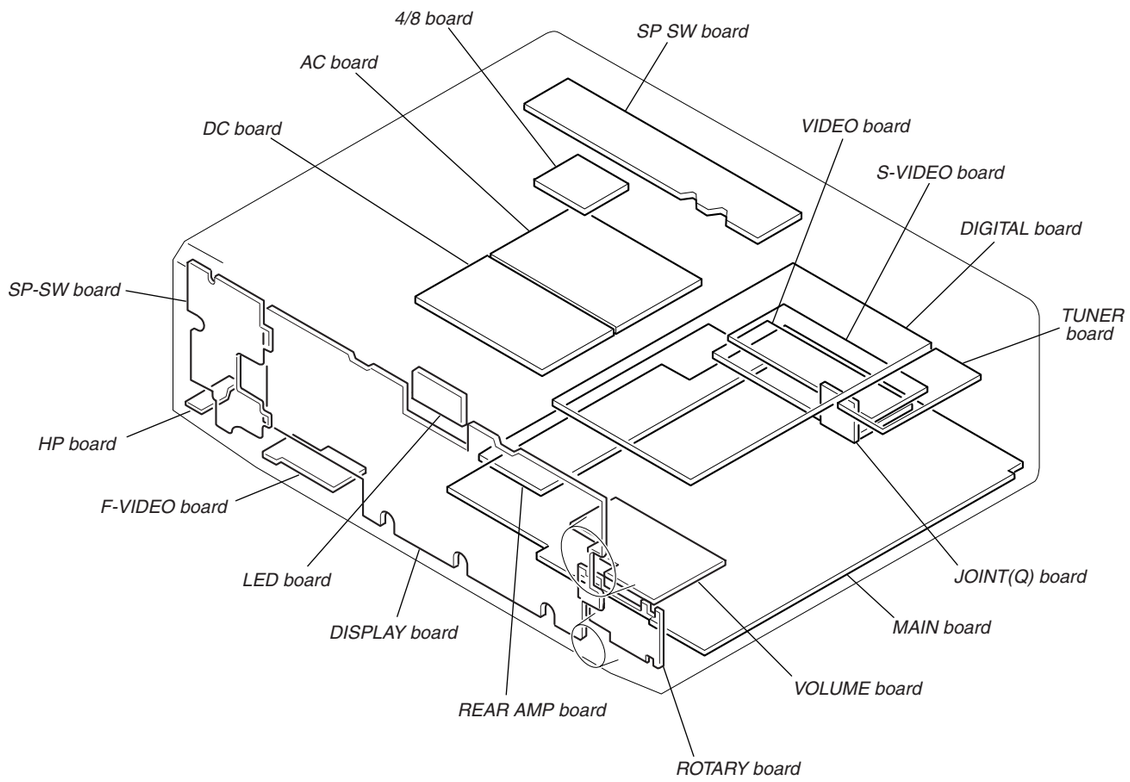

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this necessary note is printed in each block.)

For schematic diagrams.
Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- % : indicates tolerance.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	**Note:** Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。	

- B+ : B+ Line.
- B− : B– Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  No mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
  : FM
  : CD
  : DIGITAL
  : PHONO
- Abbreviation
  CND :Canadian model
  AUS :Australian model
  MY :Malaysia model
  SP :Singapore model
  CH :Chinese model

For printed wiring boards.
Note:

- : parts extracted from the component side.
- ○ : Through hole.
- : Pattern from the side which enables seeing.

• Waveform
DIGITAL Board

① IC1201 ㊽ (XO)



4MHz

② IC1401 ㉚ (CLKO)



10MHz

③ IC1404 ②⑤

12.288MHz

DISPLAY Board

④ IC102 ㉜ (XO)

16.0MHz

⑤ IC106 ⑯ (X OUT)



7.28MHz

TUNER Board

⑥ IC1 ⑬ (X 1)

4.33MHz

4-4. SCHEMATIC DIAGRAM DIGITAL SECTION(1/3)

• See page 19 for Printed Wirig Board. • See page 12 for Waveforms. • See page 49 for IC Pin Functions. • See page 58 for IC Block Diagrams.

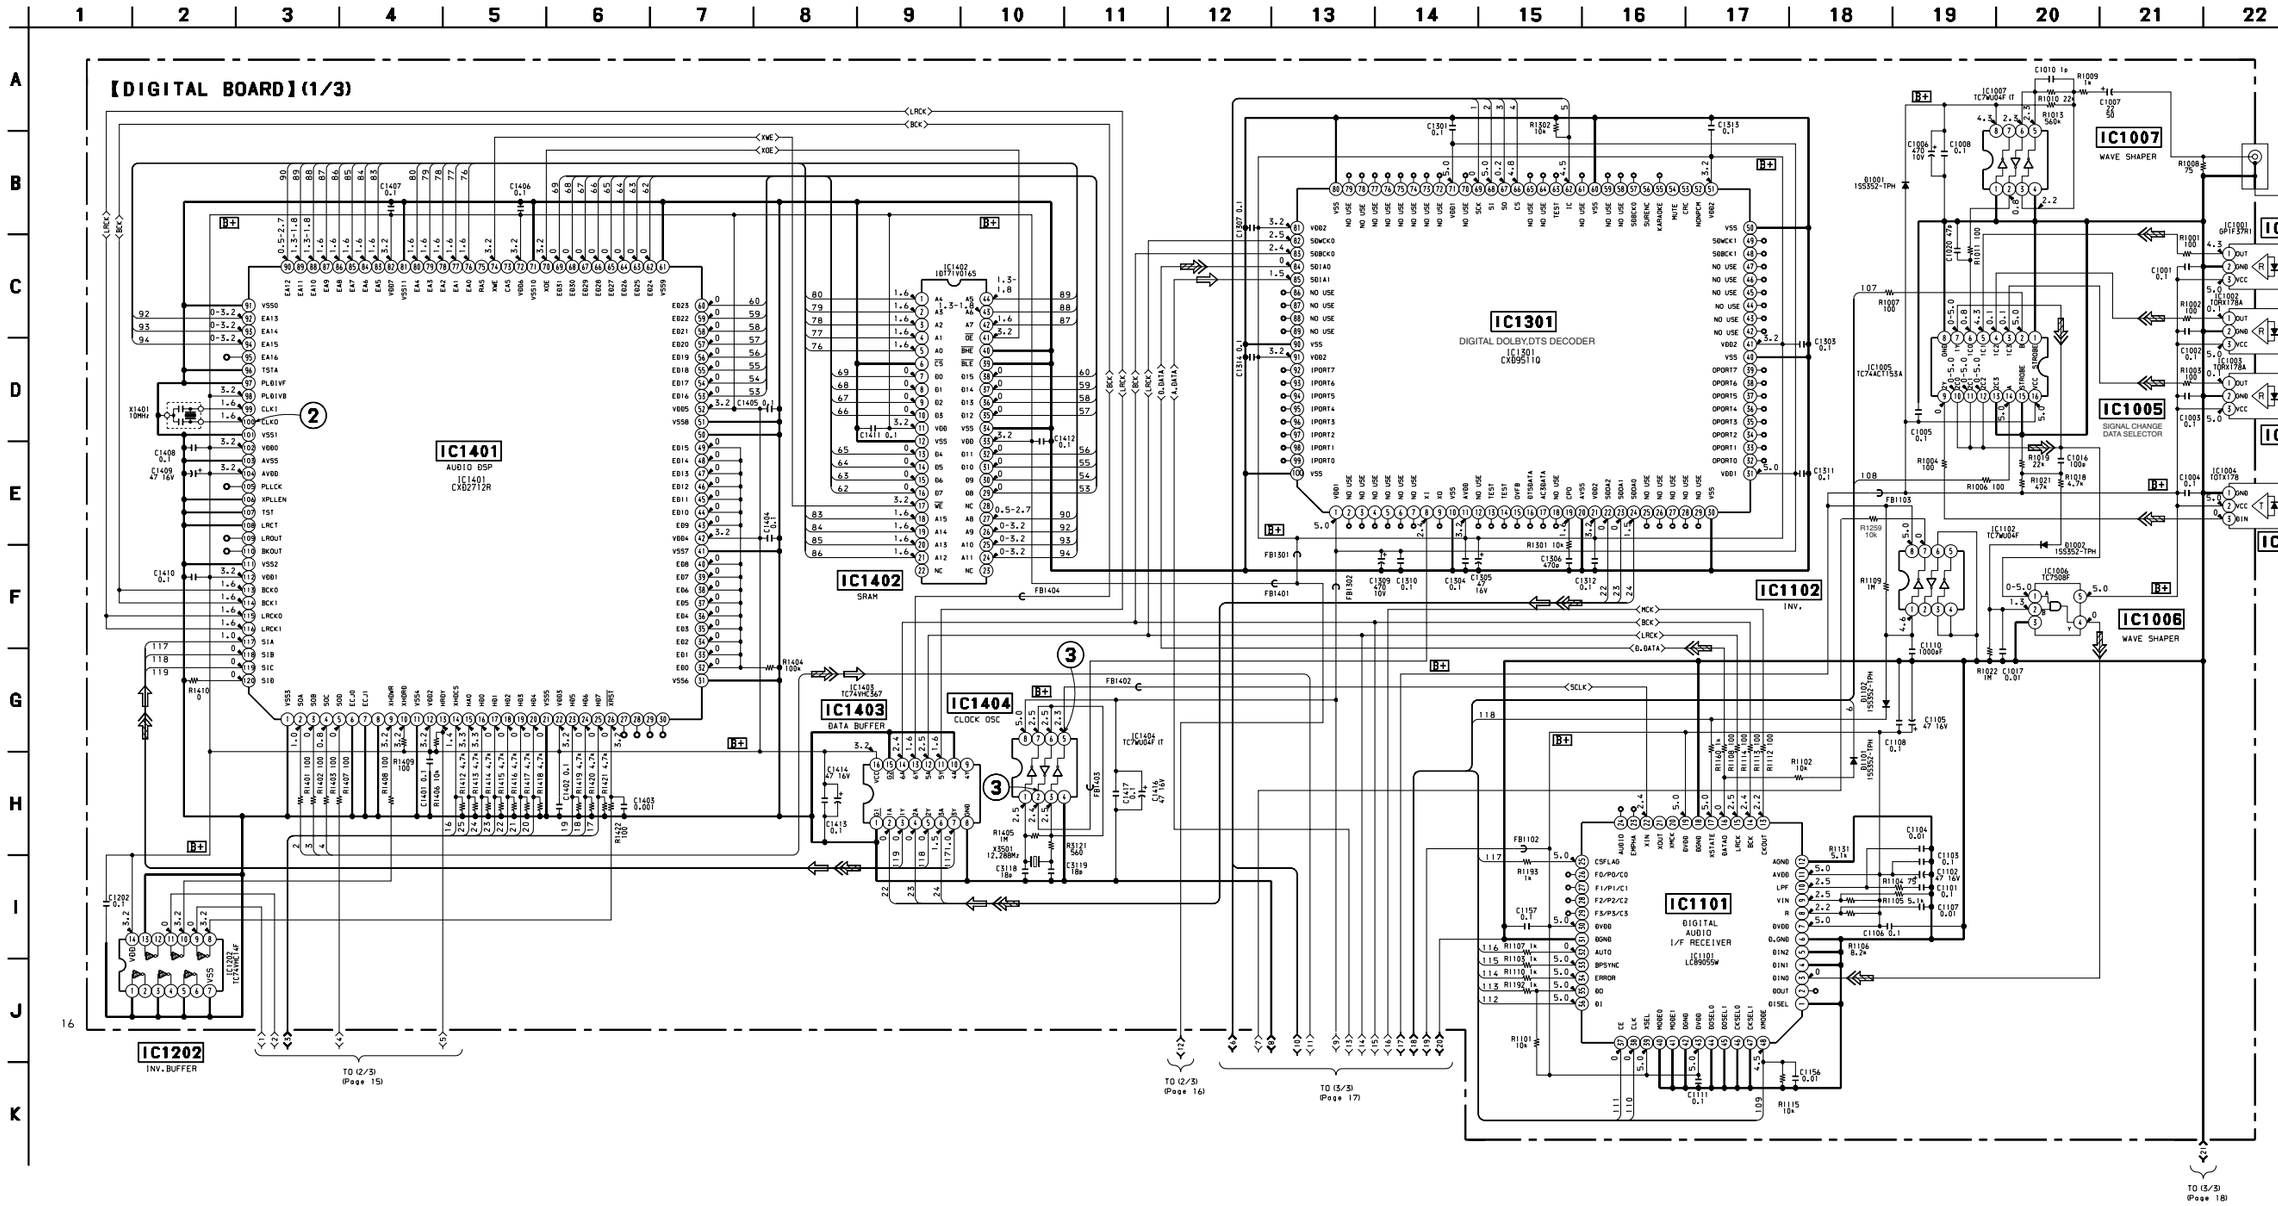

4-5. SCHEMATIC DIAGRAM DIGITAL SECTION(2/3)

• See page 19 for printed wirig board. • See page 12 for Waveforms. • See page 51 for IC Pin Functions. • See page 58 for IC Block Diagrams.

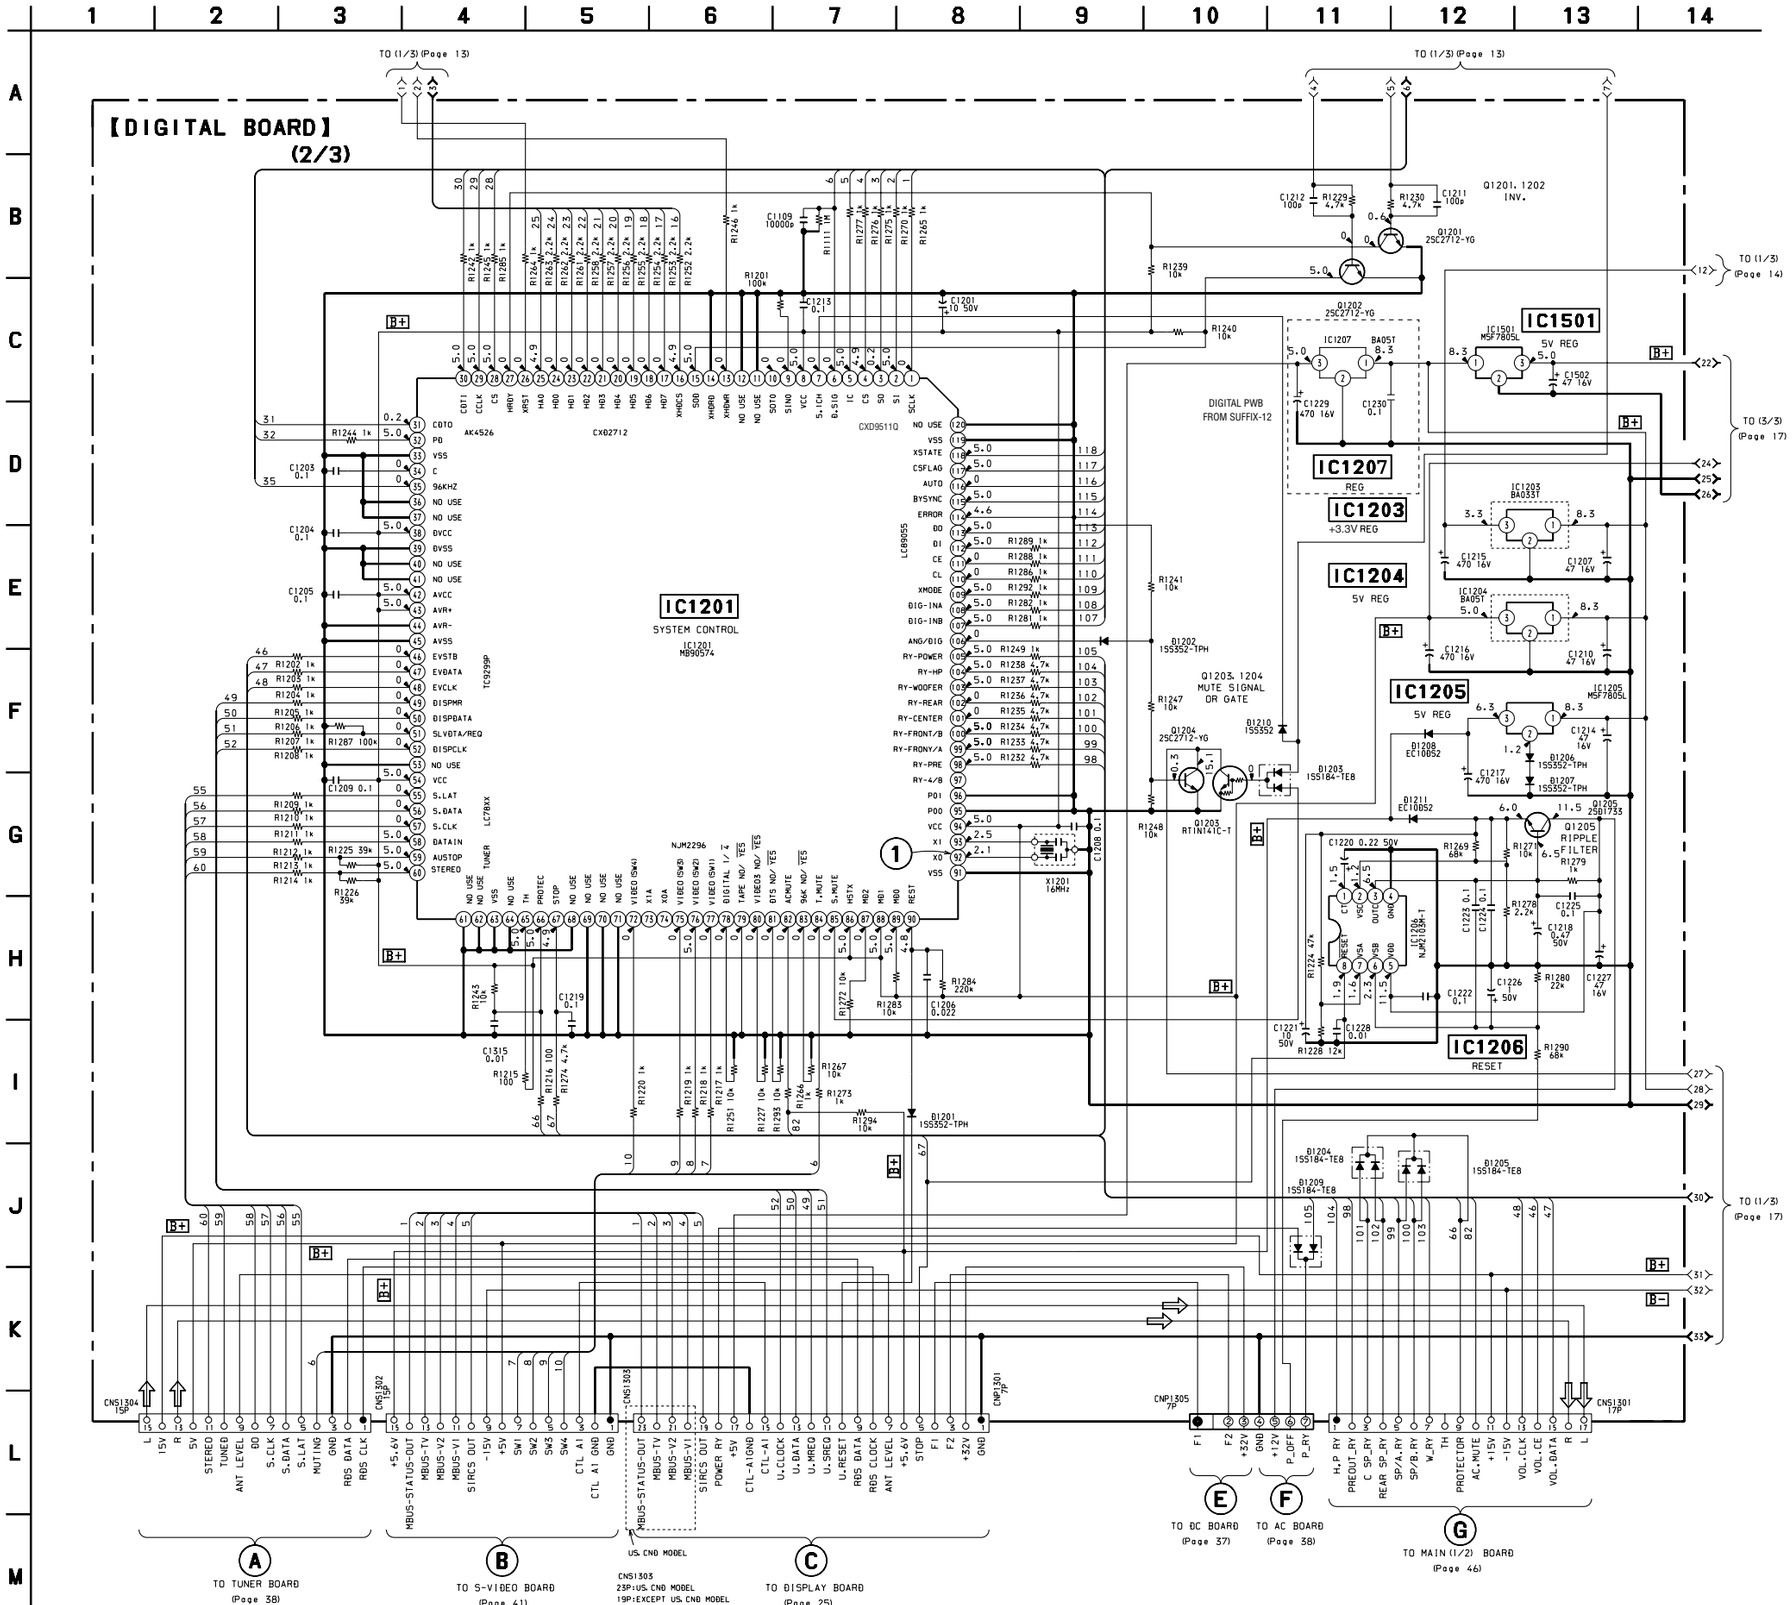

4-6. SCHEMATIC DIAGRAM DIGITAL SECTION(3/3)

• See page 19 for printed wirig board. • See page 54 for IC Pin Functions. • See page 58 for IC Block Diagrams.

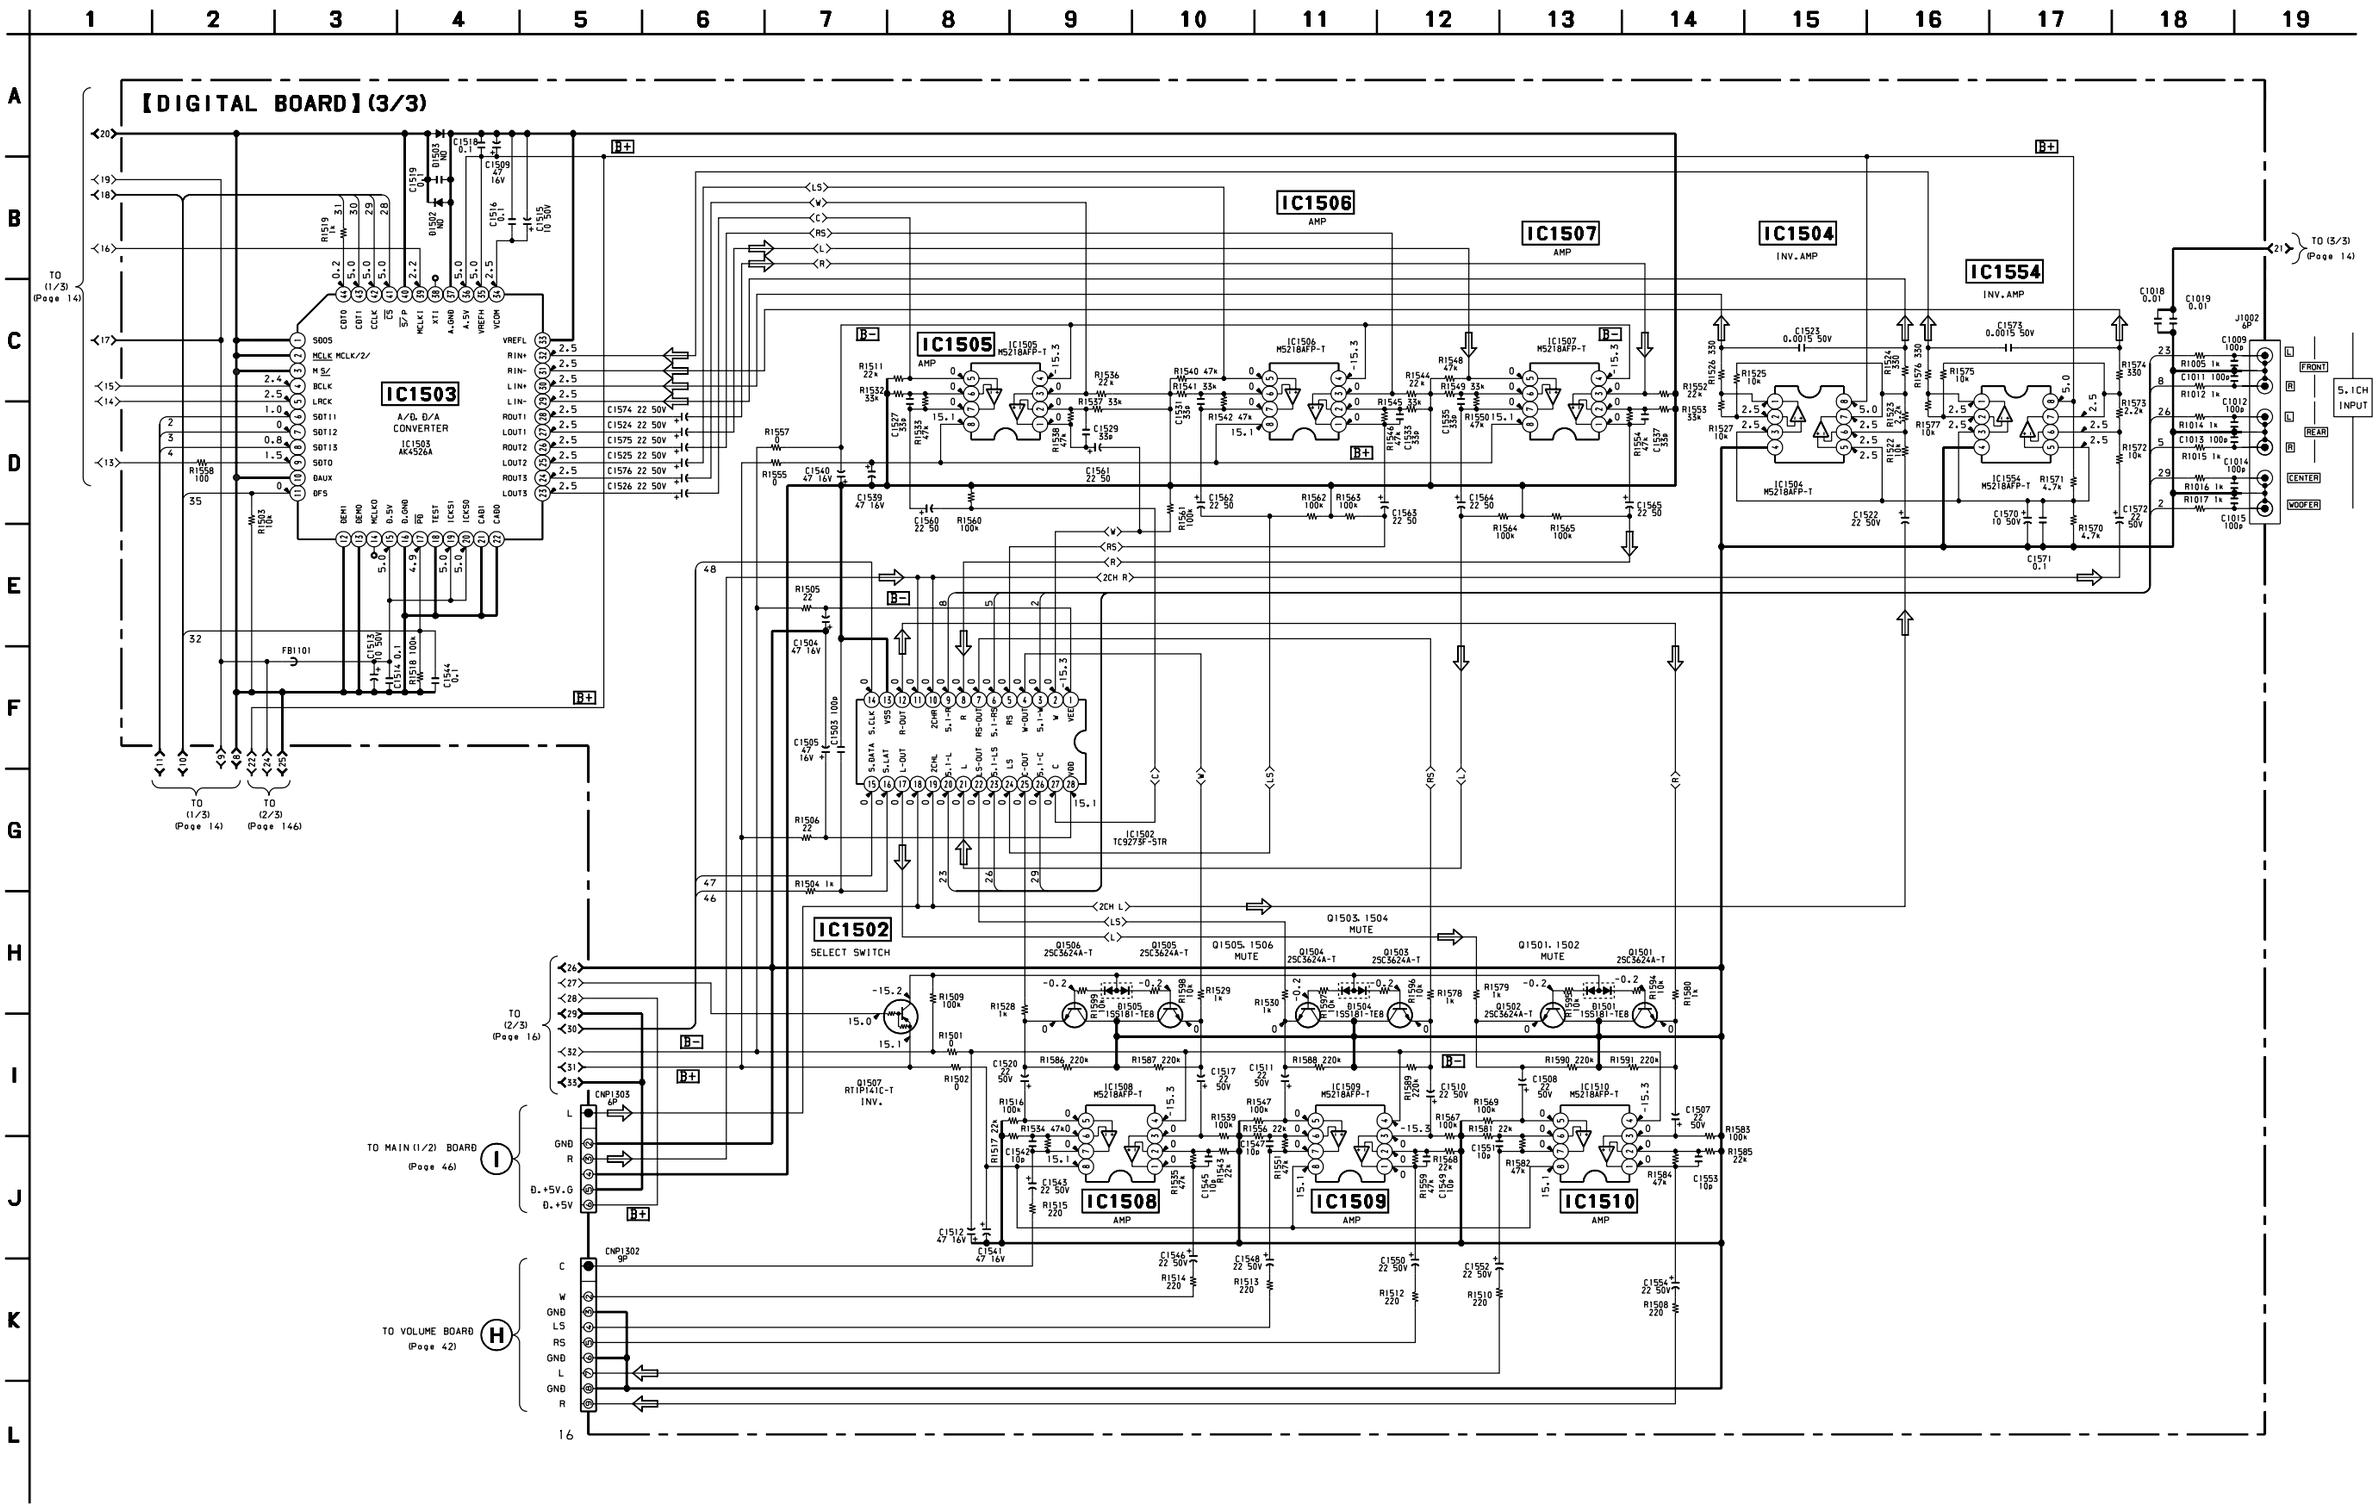

4-7. PRINTED WIRING BOARD DIGITAL SECTION(1/2)

• See page 11 for circuit board location.

【DIGITAL BOARD】(SIDE A)

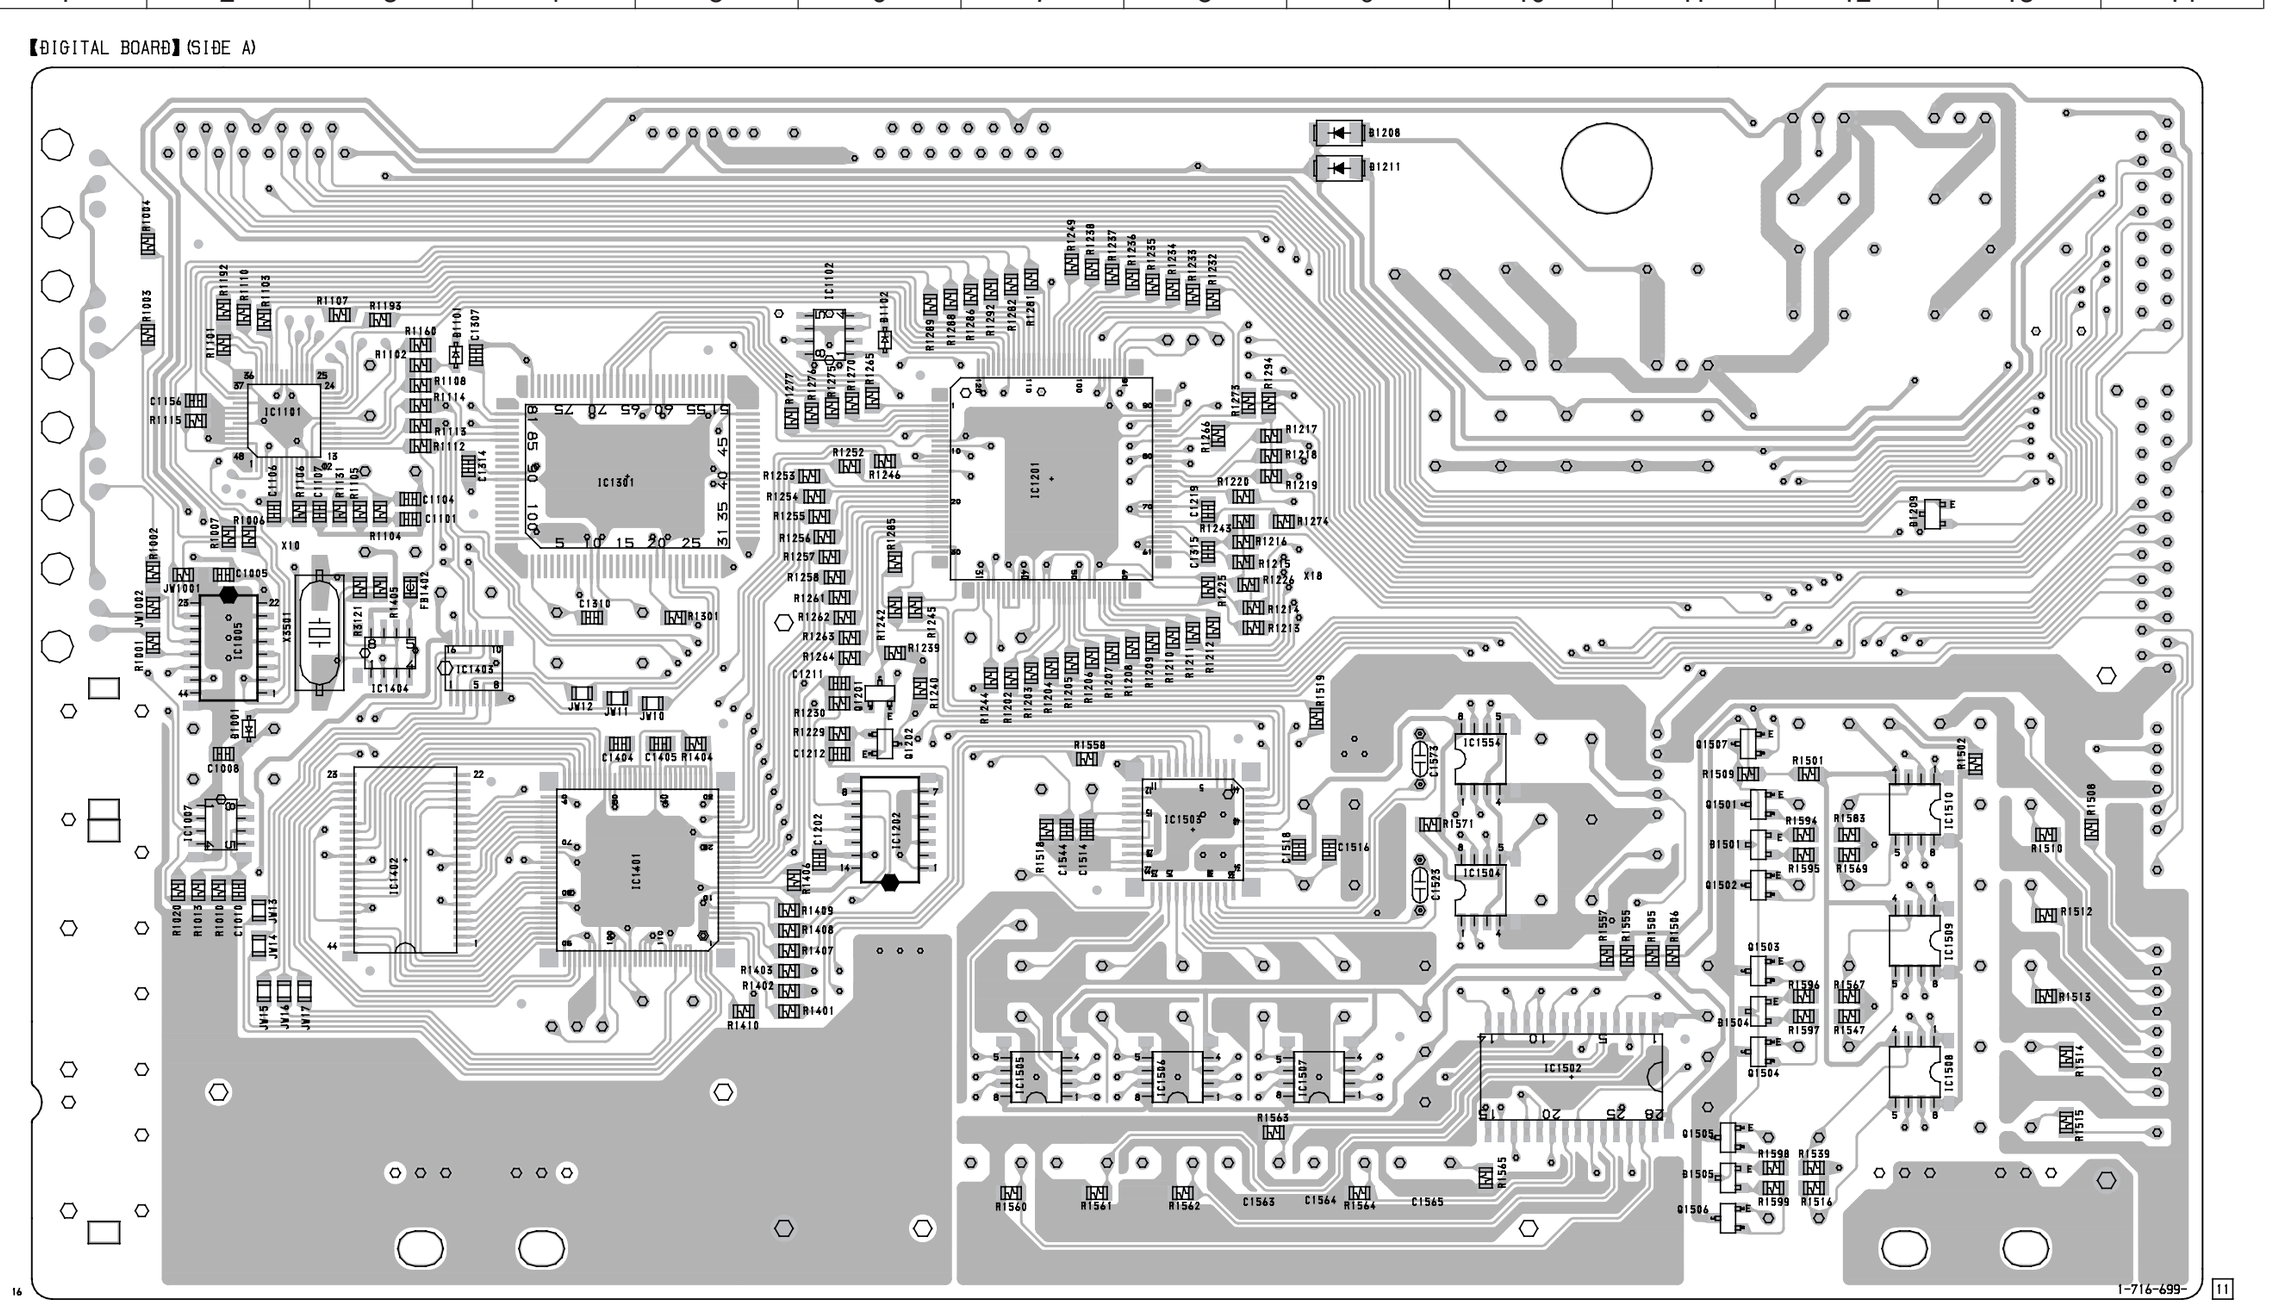

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1001	E-2	IC1007	E-2	IC1503	F-8	Q1202	E-6
D1101	C-3	IC1101	C-2	IC1504	F-10	Q1501	E-11
D1102	C-6	IC1102	C-6	IC1505	G-7	Q1502	F-11
D1208	A-9	IC1201	C-7	IC1506	G-8	Q1503	F-11
D1209	D-12	IC1202	F-6	IC1507	G-9	Q1504	G-11
D1211	A-9	IC1301	C-4	IC1508	G-12	Q1505	G-11
D1501	F-11	IC1401	F-5	IC1509	F-12	Q1506	H-11
D1504	G-11	IC1402	F-3	IC1510	E-12	Q1507	E-11
D1505	H-11	IC1403	E-3	IC1554	E-10		
		IC1404	D-3				
IC1005	D-2	IC1502	G-10	Q1201	E-6		

4-8. PRINTED WIRING BOARD DIGITAL SECTION(2/2)

• See page 11 for circuit board location.

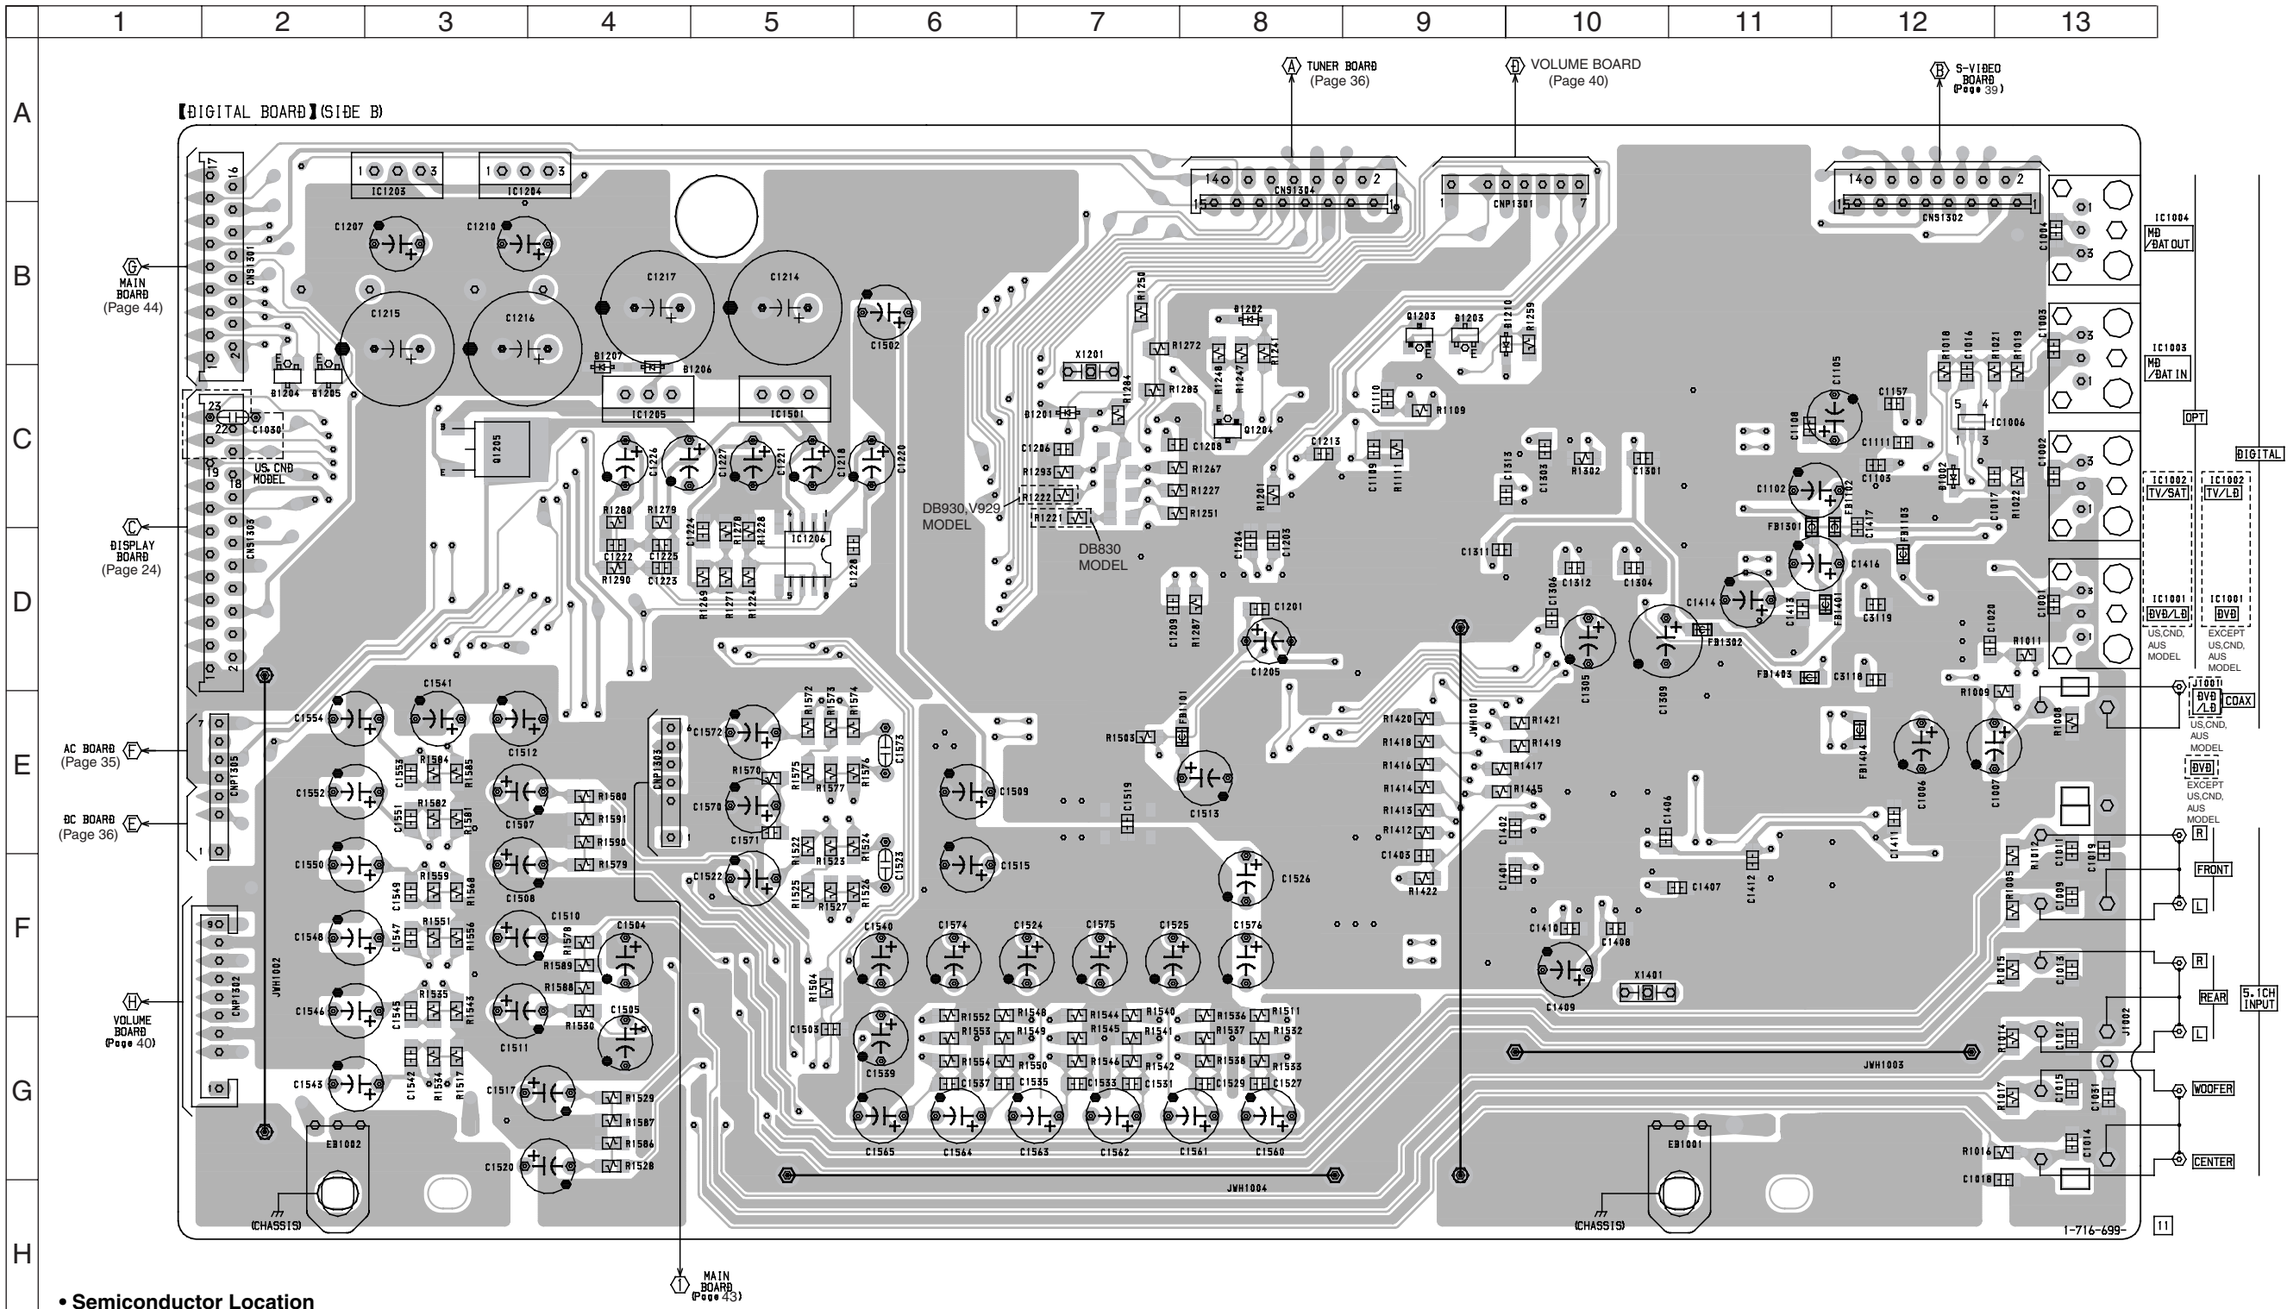

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location
D1002	C-12	IC1003	B-13
D1201	C-7	IC1004	B-13
D1202	B-8	IC1006	C-12
D1203	B-9	IC1203	A-3
D1204	C-2	IC1204	A-3
D1205	C-2	IC1205	C-4
D1206	C-4	IC1206	D-5
D1207	C-4	IC1501	C-5
D1210	B-10		
		Q1203	B-9
IC1001	D-13	Q1204	C-8
IC1002	C-13	Q1205	C-3

DIGITAL PWB FROM SUFFIX-12

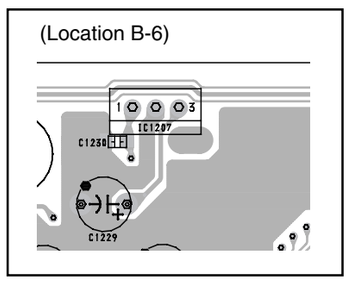

4-9. PRINTED WIRING BOARD DISPLAY SECTION • See page 11 for circuit board location.

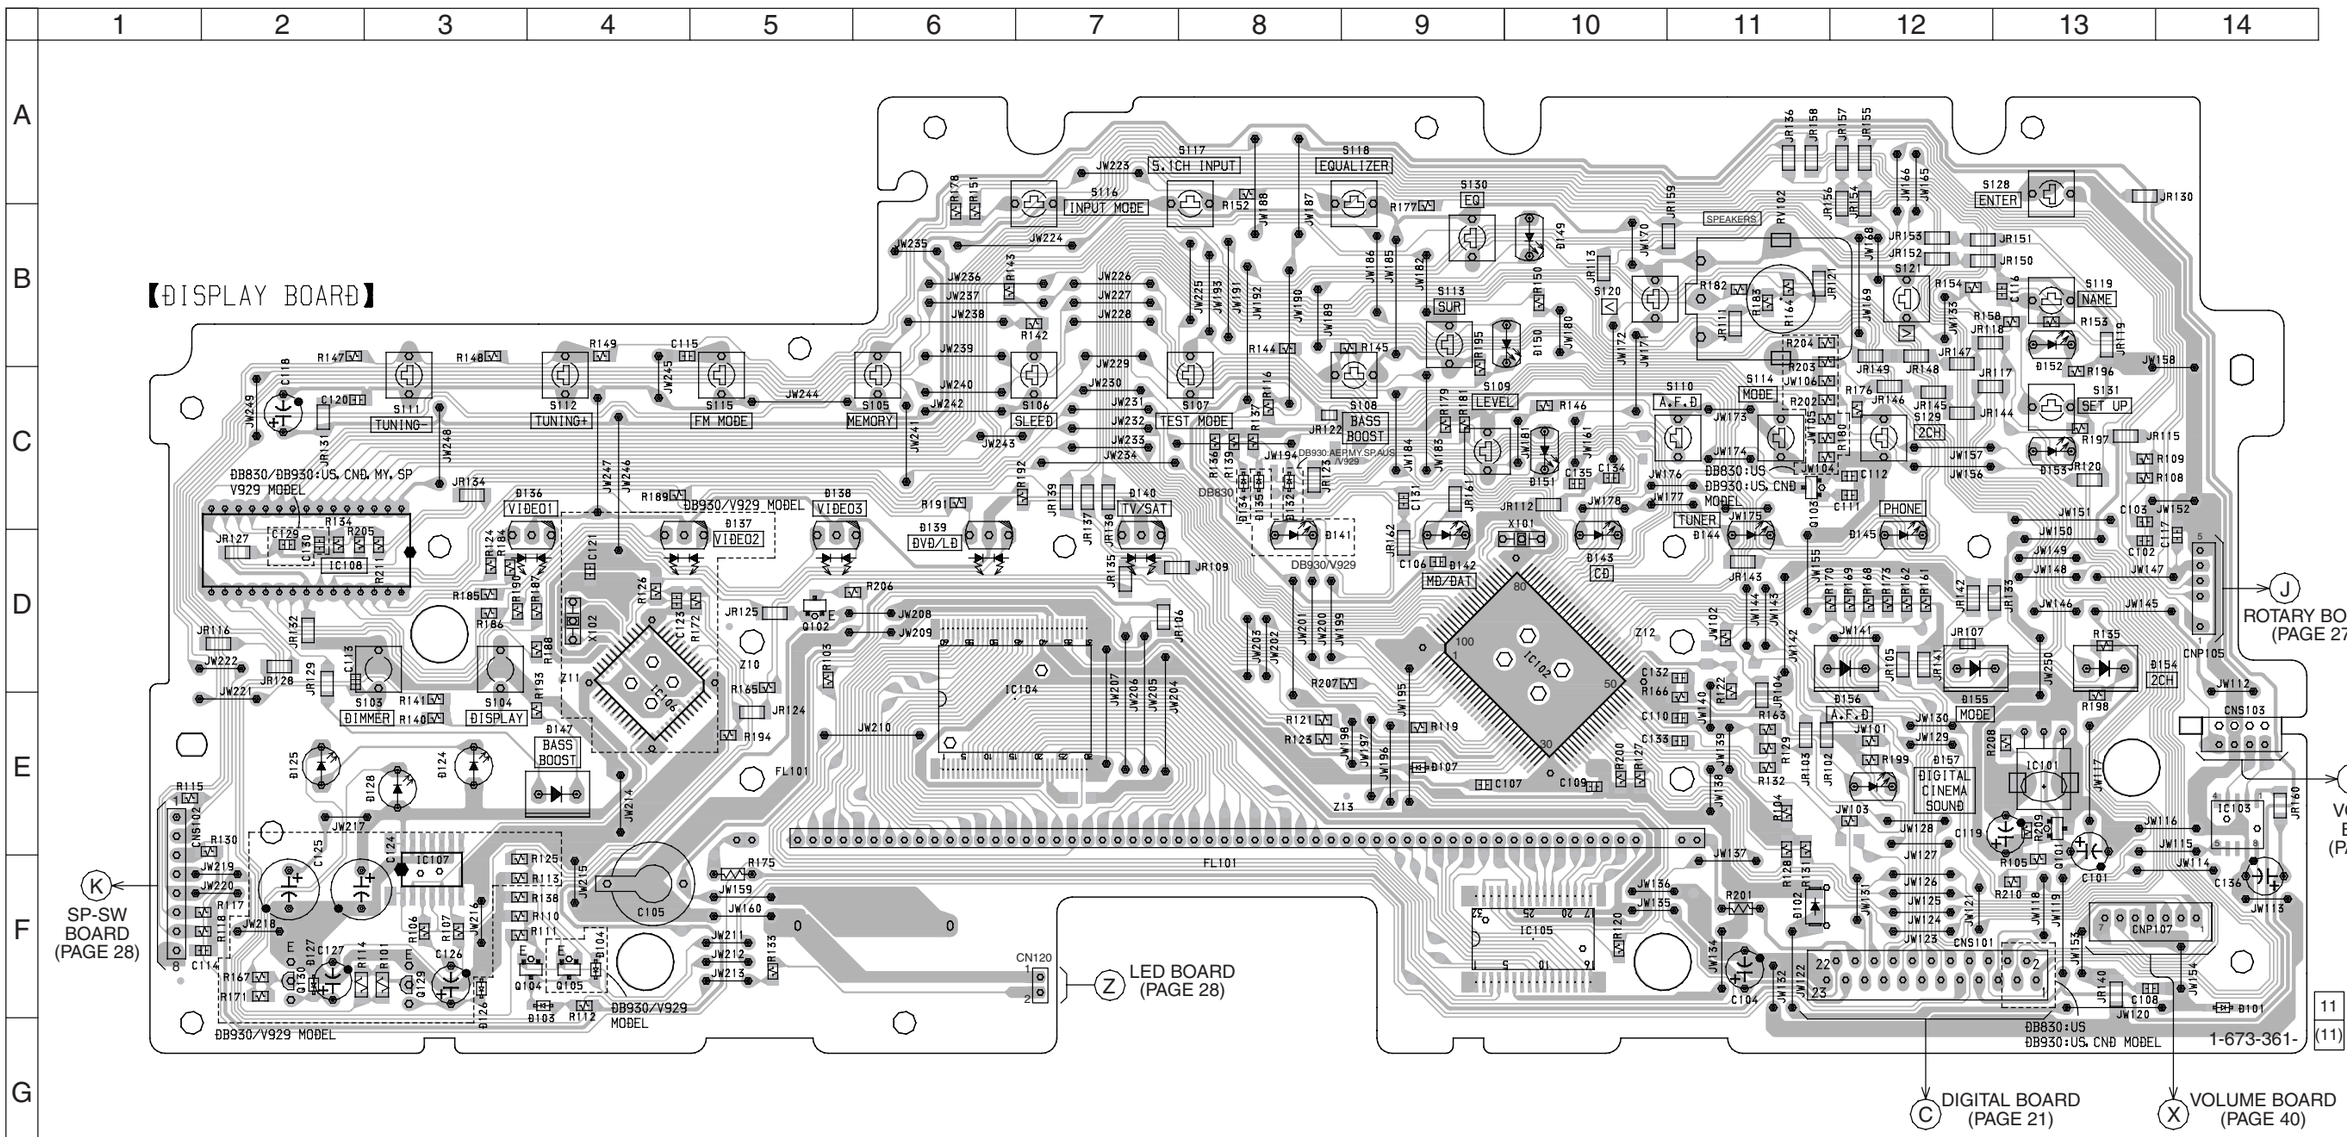

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D101	F-14	D132	C-8	D144	D-11	D157	E-12	Q101	E-13
D102	F-11	D134	C-8	D145	D-12			Q102	D-5
D103	F-4	D135	C-8	D147	E-4	IC101	E-13	Q103	C-11
D104	F-4	D136	D-4	D149	B-10	IC102	D-10	Q104	F-4
D107	E-9	D137	D-4	D150	B-10	IC103	E-14	Q105	F-4
D124	E-3	D138	D-5	D151	C-10	IC104	E-7	Q129	F-3
D125	E-2	D139	D-6	D152	B-13	IC105	F-10	Q130	F-2
D126	F-4	D140	D-7	D153	C-13	IC106	E-4		
D127	F-2	D141	D-8	D154	D-13	IC107	F-3		
D128	E-3	D142	D-9	D155	D-12	IC108	D-2		
D129	E-2	D143	D-10	D156	D-12				

4-10. SCHEMATIC DIAGRAM DISPLAY SECTION

• See page 12 for Waveforms. • See page 56 for IC Pin Functions. • See page 60 for IC Block Diagrams.

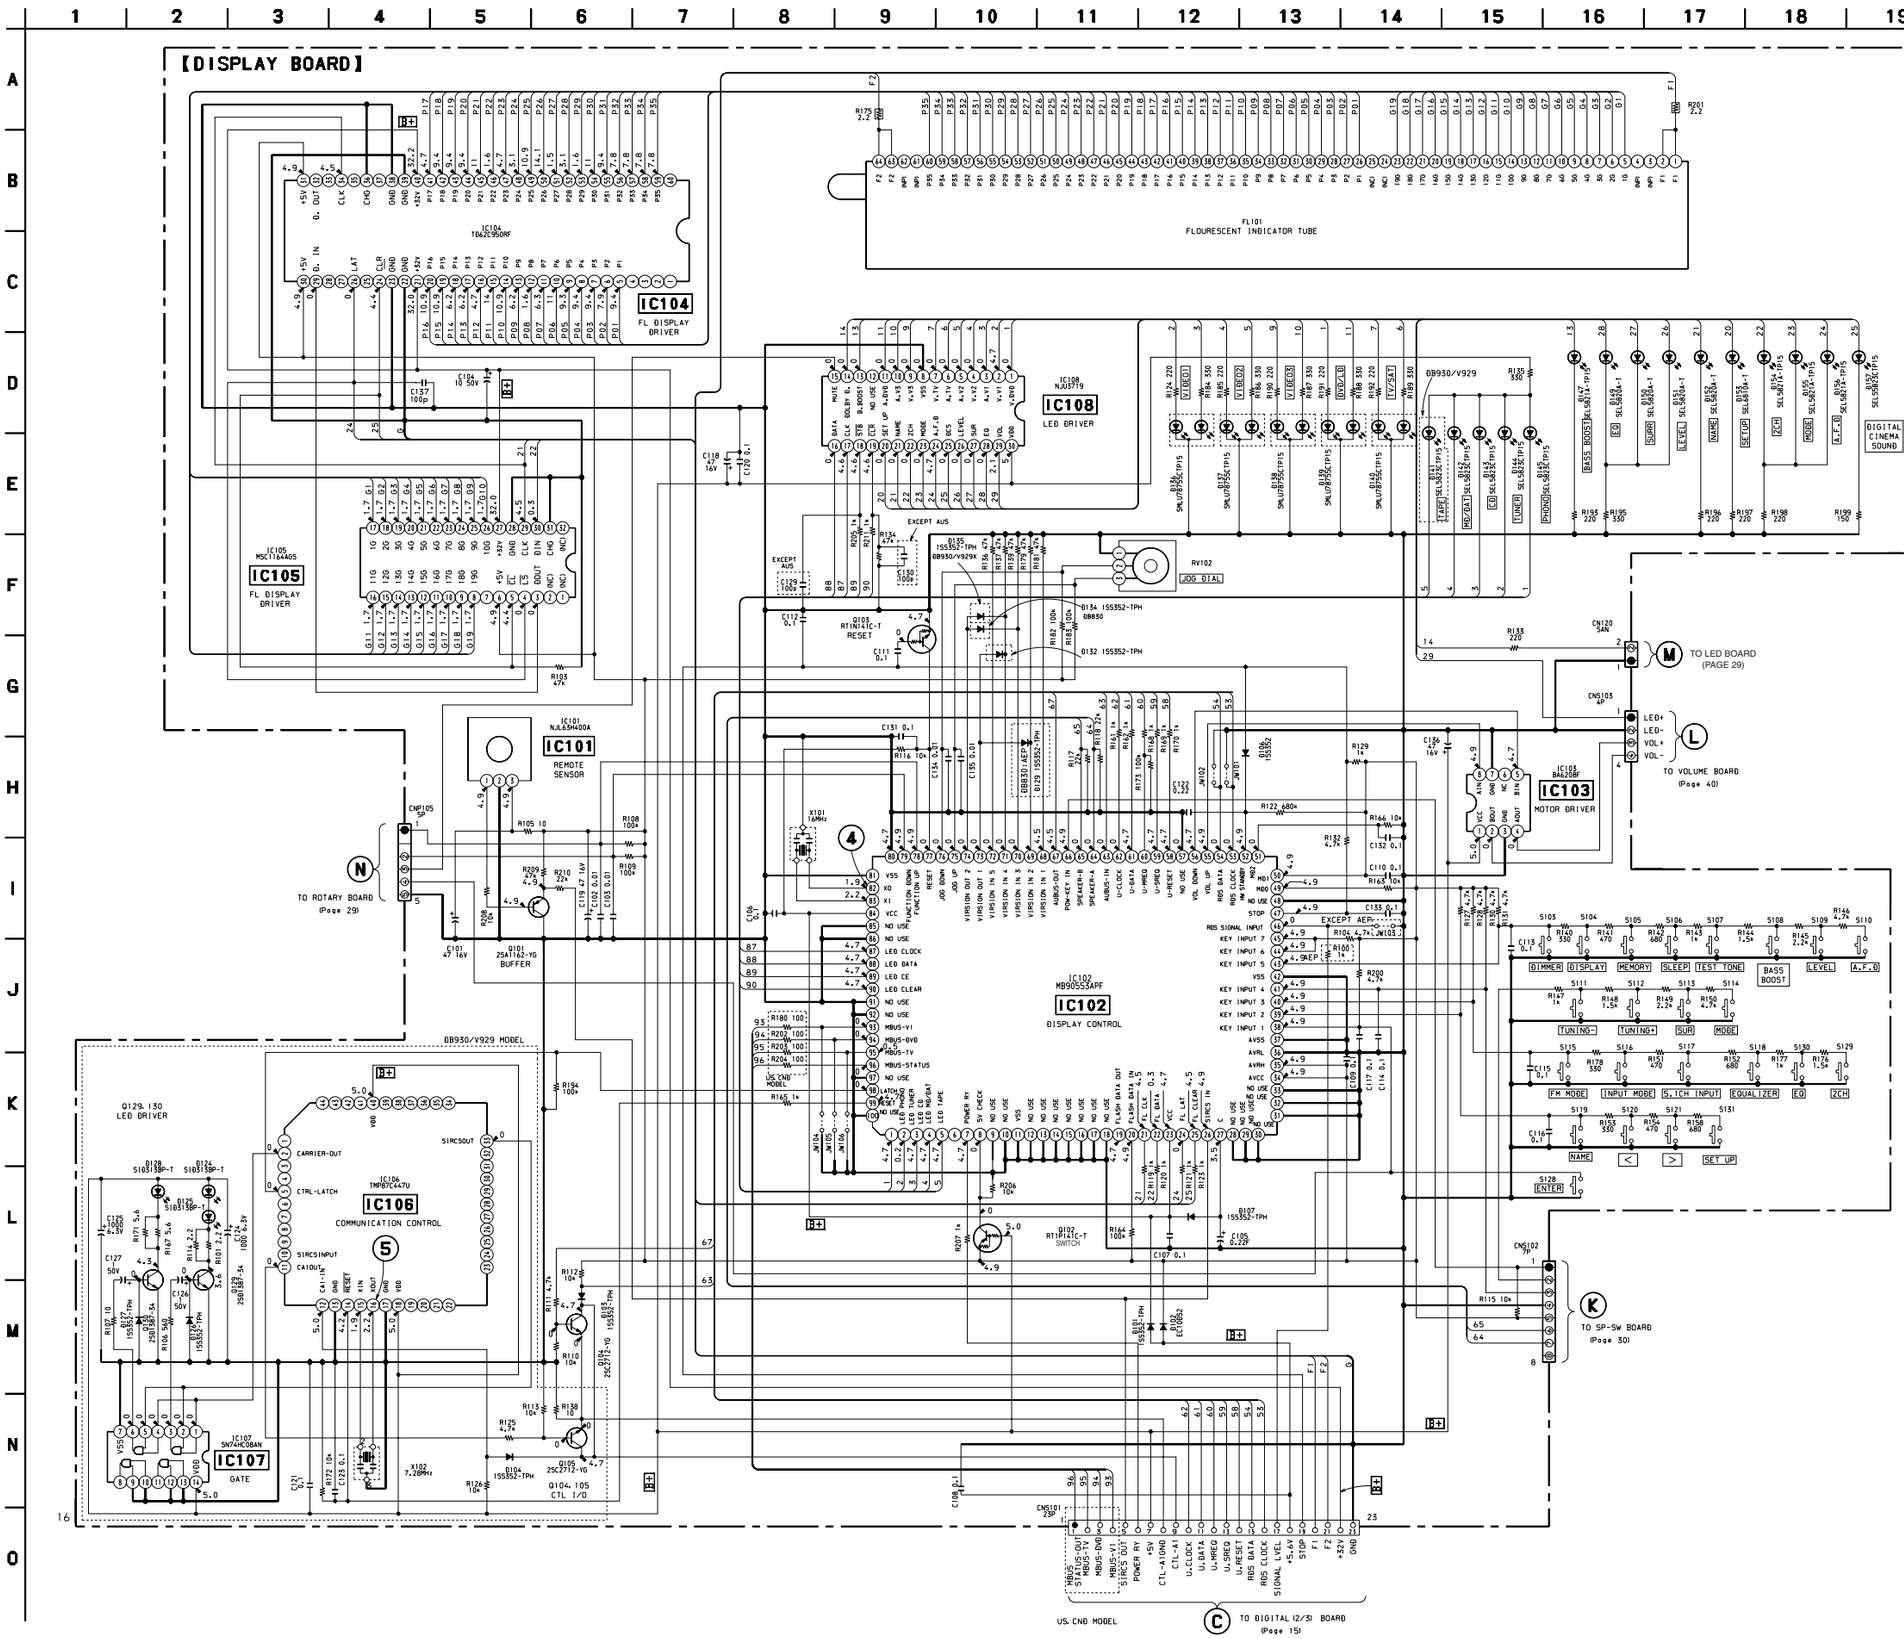

4-11. PRINTED WIRING BOARD SPEAKER SWITCH SECTION

• See page 11 for circuit board location.

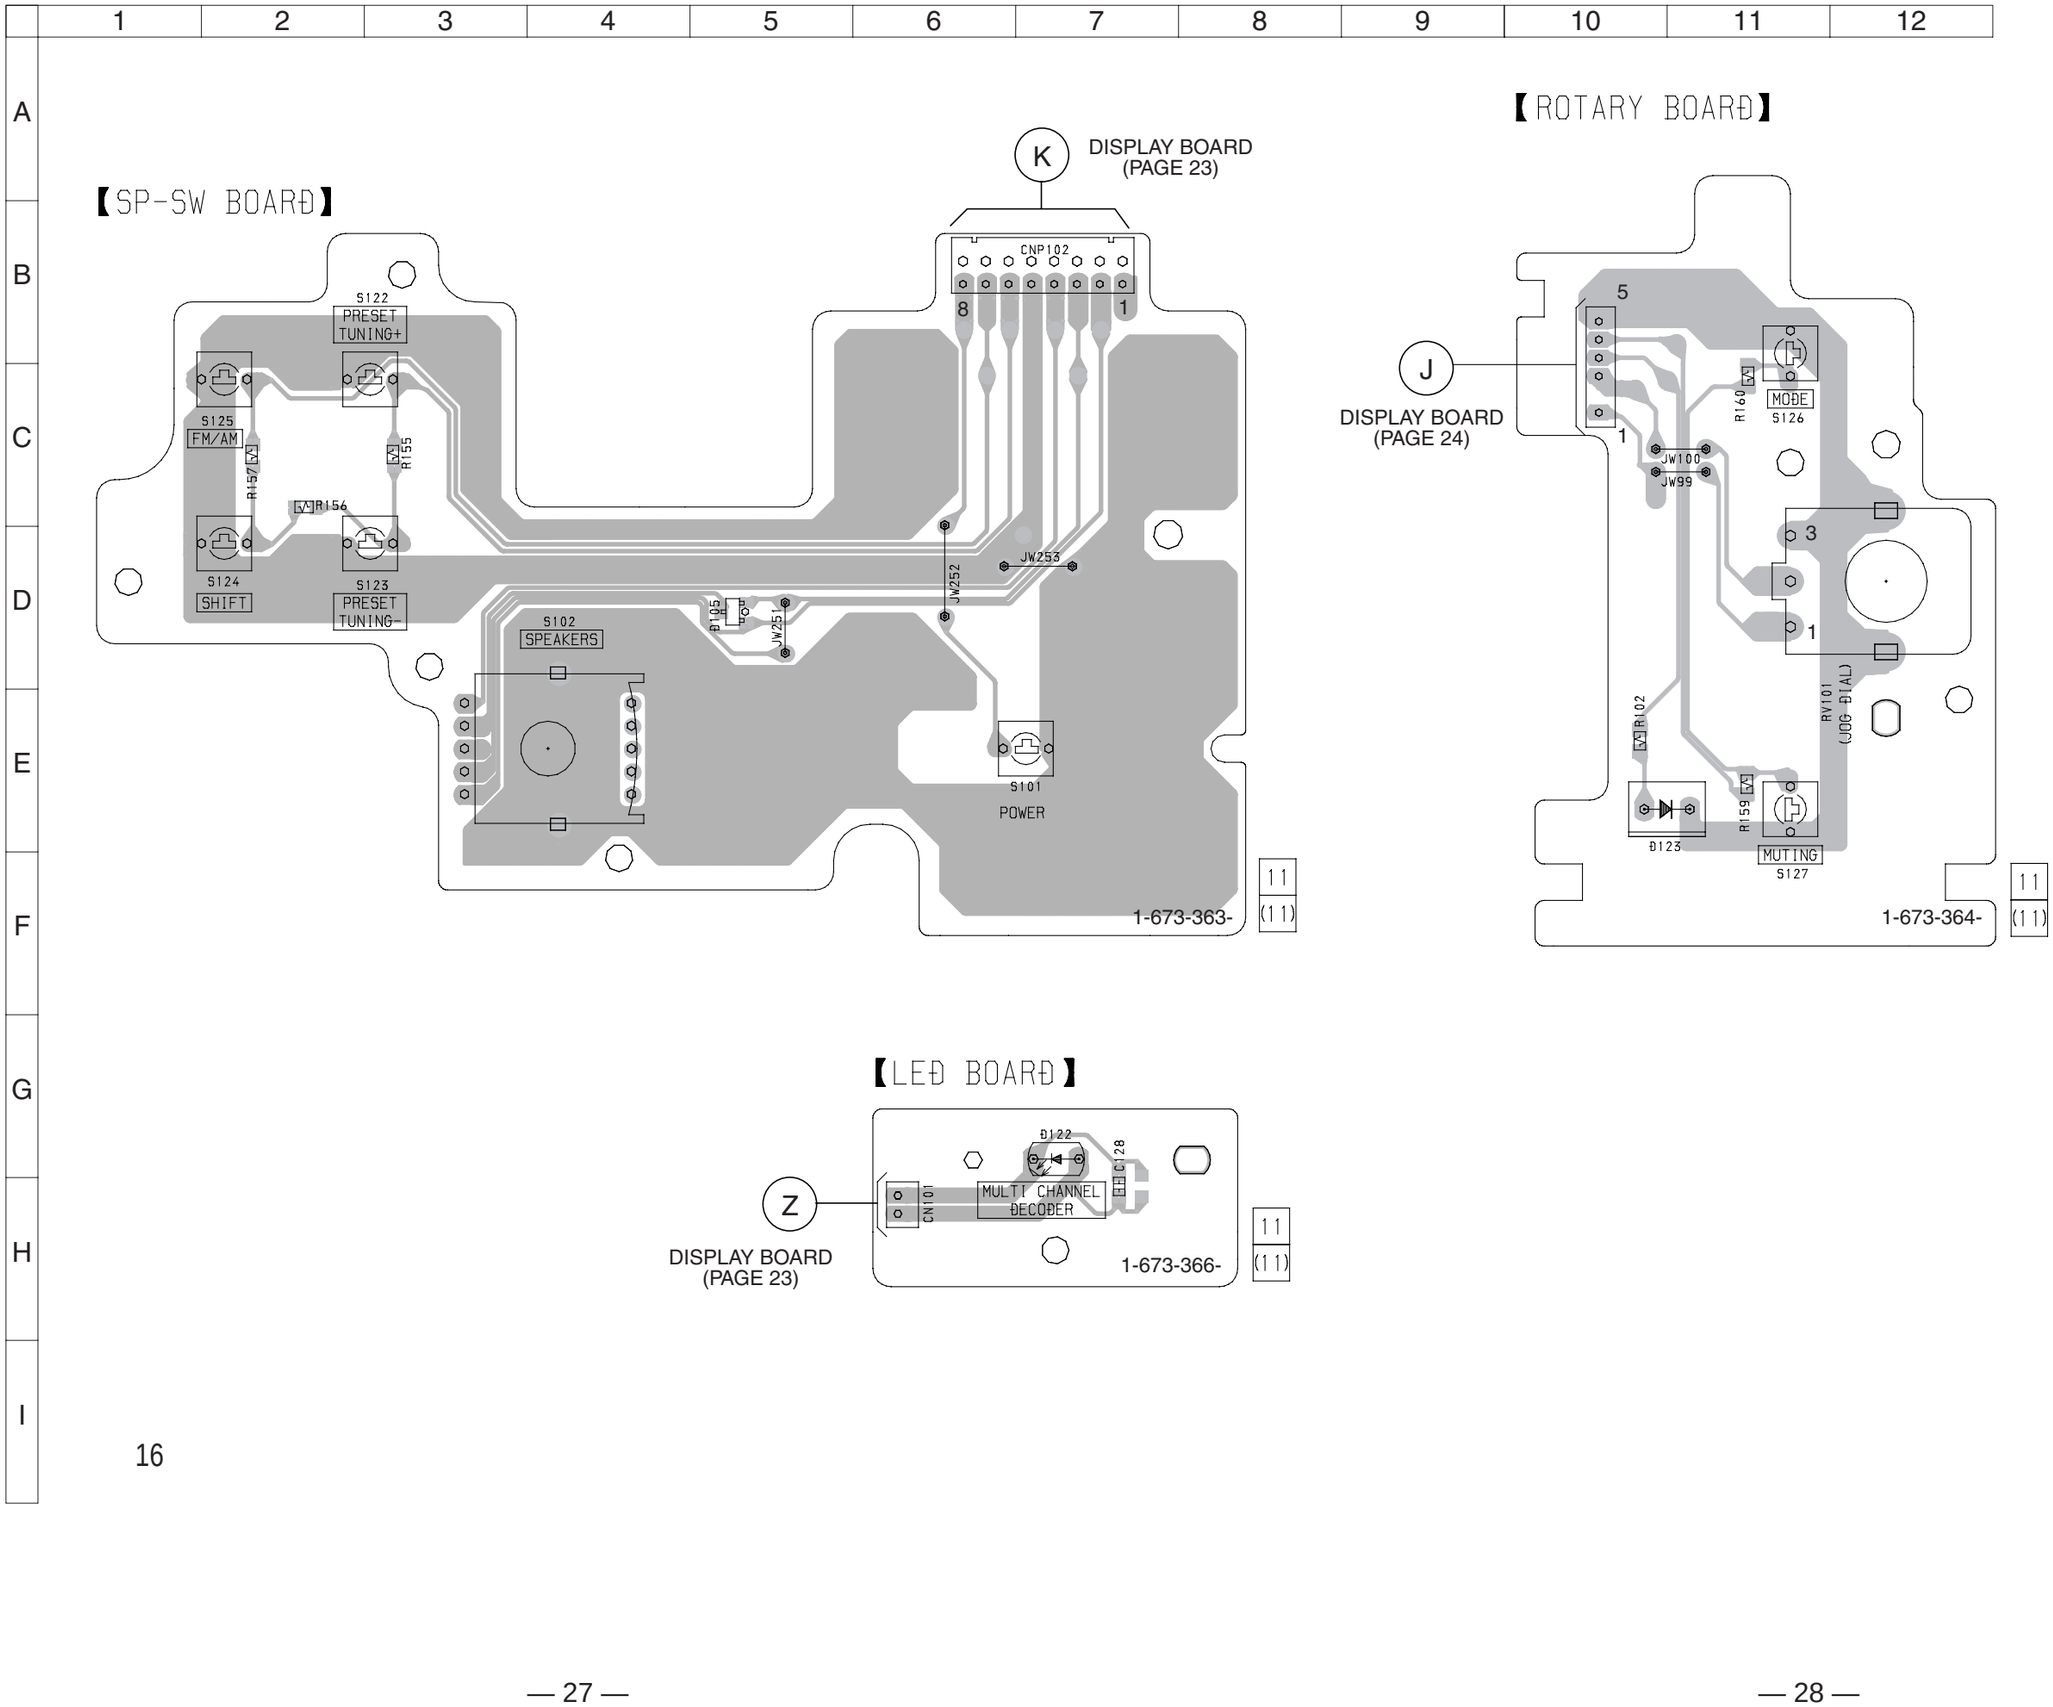

4-12. SCHEMATIC DIAGRAM SPEAKER SWITCH SECTION

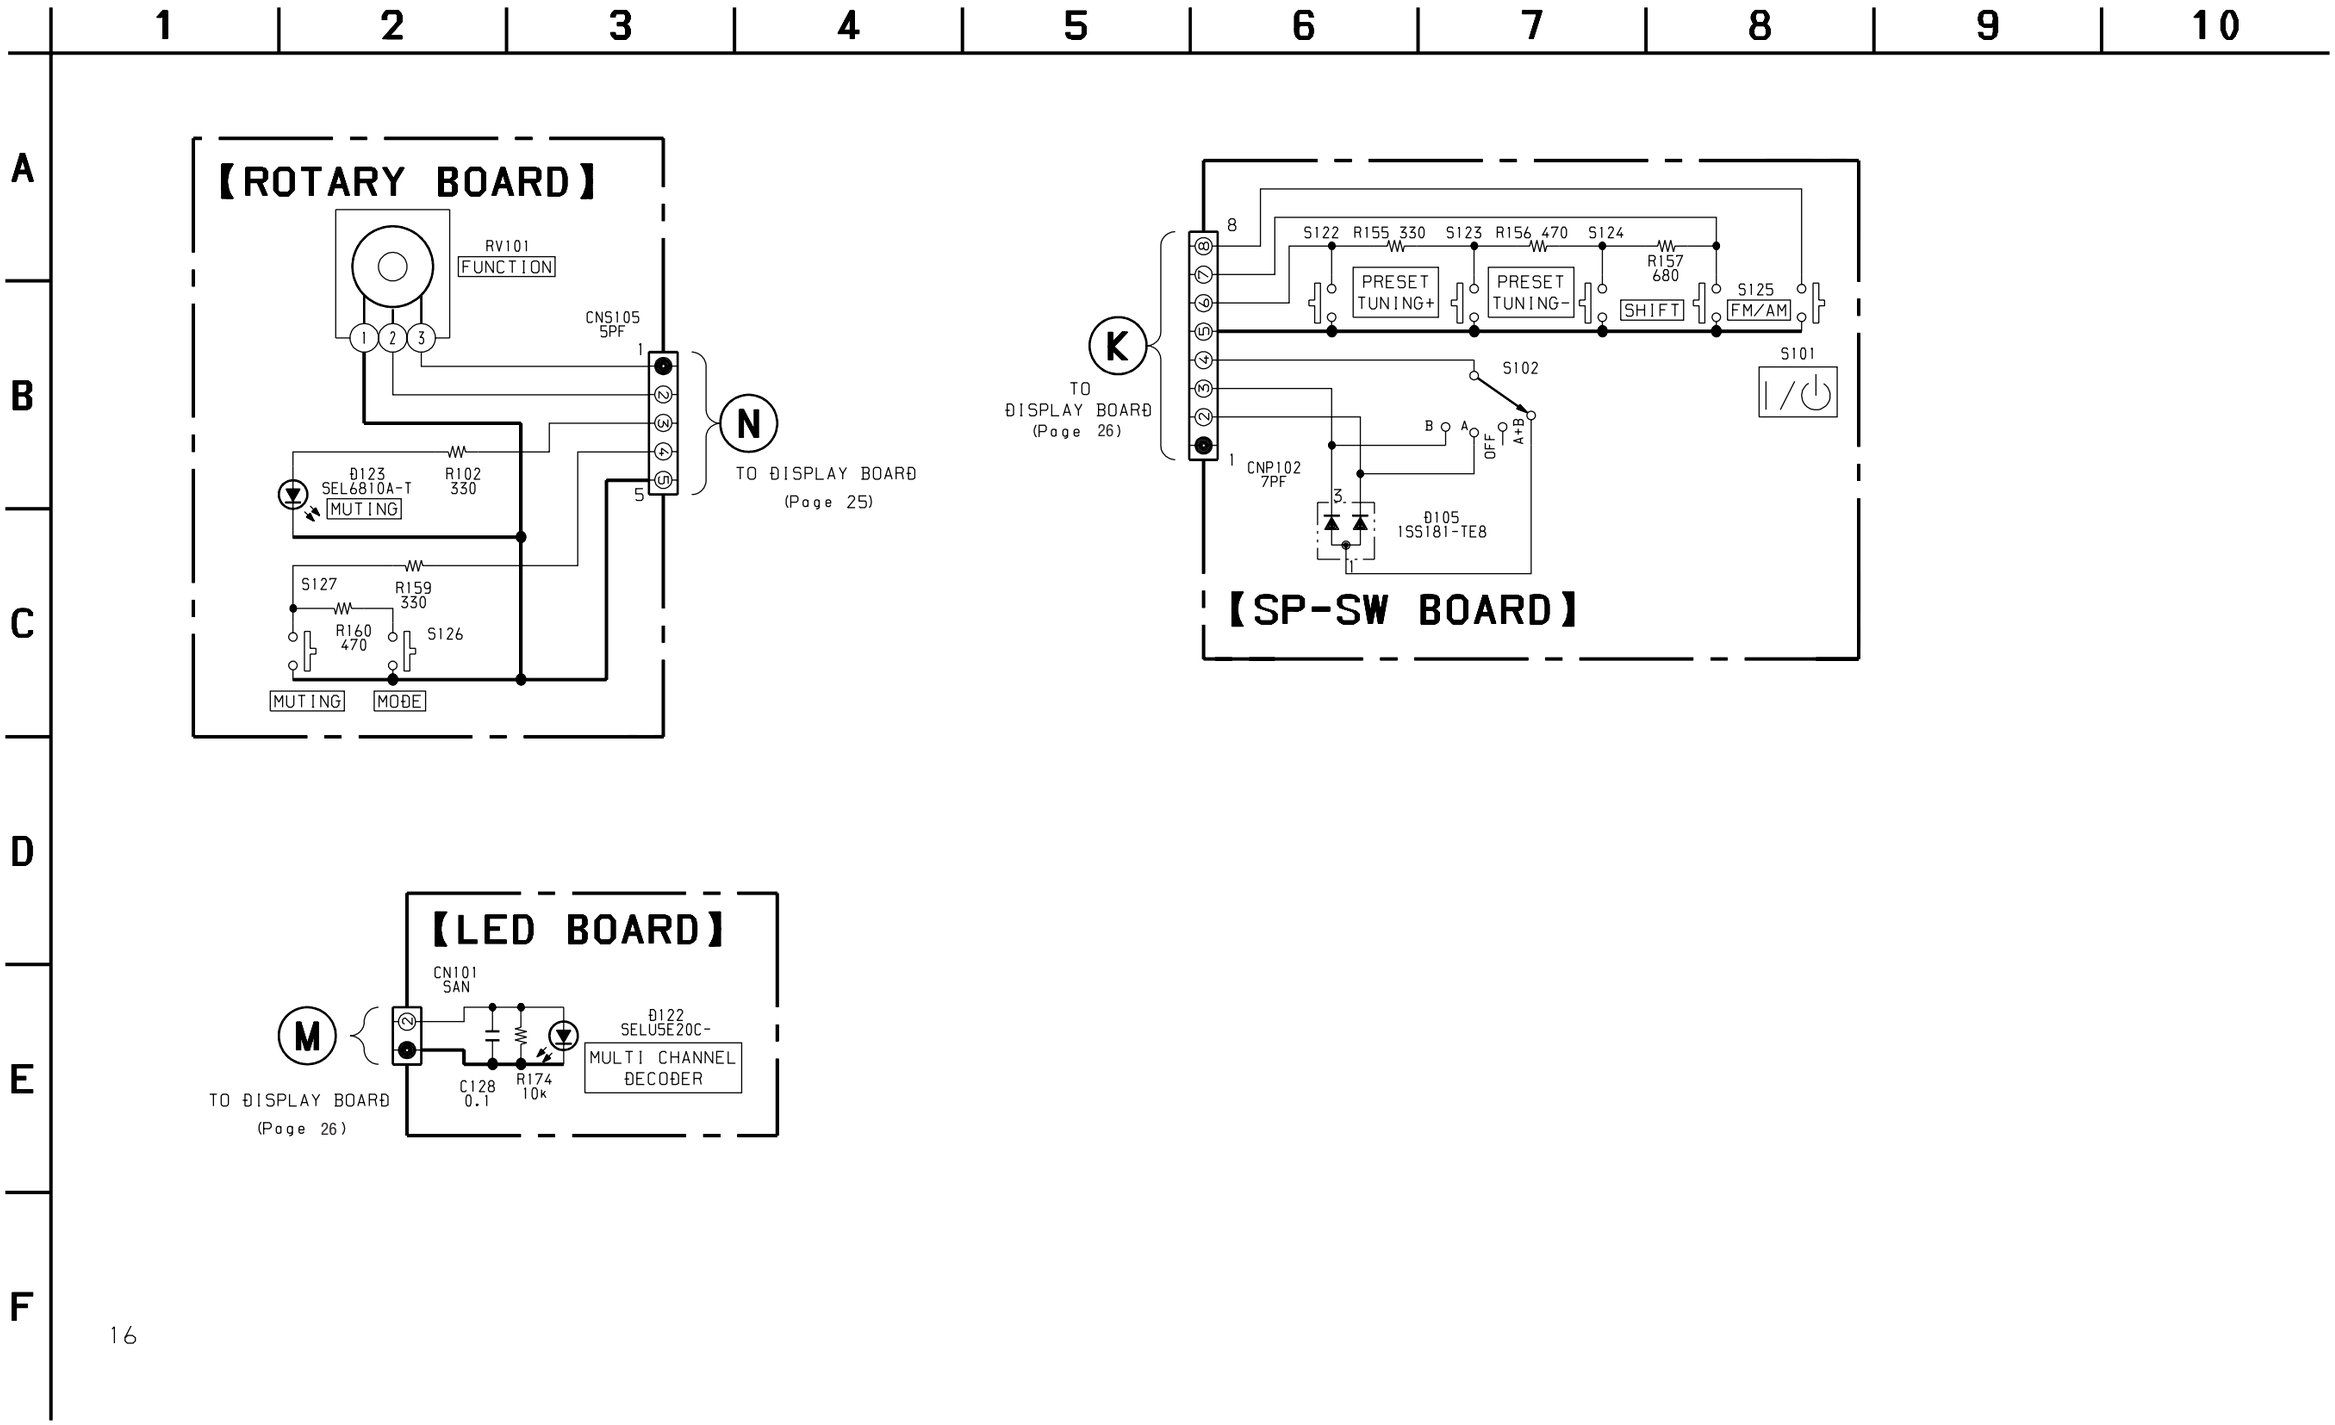

4-13. PRINTED WIRING BOARD REAR AMP SECTION

• See page 11 for circuit board location.

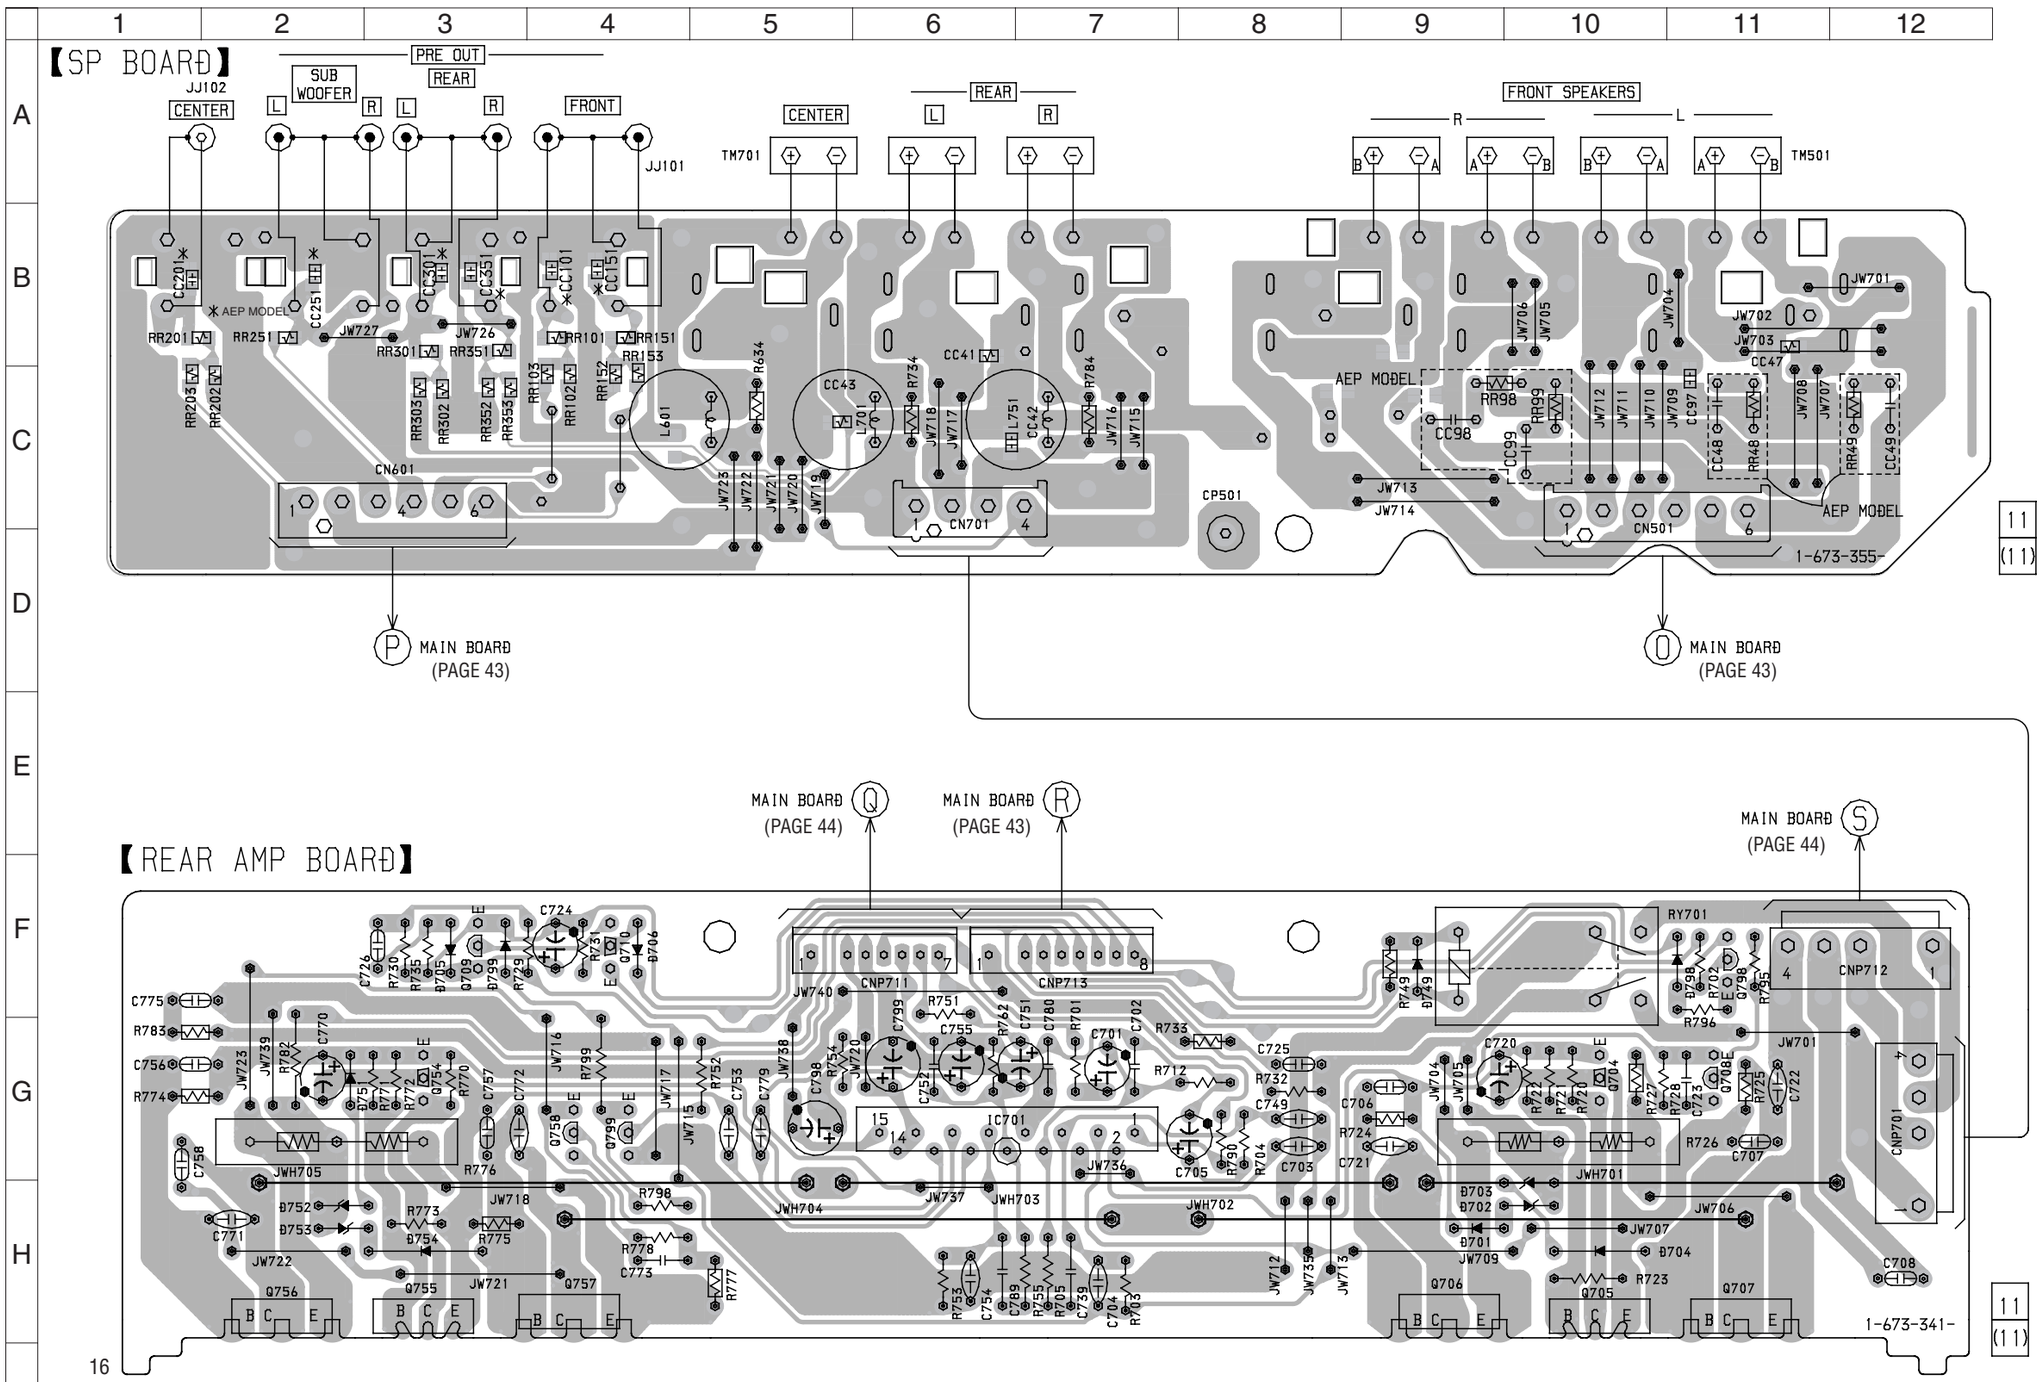

• **Semiconductor Location**

Ref. No.	Location
D701	H-9
D702	H-10
D703	H-10
D704	H-10
D705	F-3
D706	F-4
D749	F-9
D751	G-2
D752	H-2
D753	H-2
D754	H-3
D798	F-11
D799	F-3
IC701	G-6
Q704	G-10
Q705	H-10
Q706	H-9
Q707	H-11
Q708	G-11
Q709	F-3
Q710	F-4
Q754	G-3
Q755	H-3
Q756	H-2
Q757	H-4
Q758	G-4
Q798	F-11
Q799	G-4

4-14. SCHEMATIC DIAGRAM REAR AMP SECTION

• See page 58 for IC Block Diagrams.

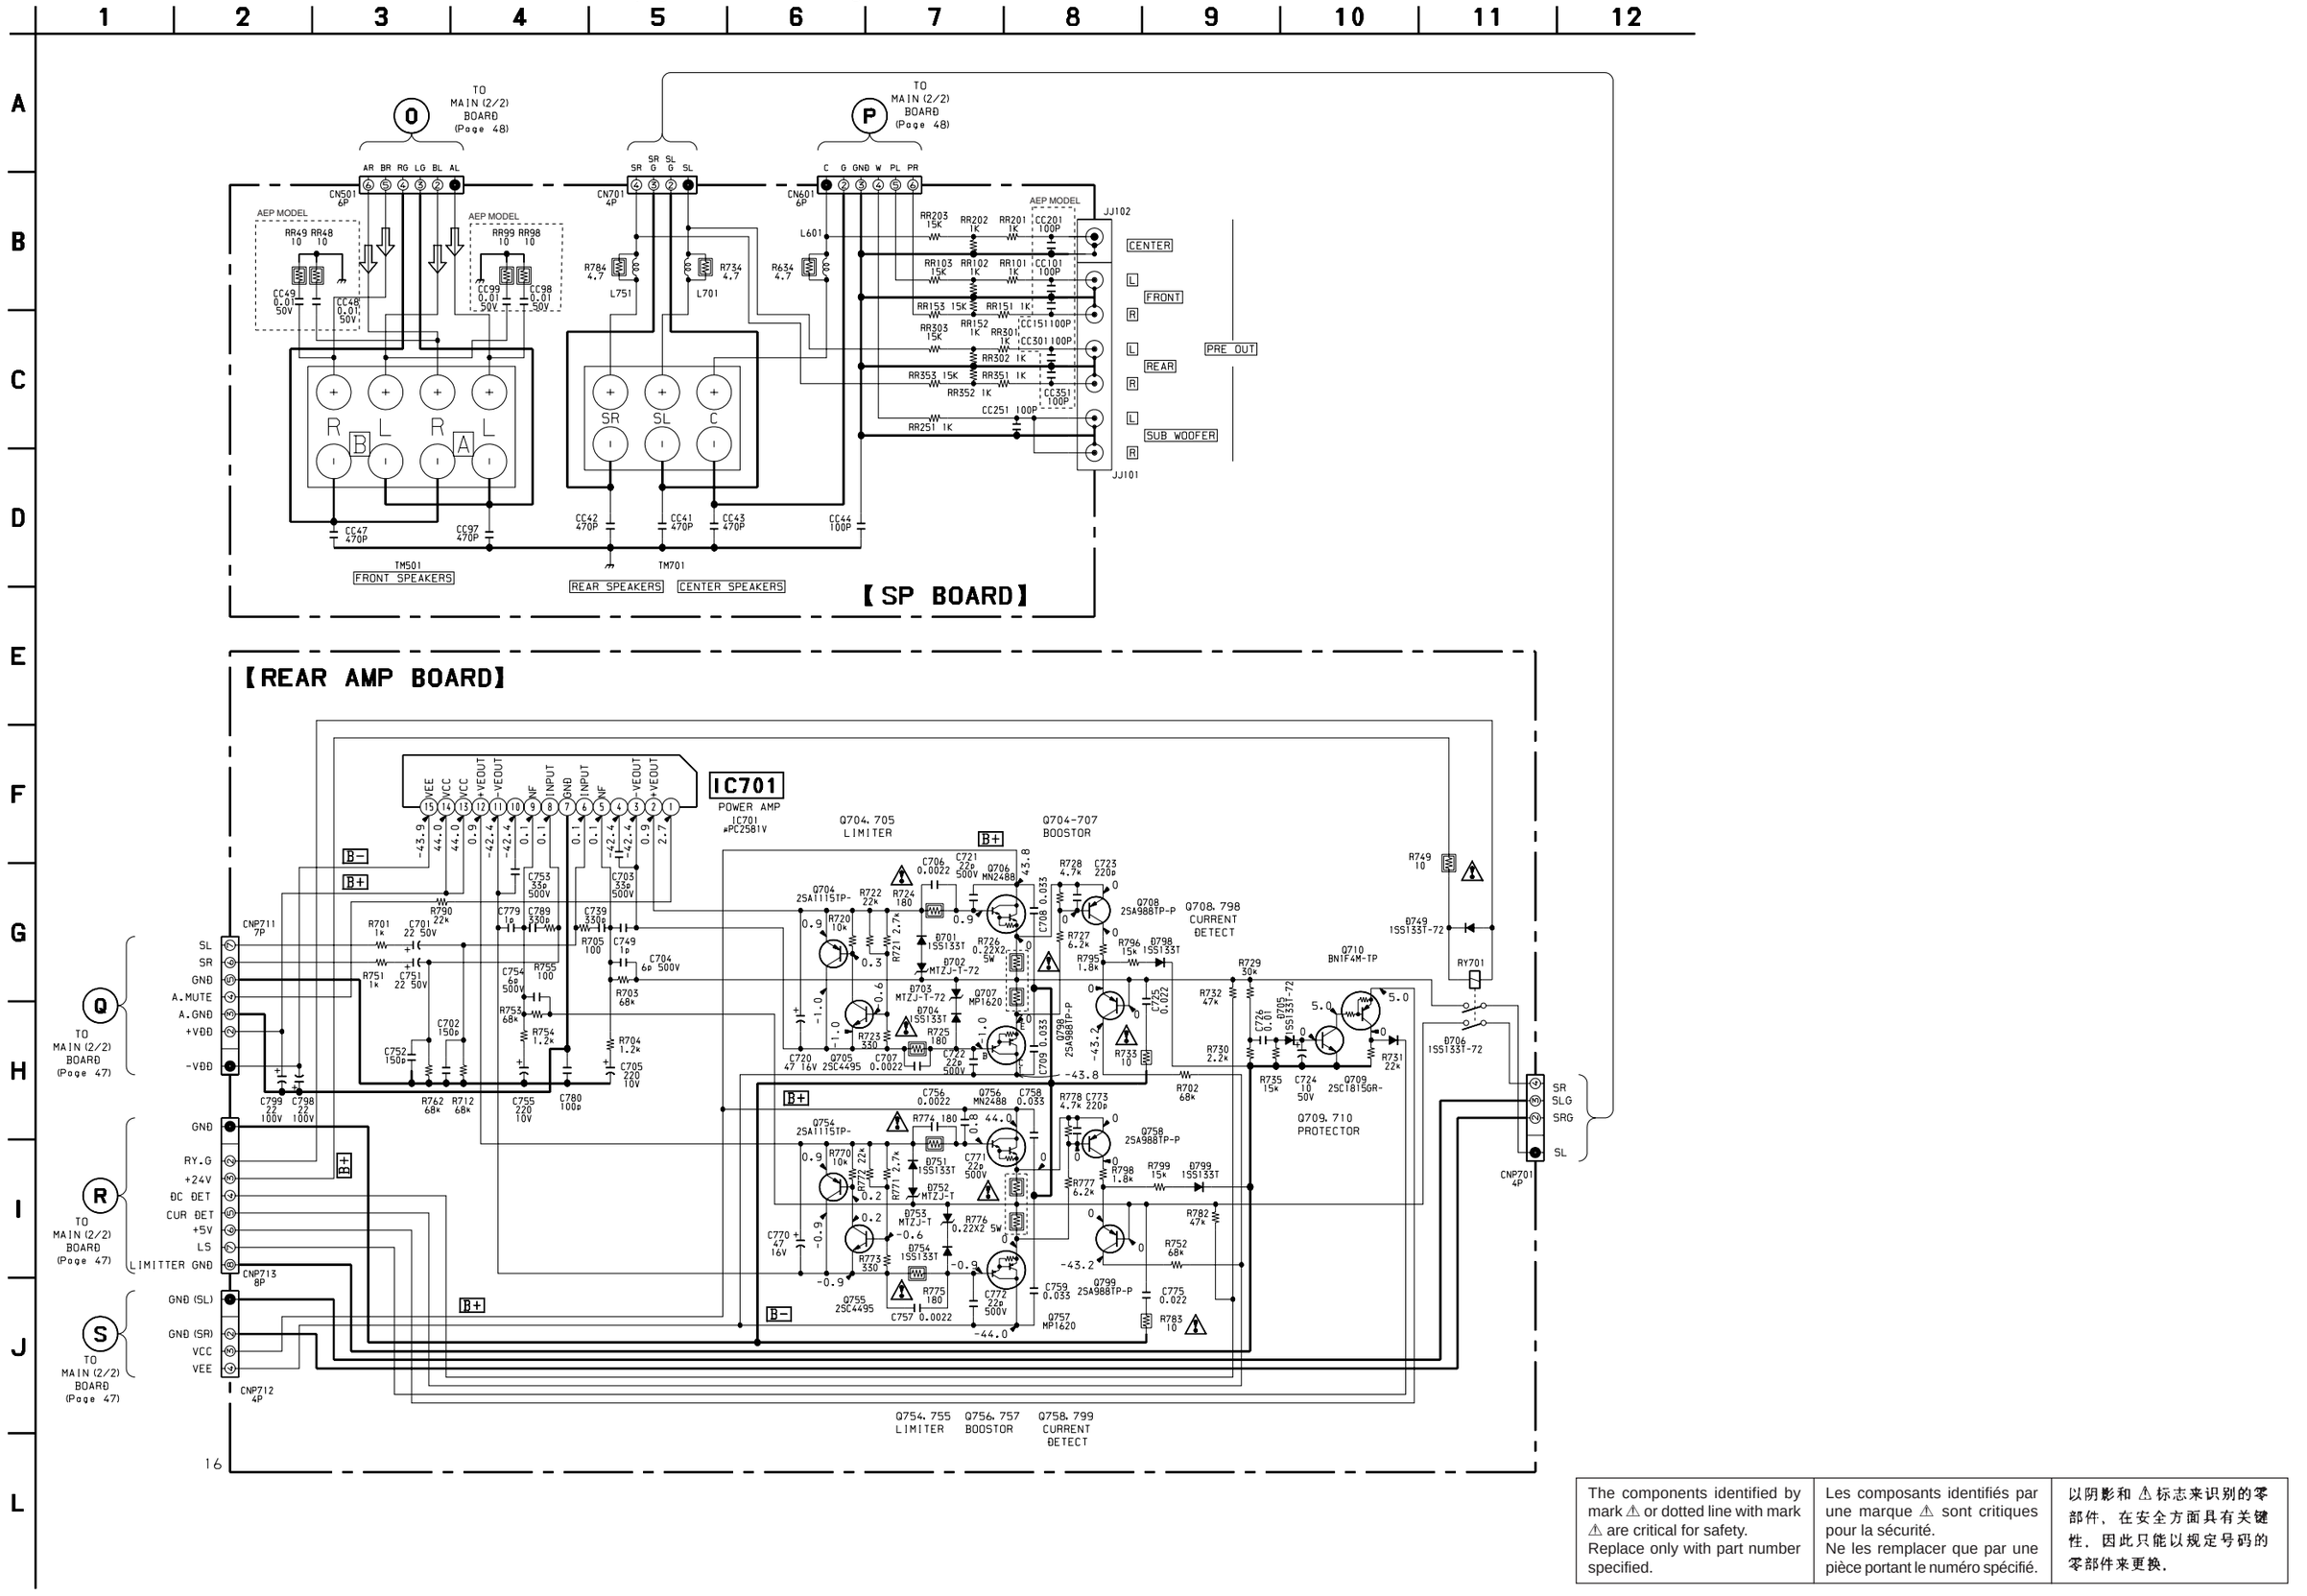

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

4-15. PRINTED WIRING BOARD POWER SECTION

• See page 11 for circuit board location.

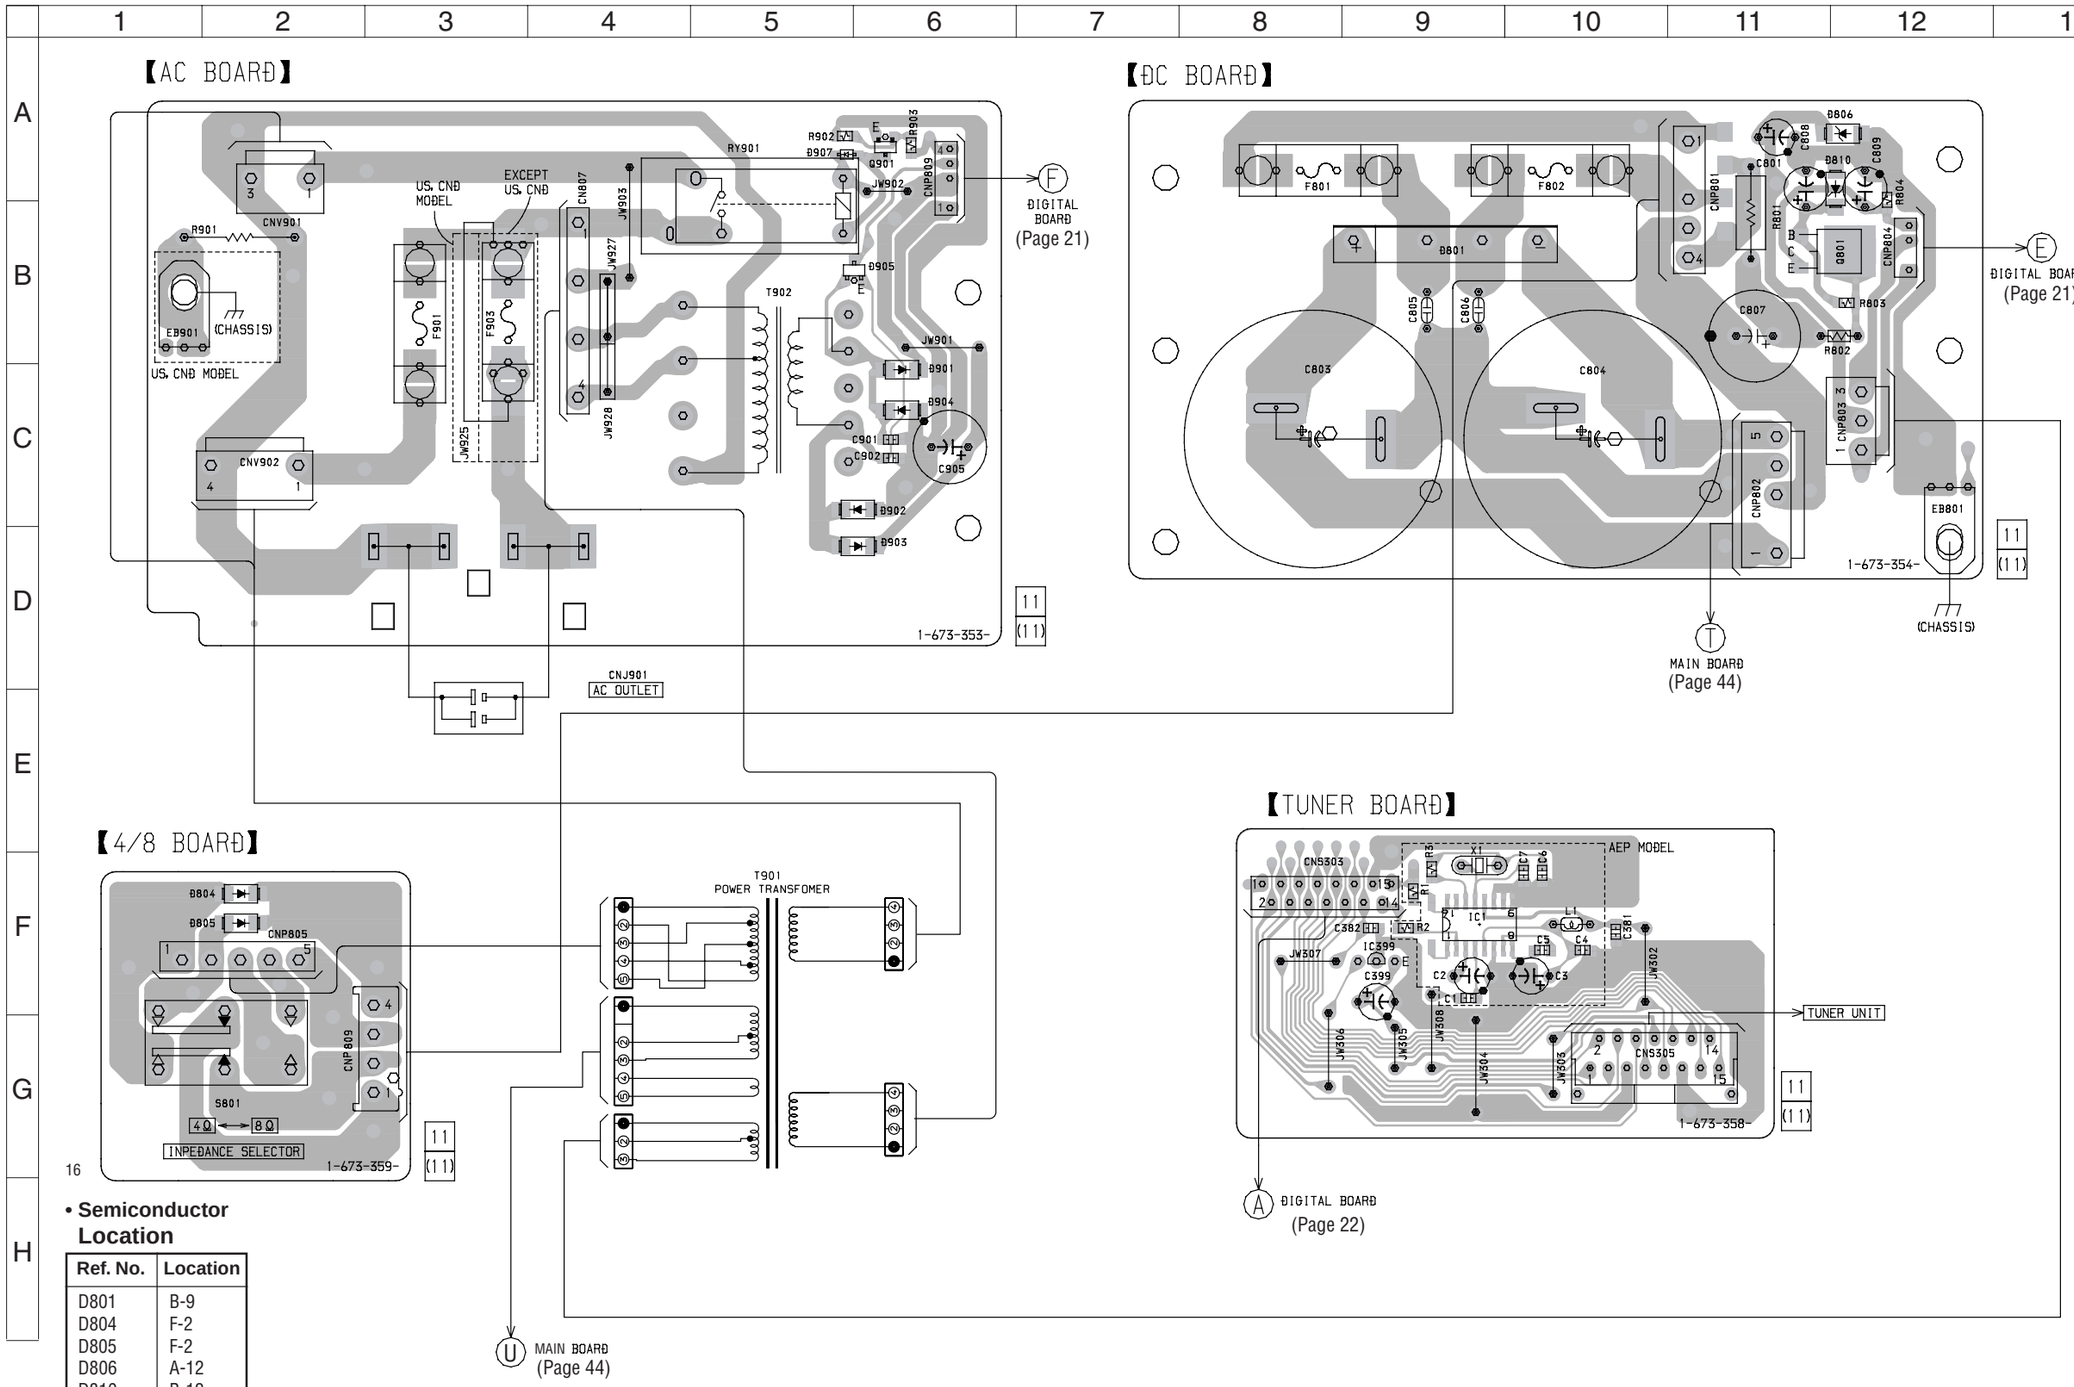

• **Semiconductor Location**

Ref. No.	Location
D801	B-9
D804	F-2
D805	F-2
D806	A-12
D810	B-12
D901	C-6
D902	C-6
D903	D-6
D904	C-6
D905	B-6
D907	A-5
IC1	F-9
IC399	F-12
Q801	B-12
Q901	A-5

4-16. SCHEMATIC DIAGRAM POWER SECTION

• See page 12 for Waveforms. • See page 61 for IC Block Diagrams.

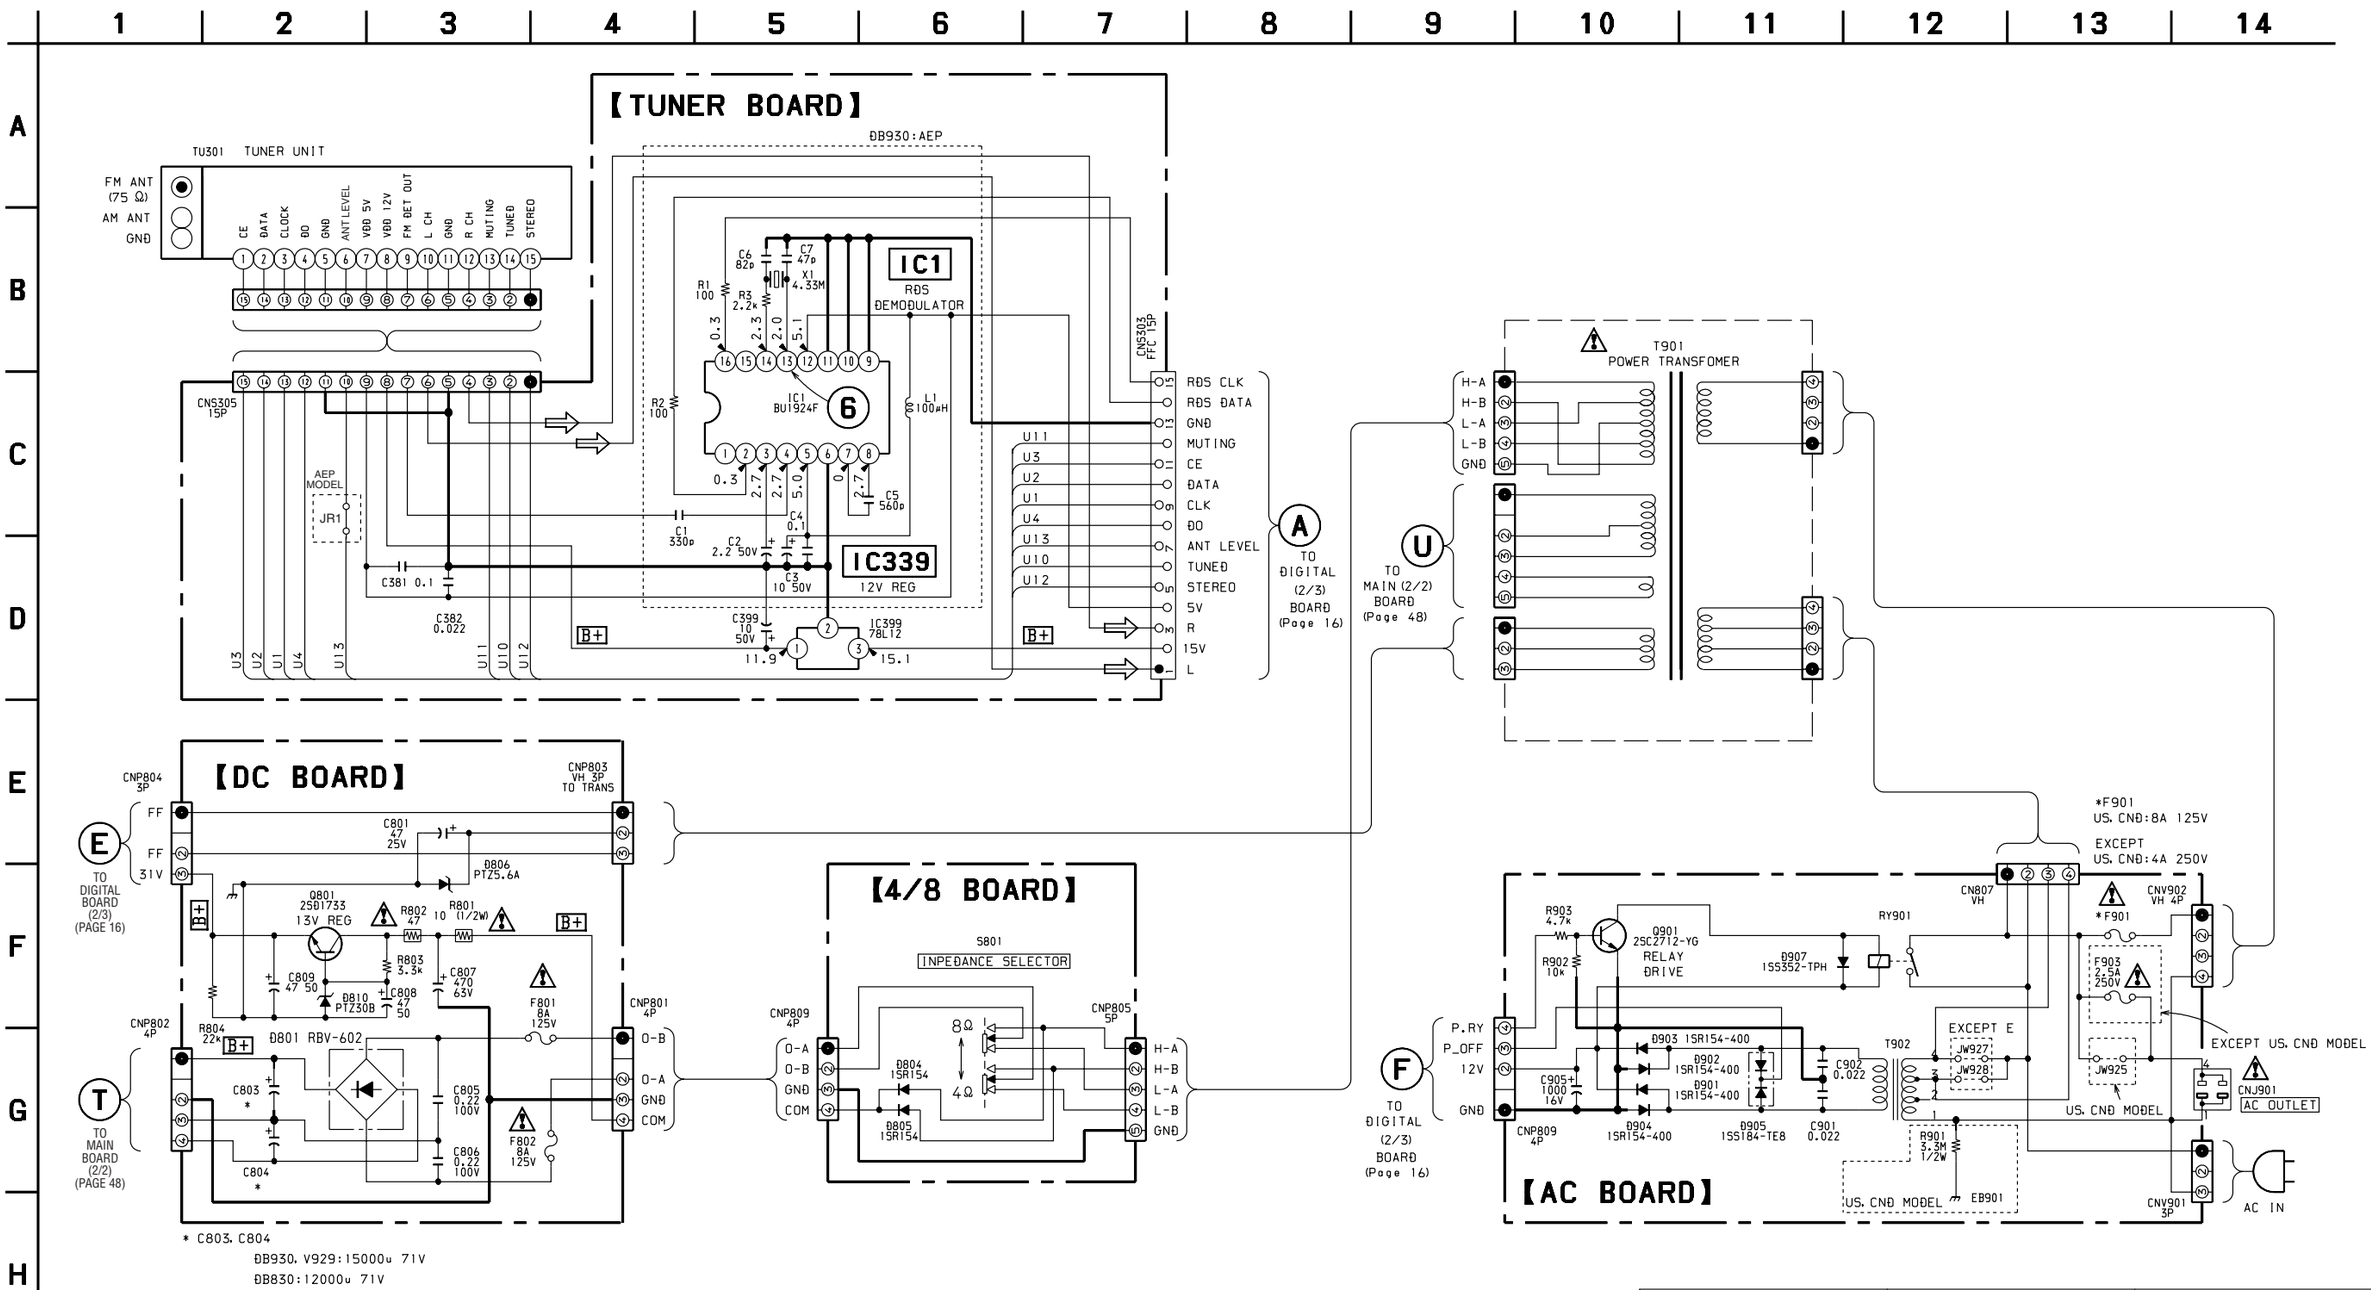

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

4-17. PRINTED WIRING BOARD VIDEO SECTION • See page 11 for circuit board location.

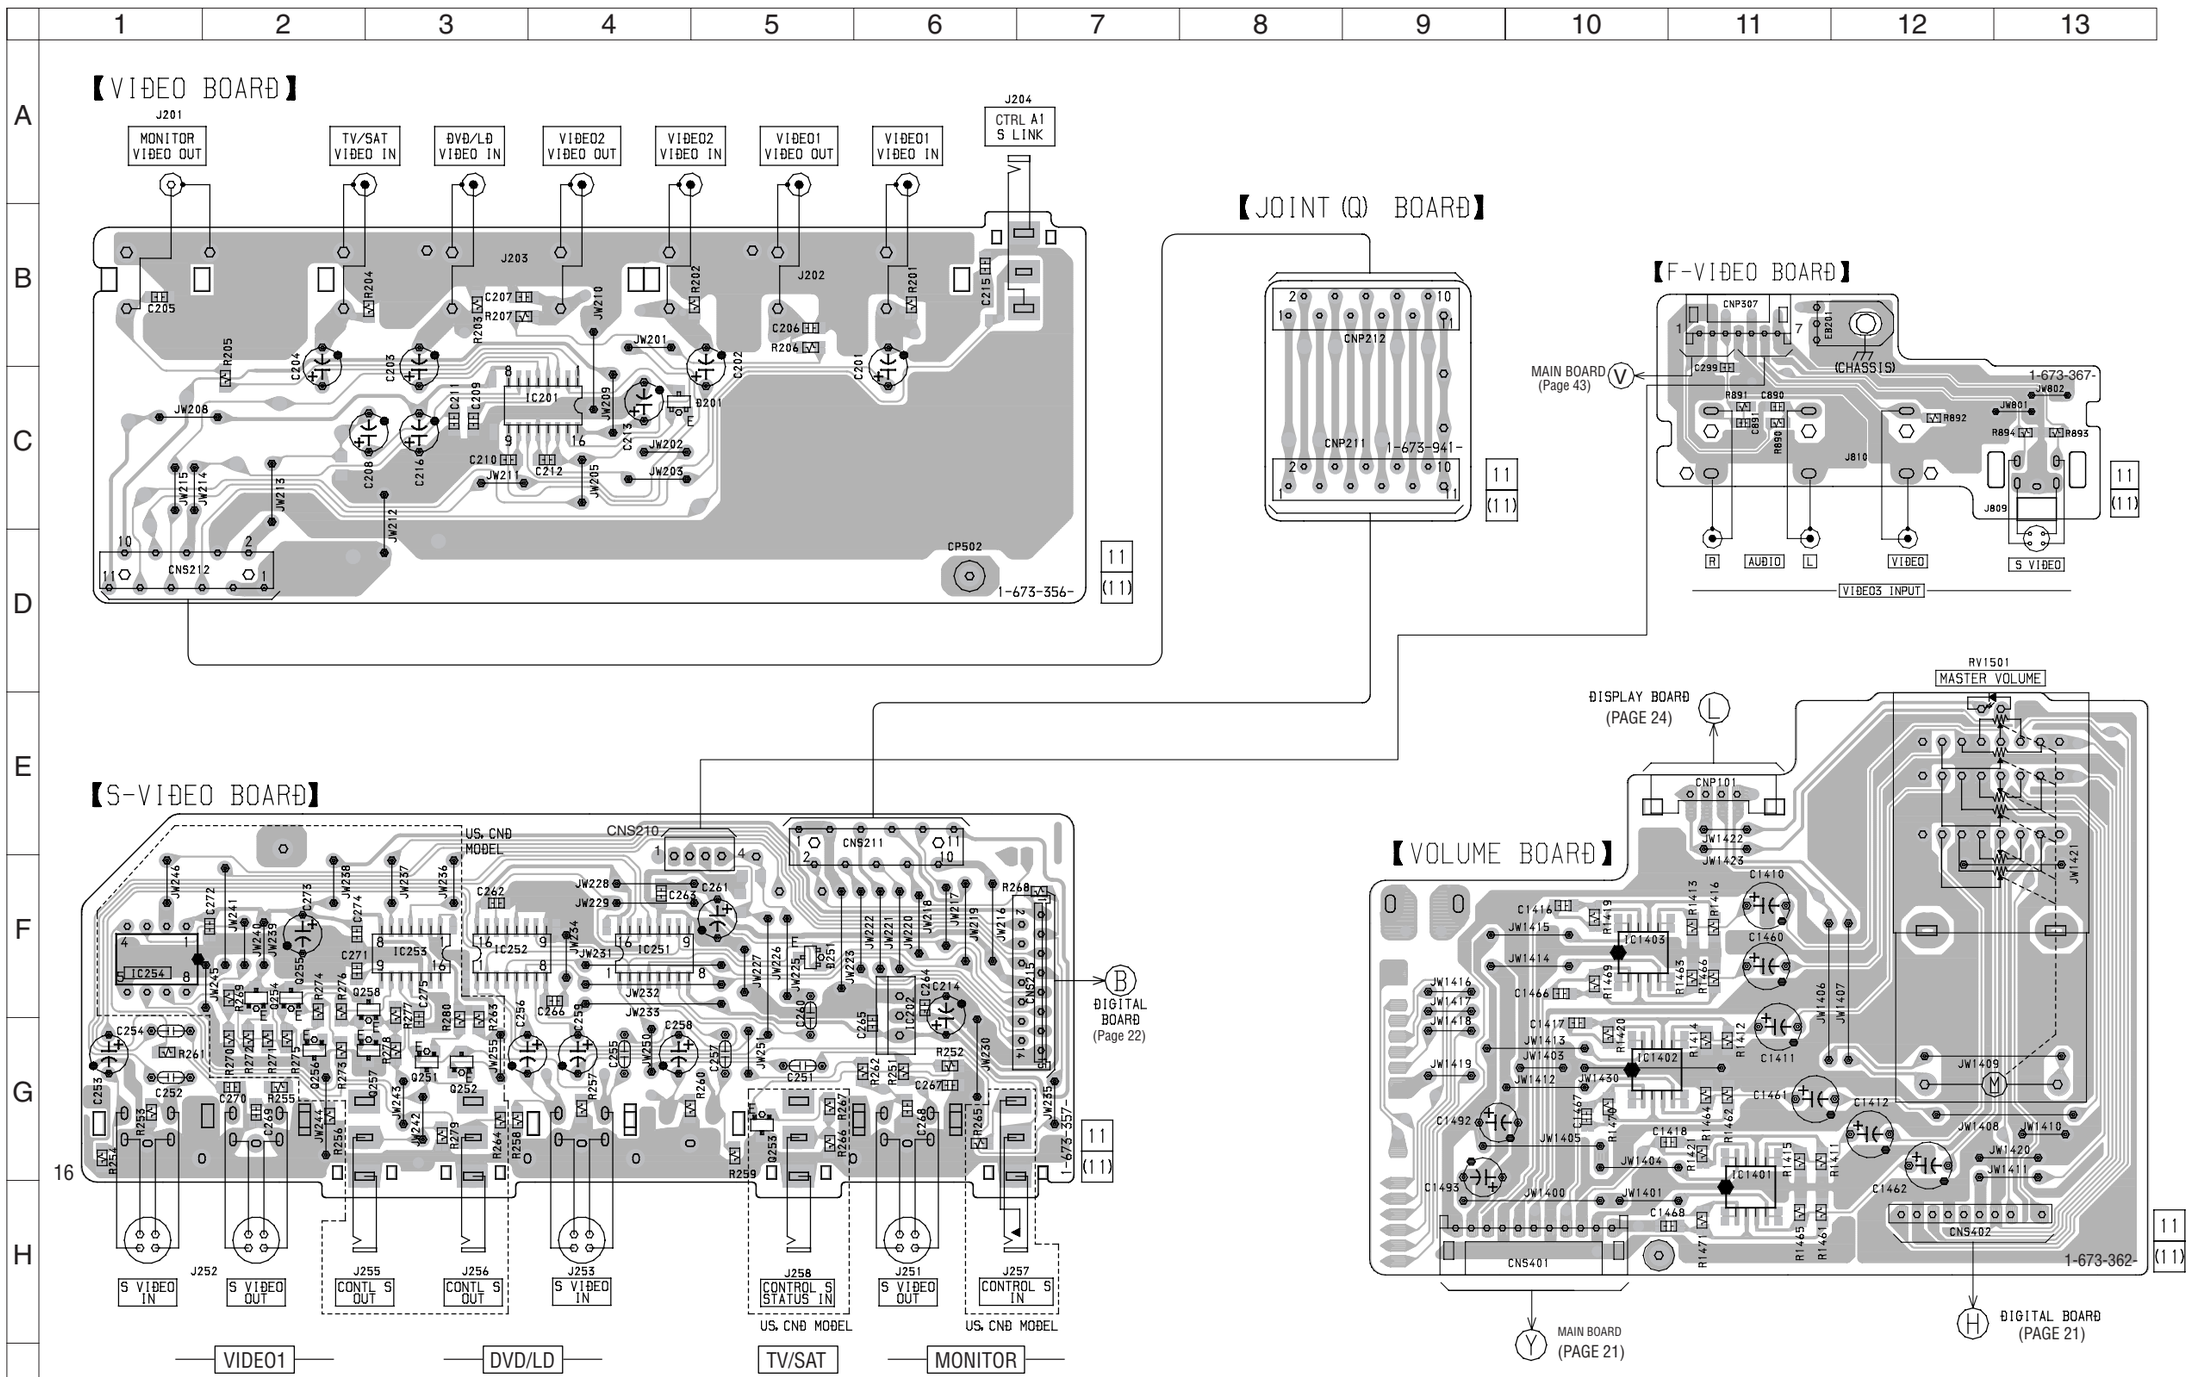

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location
D251	F-5	Q251	G-3
		Q252	G-3
IC202	G-6	Q253	G-5
IC251	F-4	Q254	F-2
IC252	F-4	Q255	F-2
IC253	F-3	Q256	G-2
IC254	F-1	Q257	G-3
IC1401	H-11	Q258	F-2
IC1402	G-11		
IC1403	F-11		

4-18. SCHEMATIC DIAGRAM VIDEO SECTION • See page 59 for IC Block Diagrams.

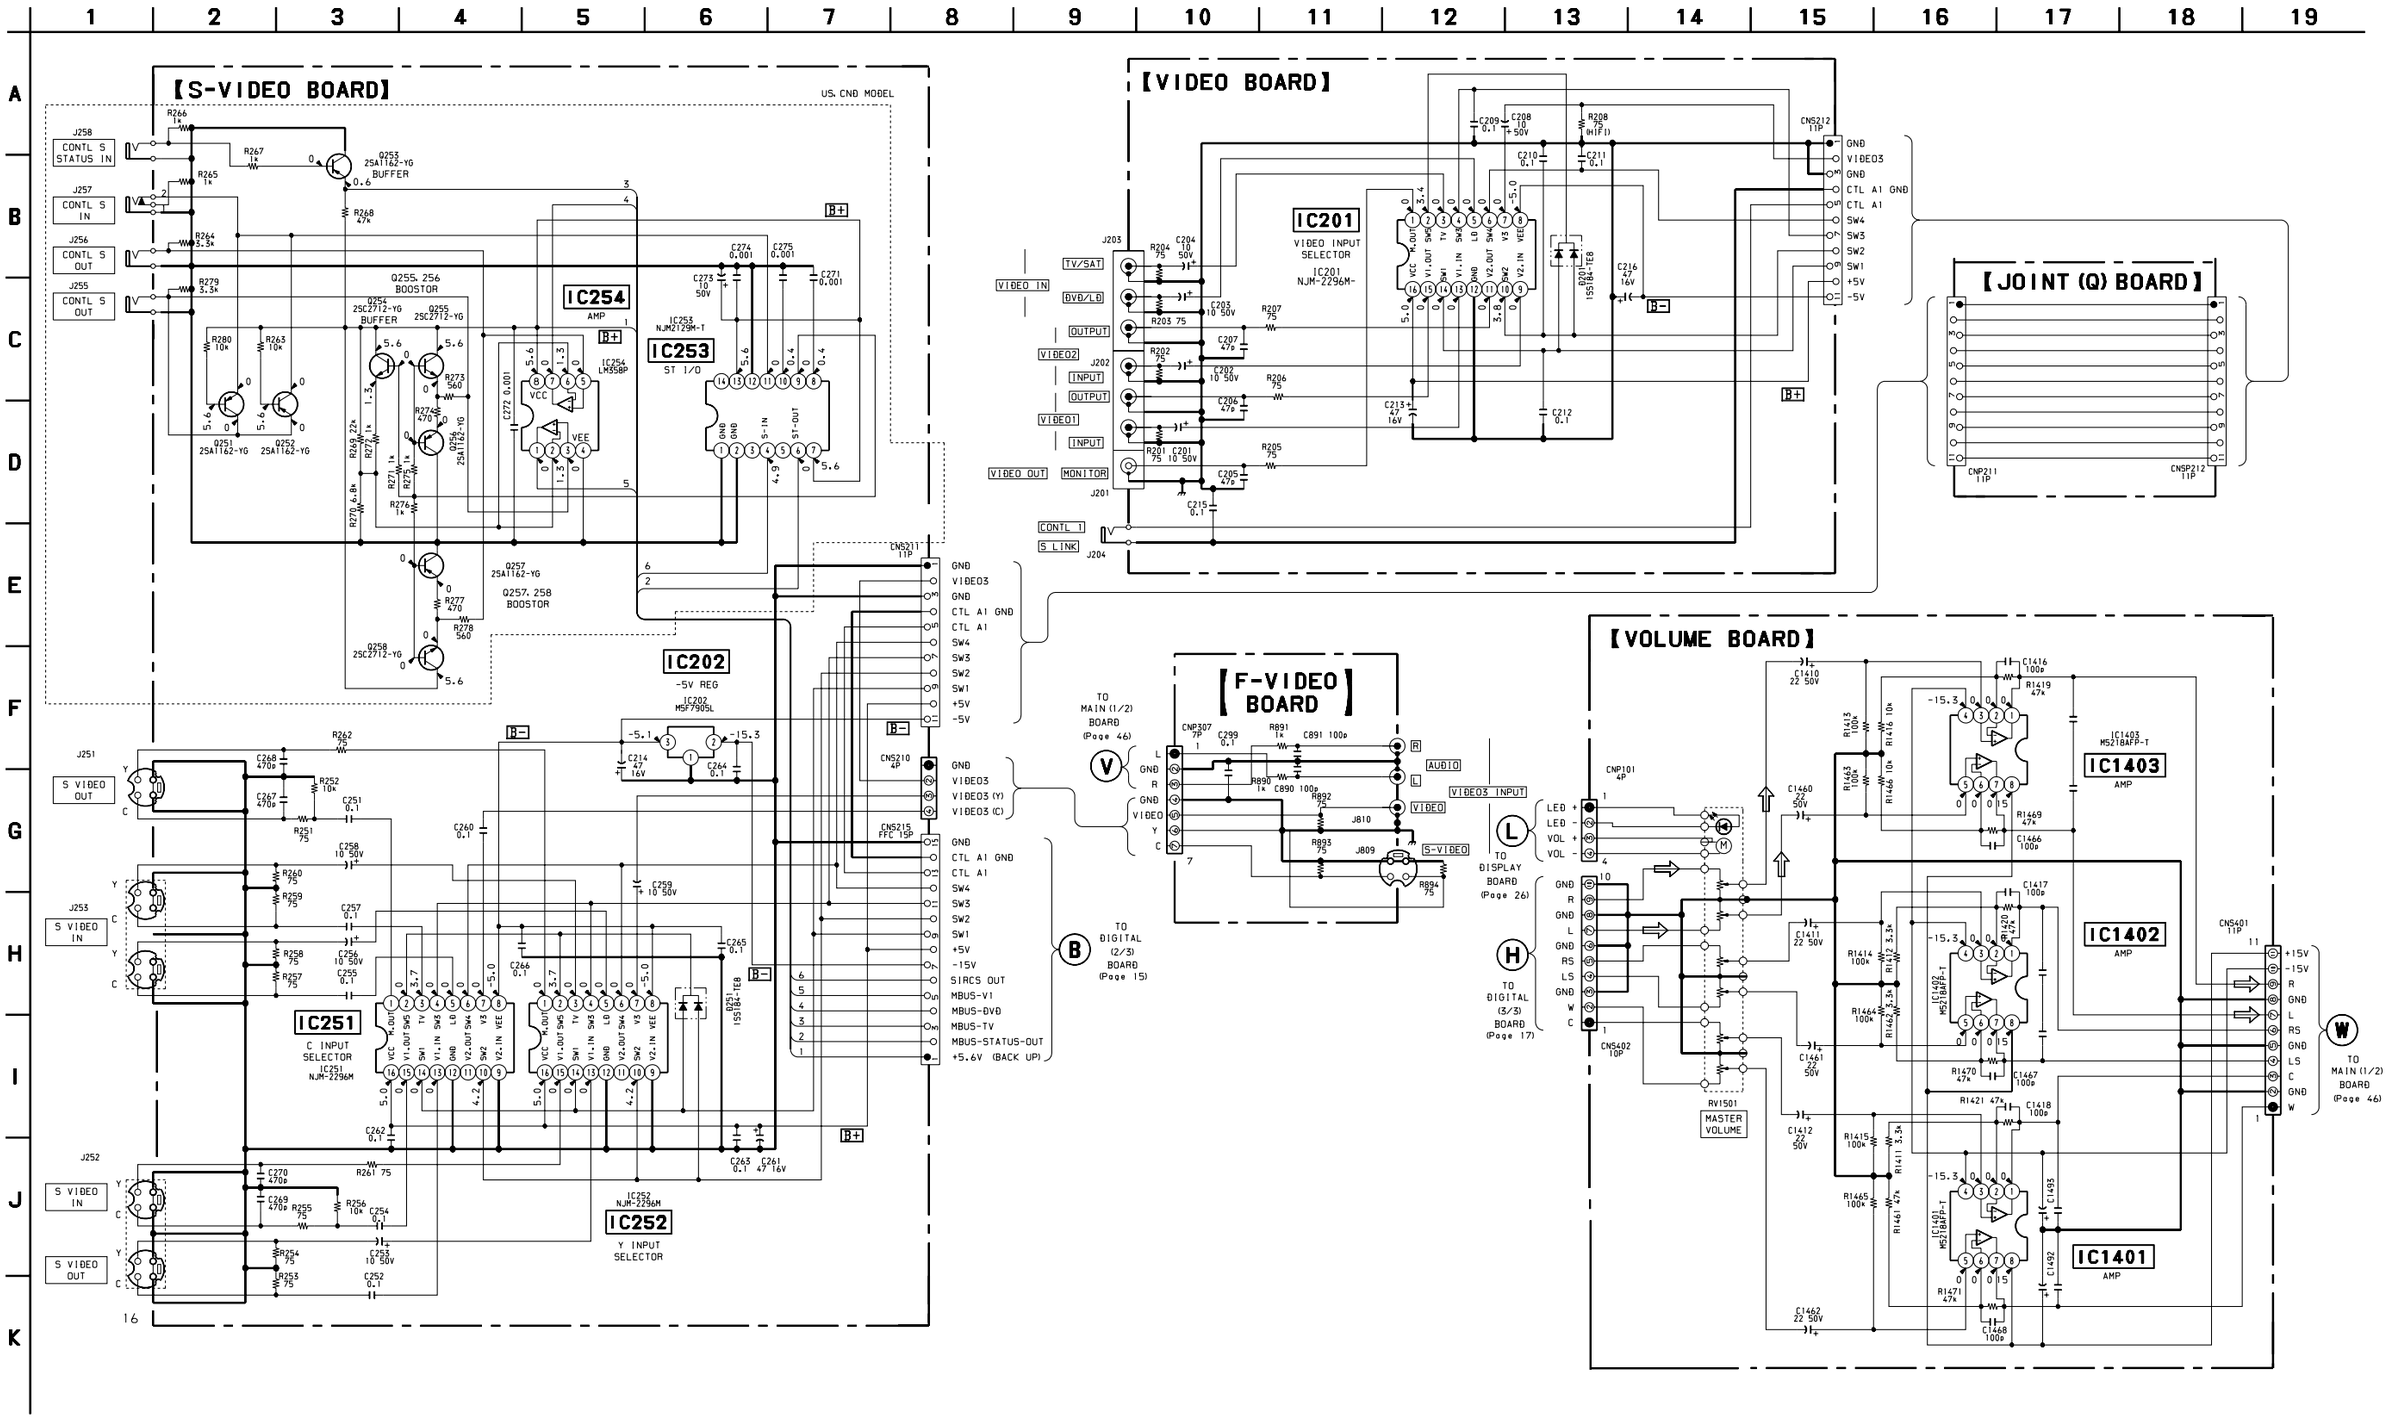

4-19. PRINTED WIRING BOARD MAIN SECTION

• See page 11 for circuit board location.

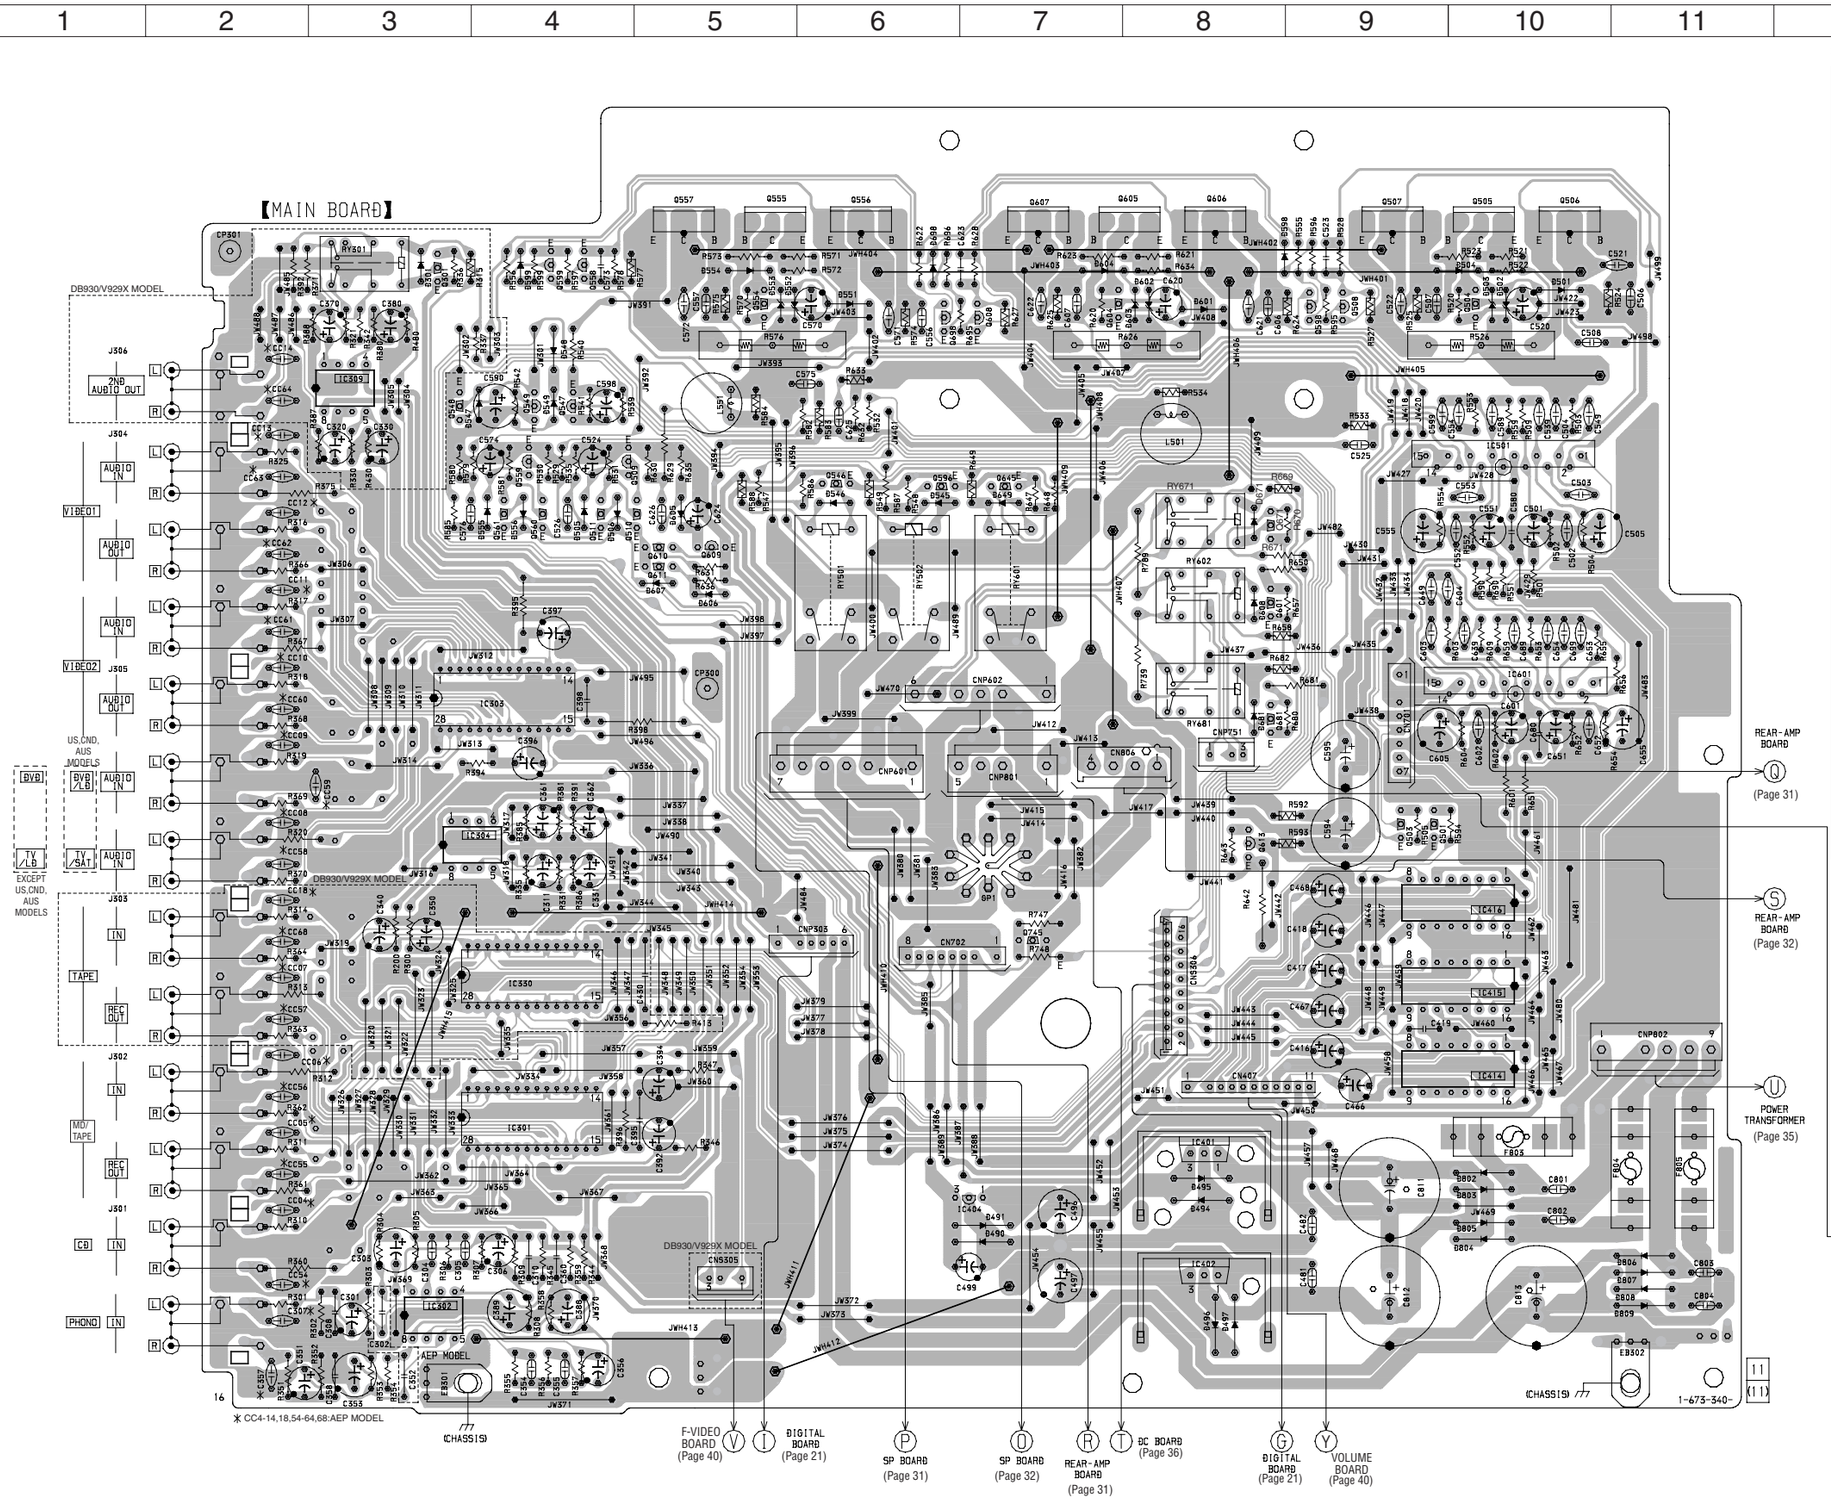

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D301	B-3	D649	C-7	Q508	B-9
D490	H-7	D681	E-8	Q509	C-4
D491	H-7	D698	B-6	Q510	C-5
D494	H-8	D802	H-10	Q511	C-4
D495	H-8	D803	H-10	Q546	C-6
D496	H-8	D804	H-10	Q547	C-4
D497	H-8	D805	H-10	Q548	C-3
D501	B-10	D806	H-11	Q549	C-4
D502	B-10	D807	H-11	Q554	B-5
D503	B-10	D808	H-11	Q555	B-5
D504	B-10	D809	H-11	Q556	C-6
D505	C-4			Q557	B-5
D506	C-4	IC301	G-4	Q558	C-4
D545	C-6	IC302	H-3	Q559	B-4
D546	C-6	IC303	E-4	Q560	C-4
D547	C-4	IC304	E-3	Q561	C-4
D548	B-4	IC309	C-3	Q596	C-6
D549	C-4	IC330	F-4	Q598	B-9
D551	B-6	IC401	G-8	Q599	B-4
D552	B-5	IC402	H-8	Q601	D-8
D553	B-5	IC404	H-7	Q604	B-7
D554	B-5	IC414	F-10	Q605	B-8
D555	C-4	IC415	F-10	Q606	B-8
D598	B-8	IC416	F-10	Q607	B-7
D598	B-9	IC501	C-10	Q608	B-7
D599	B-4	IC601	D-10	Q609	D-5
D601	B-8			Q610	D-5
D602	B-8	Q301	B-3	Q611	D-5
D603	B-8	Q501	E-9	Q613	E-8
D604	B-7	Q503	E-9	Q645	C-7
D605	C-5	Q504	B-10	Q681	E-8
D606	D-5	Q505	B-10	Q698	B-6
D607	D-5	Q506	B-10	Q745	F-7
D608	D-8	Q507	B-9		

4-20. SCHEMATIC DIAGRAM MAIN SECTION(1/2)

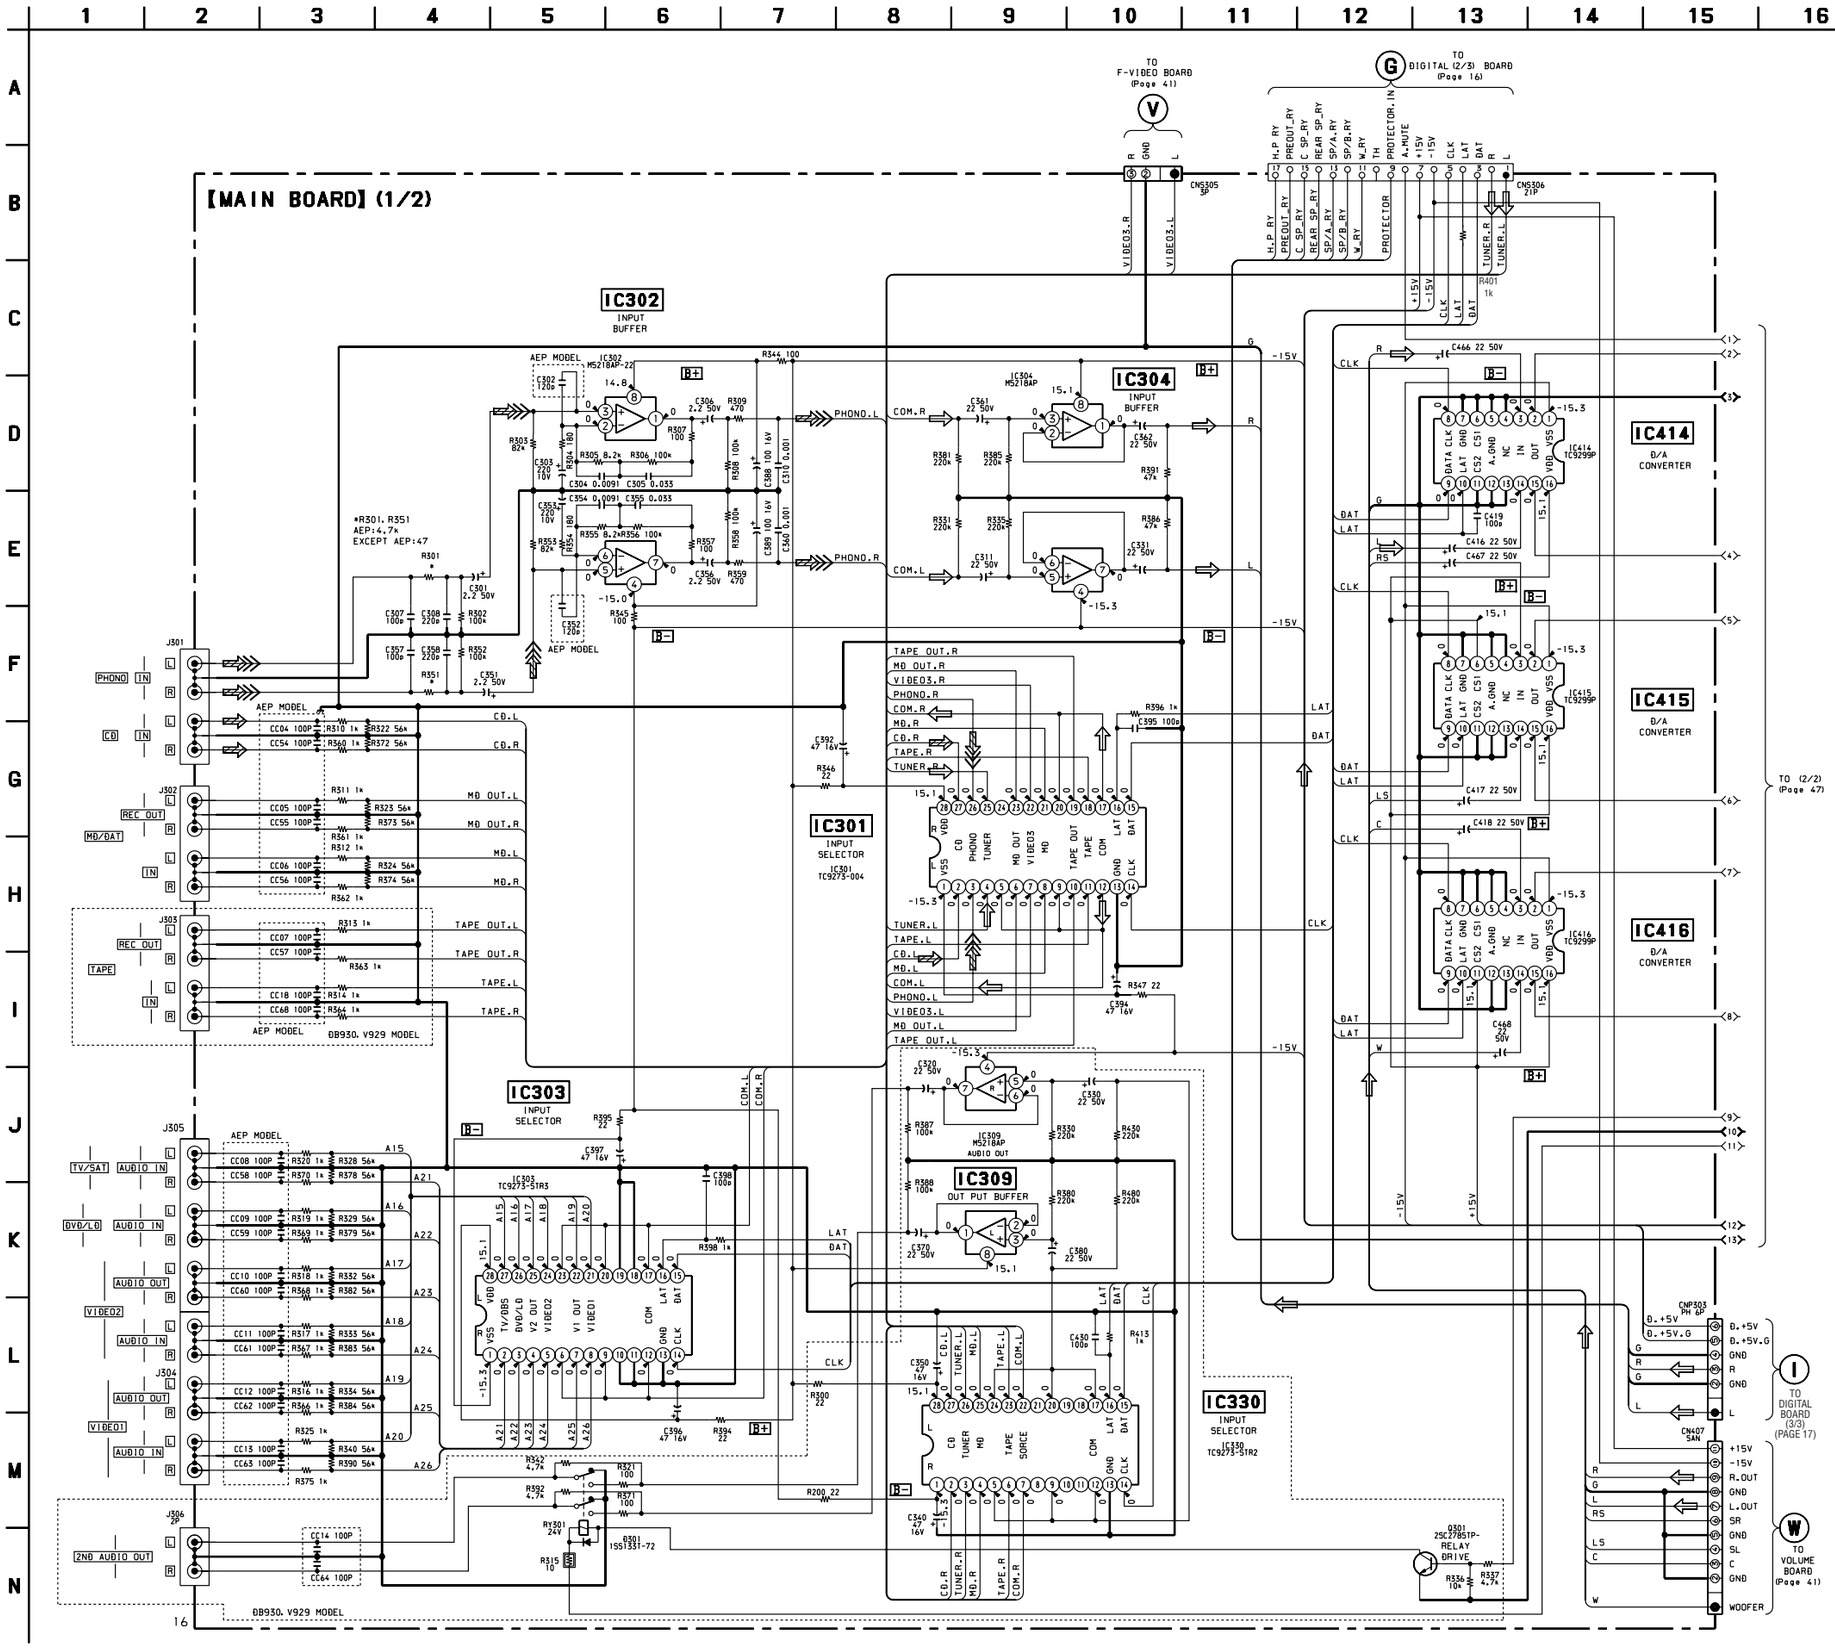

4-21. SCHEMATIC DIAGRAM MAIN SECTION(2/2)

• See page 43 for printed wirig board. • See page 59 for IC Block Diagrams.

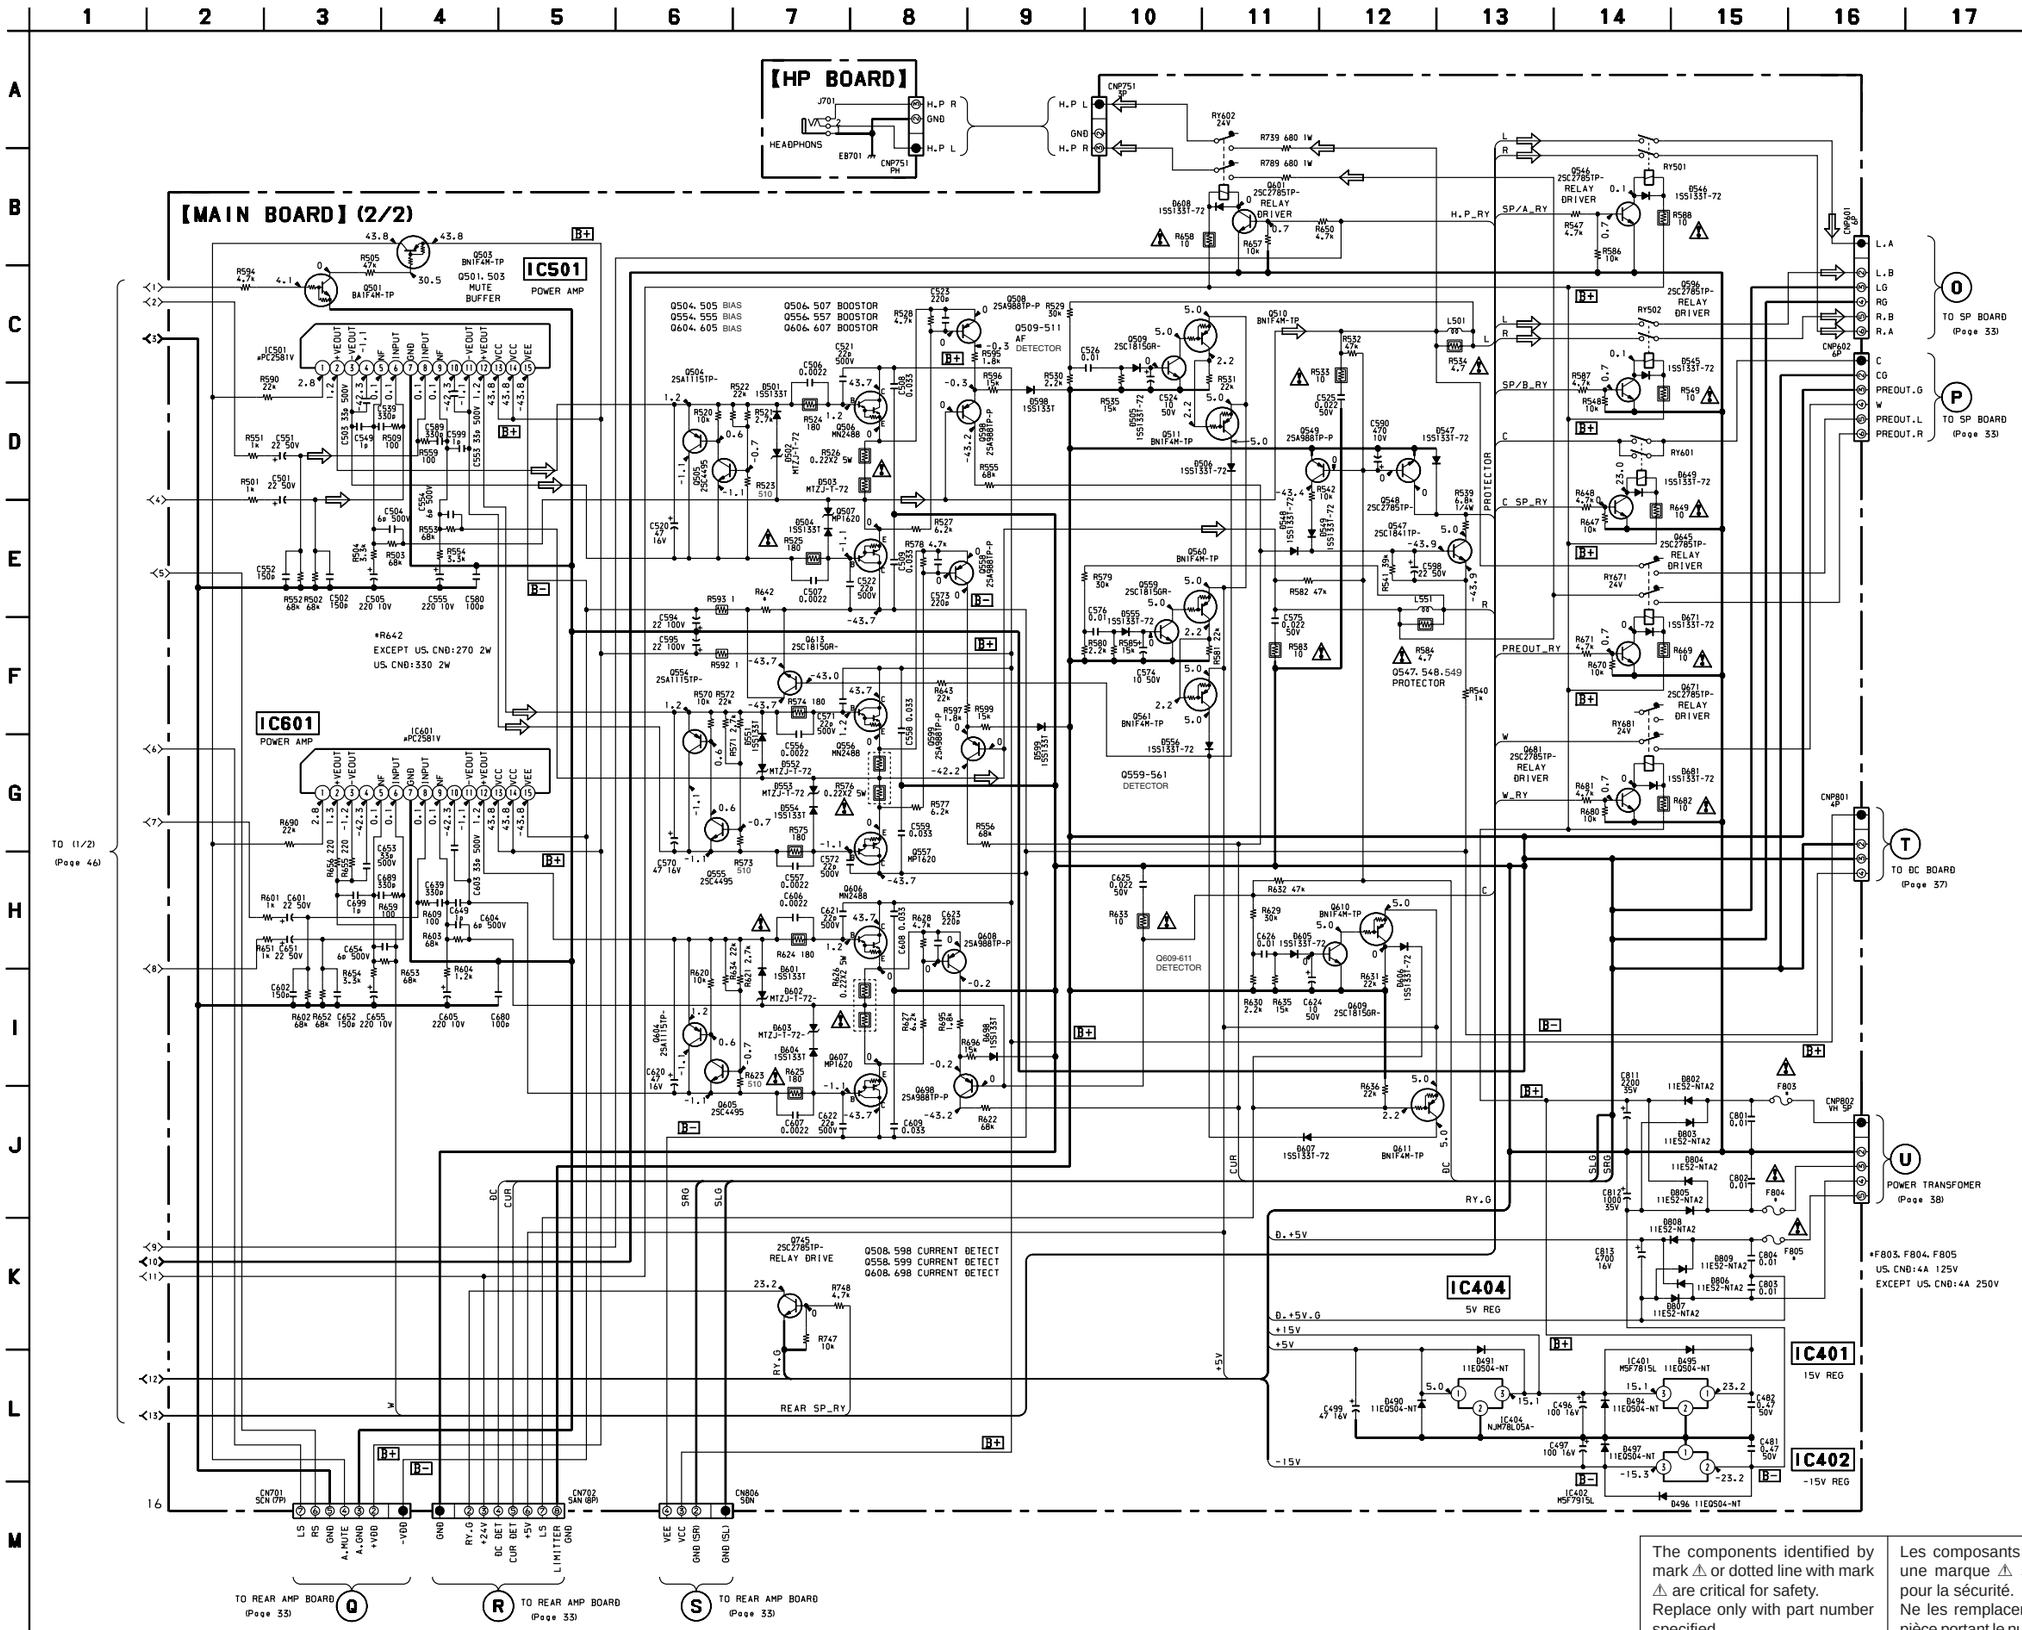

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

4-22. IC PIN FUNCTION DESCRIPTION

IC1401 CXD2712R AUDIO DSP(DIGITAL BOARD)

Pin No.	Pin Name	I/O	Description
1	VSS3	—	Ground
2 – 5	SOA – SOD	O	Serial data output
6, 7	ECJ0, ECJ1	I	Conditional jump input terminal (7pin Connected to ground)
8	—	NC	No connection
9	XHDWR	I	HCIF data write
10	XHDRD	I	HCIF data read
11	VSS4	—	Ground
12	VDD2	—	+3.3V
13	HRDY	O	HCIF ready signal Open drain
14	XHDCS	I	HCIF chip select
15	HA0	I	HCIF address input
16 – 20	HD0 – HD4	I/O	HCIF data input/output
21	VSS5	—	Ground
22	VDD3	—	+3.3V
23 – 25	HD5 – HD7	I/O	HCIF data input/output
26	XRST	I	Reset input “L”: active
27 – 30	FGP0 – FGP3	O	Test data output
31	VSS6	—	Ground
32 – 40	ED0 – ED8	I/O	External RAM data input/output
41	VSS7	—	Ground
42	VDD4	—	+3.3V
43 – 49	ED9 – ED15	I/O	External RAM data input/output
50	TSTD	I	Test data input “L” = normal “H” = test (Connected to ground)
51	VSS8	—	Ground
52	VDD5	—	+3.3V
53 – 60	ED16 – ED23	I/O	External RAM data input/output
61	VSS9	—	Ground
62 – 69	ED24 – ED31	I/O	External RAM data input/output
70	XOE	O	External RAM output enable
71	VSS10	—	Ground
72	VDD6	—	+3.3V
73	CAS	O	External RAM column address strobe (Not used)
74	XWE	O	External RAM write enable (Not used)
75	RAS	O	External RAM raw address strobe
76 – 80	EA0 – EA4	I/O	External RAM address output/test data input
81	VSS11	—	Ground
82	VDD7	—	+3.3V
83 –89	EA5 – EA11	I/O	External RAM address output/test data input
90	EA12	O	External RAM address output

Pin No.	Pin Name	I/O	Description
91	VSS0	—	Ground
92 – 94	EA13 – EA15	O	External RAM address output
95	EA16	O	Not used
96	TSTA	I	Test data input “L” = normal “H” = test (Connecting to ground)
97	PLDIVF	I	PLL input frequency select “L” = 256Fs “H” = 128Fs (Connecting to ground)
98	PLDIVB	O	PLL output frequency select “L” = 768Fs “H” = 1024Fs (Connecting to ground)
99	CLKI	I	Master clock input
100	CLKO	O	Master clock output (Not used)
101	VSS1	—	Ground
102	VDD0	—	+3.3V
103	AVSS	—	Ground for PLL cell
104	AVDD	—	VDD for PLL cell
105	PLLCK	I/O	PLL output/test clock input
106	XPLLEN	I	PLL cell oscillation enable “L” oscillation enable “H” oscillation stop (Connecting to ground)
107	TST	I	Test data input “L” = normal “H” = test (Connecting to ground)
108	LRCT	I	Frequency counter input (Connecting to ground)
109	LROUT	O	LRCK0 divider output
110	BKOUT	O	BCK0 divider output
111	VSS2	—	Ground
112	VDD1	—	+3.3V
113	BCK0	I	BCK input
114	BCK1	I	BCK input
115	LRCK0	I	LRCK input
116	LRCK1	I	LRCK input
117 – 120	SIA – SID	I	Serial data input

IC1201 MB90573PFV-G-190-BND SYSTEM CONTROL(DIGITAL BOARD)

Pin No.	Pin Name	I/O	Description
1	SCLK	O	To CXD9511Q clock
2	SI	I	To CXD9511Q data input
3	SO	O	To CXD9511Q data output
4	CS	O	To CXD9511Q chip select
5	IC	O	To CXD9511Q reset(Pull Down near CXD9511Q)
6	D.SIG	I	ZERO data detect
7	5.1CH	O	5.1CH muting.
8	VCC	—	Power supply +5 V
9	SIN0	I	UART input. Used for rewriting flash memory
10	SOT0	O	UART output. Used for rewriting flash memory
11	N.C	O	Not used (Connected to ground)
12	N.C	O	Not used (Connected to ground)
13	XHDWR	O	To CXD2712 data write
14	XHDRD	O	To CXD2712 data read
15	SOD	I	To CXD2712 LFE detection
16	XHDCS	O	To CXD2712 chip select
17	HD7	O	To CXD2712 HCIF data I/O
18	HD6	O	To CXD2712 HCIF data I/O
19	HD5	O	To CXD2712 HCIF data I/O
20	HD4	O	To CXD2712 HCIF data I/O
21	HD3	O	To CXD2712 HCIF data I/O
22	HD2	O	To CXD2712 HCIF data I/O
23	HD1	O	To CXD2712 HCIF data I/O
24	HD0	O	To CXD2712 HCIF data I/O
25	HA0	O	To CXD2712 address
26	XRST	O	To CXD2712 reset
27	HRDY	I	To CXD2712 ready
28	CS	O	To AK4526A chip select
29	CCLK	O	To AK4526A clock
30	CDTI	O	To AK4526A data input
31	CDTO	I	To AK4526A data output
32	PD	O	To AK4526A reset
33	VSS	—	Ground (Connected to ground)
34	C	—	External power regulator capacitor 0.1u is connected to this terminal.
35	96KHz	O	To AK4526A Dfs
36	N.C	I	Not used (Connected to ground)
37	N.C	I	Not used (Connected to ground)
38	DVCC	—	Digital power supply +5 V
39	DVSS	—	Digital Ground (Connected to ground)
40	N.C	O	Not used (Connected to ground)
41	N.C	—	Not used (Connected to ground)
42	AVCC	—	Analog power supply +5 V
43	AVR+	—	Power supply +5 V
44	AVR-	—	Ground (Connected to ground)
45	AVSS	—	Ground (Connected to ground)
46	EVSTB	O	To TC9299 strobe
47	EVDATA	O	To TC9299 data
48	EVCLK	O	To TC9299 clock
49	DISPMR	I	Display master request (Connected to MCU U.MREQ)
50	DISPDATA	I	Display data (Connected to MCU U.DATA)

Pin No.	Pin Name	I/O	Description
51	SLVDTA/REQ	O	Slave data/request (Connected to MCU U.SREQ)
52	DISPCLK	I	Display clock (Connected to MCU U.CLOCK)
53	N.C	I	Not used (Connected to ground)
54	VCC	—	Power supply +5 V
55	S.LAT	O	To tuner latch
56	S.DATA	O	To tuner data
57	S.CLK	O	To tuner clock
58	DATA IN	I	PLL data in
59	AUSTOP	I	Auto stop input
60	STEREO	I	Stereo input
61	N.C	I	Not used (Connected to ground)
62	N.C	I	Not used (Connected to ground)
63	VSS	—	Ground (Connected to ground)
64	N.C	I	Not used (Connected to ground)
65	TH	I	TH Protector input
66	PROTEC	I	Protector input
67	STOP	I	AC power check
68	N.C	I	Not used (Connected to ground)
69	N.C	I	Not used (Connected to ground)
70	N.C	I	Not used (Connected to ground)
71	N.C	I	Not used (Connected to ground)
72	VIDEO(SW4)	O	Video select SW4
73	X1A	—	Not used
74	X0A	—	Not used
75	VIDEO(SW3)	O	Video select SW3
76	VIDEO(SW2)	O	Video select SW2
77	VIDEO(SW1)	O	Video select SW1
78	DIGITAL 1/4	I	Digital function
79	TAPE NO/ YES	I	Tape NO/YES input
80	VIDEO3 NO/ YES	I	I VIDEO3 NO/ YES input
81	DTS NO/ YES	I	DTS NO/ YES input
82	ACMUTE	O	Power amp mute ON/OFF output
83	96K NO/YES	I	96K NO/YES input
84	T.MUTE	O	Tuner muting
85	S.MUTE	O	Surround muting (Connected to ground)
86	HSTX	—	Hardware standby (Connected to power supply +5 V)
87	MD2	—	MD2 (To MCU MD2)
88	MD1	—	MD1 (Connect to power supply)
89	MD0	—	MD0 (To MCU MD0)
90	REST	I	Reset (Connected to MB90553 U.RESET)
91	VSS	—	Ground (Connected to ground)
92	XO	—	External ceramic filter 16MHz is connected to this terminal
93	XI	—	External ceramic filter 16MHz is connected to this terminal
94	VCC	—	Power supply +5V
95	PO0	I	Flash memory rewrite (Connected to ground)
96	PO1	I	Flash memory rewrite (Connected to ground)
97	RY-4/B	O	4/8 relay
98	RY-PRE	O	Pre relay
99	RY-FRONT/A	O	Front speaker A relay
100	RY-FRONT/B	O	Front speaker B relay

Pin No.	Pin Name	I/O	Description
101	RY-CENTER	O	Center speaker relay
102	RY-REAR	O	Rear speaker relay
103	RY-WOOFER	O	Sub Woofer relay
104	RY-HP	O	Head phone relay
105	RY-POWER	O	Power relay
106	ANG/DIG	O	Analog/digital selection
107	DIG-INB	O	Digital input select B
108	DIG-INA	O	Digital input select A
109	XMODE	O	Direct pass relay
110	CL	O	To LC89055 clock
111	CE	O	To LC89055 latch
112	DI	O	To LC89055 data
113	DO	I	To LC89055 C-bit
114	ERROR	I	Error output to LC89055
115	BYSYNC	I	Non PCM sync detect flag LC89055
116	AUTO	I	Non PCM data detect flag LC89056
117	CSFLAG	I	C-bit change flag LC89055
118	XSTATE	I	Xtal status Frag LC89055
119	VSS	—	Ground (Connected to ground)
120	N.C	—	Not used (Connected to ground)

IC1503 AK4526A A/D,D/A CONVERTER (DIGITAL BOARD)

Pin No.	Pin Name	I/O	Description
1	SDOS	I	SDTO source select pin "L": internal ADC output, "H": DAUX input ORed with serial control register if P/$\overline{S}$ = "L" (Connected to ground)
2	$\overline{MCLK}$	I	MCKO clock frequency select pin "L": MCLK, "H": MCLK/2. ORed with serial control register if P/$\overline{S}$ = "L" (Connected to ground)
3	$\overline{S}$/M	I	Audio data master/slave mode select pin "L": slave mode, "H": master mode (Connected to ground)
4	BCLK	I/O	Audio serial data clock pin
5	LRCK	I/O	Input/output channel clock pin
6	SDT11	I	DAC1 audio serial data input pin
7	SDT12	I	DAC2 audio serial data input pin
8	SDT13	I	DAC3 audio serial data input pin
9	SDTO	O	Audio serial data output pin
10	DAUX	I	AUX audio serial data input pin (Connected to ground)
11	DFS	I	Double speed sampling mode pin "L": normal speed, "H": double speed ORed with serial control register if P/$\overline{S}$ = "L" (Connected to ground)
12 – 13	DEM1 – DEM0	I	De-emphasis pin ORed with serial control register if P/$\overline{S}$ = "L" (Connected to ground)
14	MCKO	O	Master clock output pin (Not used)
15	D. 5V	—	Digital power supply pin
16	D. GND	—	Digital ground pin
17	$\overline{PD}$	I	Power-down & reset pin When "L", the AK4526 is powered-down and the control registers are reset to default state. If the state of P/$\overline{S}$, M/$\overline{S}$, CAD0-1 changes, then the AK4526 must be reset by $\overline{PD}$.
18	TEST	I	X'tal oscillator select/test mode pin "H": X'tal oscillator selected "L": External clock source selected "NC": If pin is floating then test mode is enabled. (Connected to ground)
19	ICKS1	I	Input clock select 1 pin (Connected to ground)
20	ICKS0	I	Input clock select 0 pin (Connected to ground)
21	CAD1	I	Chip address pin Used during the serial control mode. (Connected to ground)
22	CAD0	I	Chip address pin Used during the serial control mode. (Connected to ground)
23	LOUT3	O	Lch #3 analog output pin
24	ROUT3	O	Rch #3 analog output pin
25	LOUT2	O	Lch #2 analog output pin
26	ROUT2	O	Rch #2 analog output pin
27	LOUT1	O	Lch #1 analog output pin
28	ROUT1	O	Rch #1 analog output pin
29	LIN–	I	Lch analog negative input pin
30	LIN+	I	Lch analog positive input pin

Pin No.	Pin Name	I/O	Description
31	RIN–	I	Rch analog negative input pin
32	RIN+	I	Rch analog positive input pin
33	VREFL	I	Negative voltage reference input pin, AVSS (Connected to ground)
34	VCOM	O	Common voltage output pin, AVDD/2 Large external capacitor is used to reduce power-supply noise
35	VREFH	I	Positive voltage reference input pin, AVDD
36	A. 5V	—	Analog power supply pin
37	A. GND	—	Analog ground pin
38	XTI	I	X'tal input pin (Not used)
39	MCLKI	I	External master clock input pin if XTS = "L"
40	S/P	I	Parallel/serial select pin "L": serial control mode, "H": parallel control mode (Connected to ground)
41	CS	I	Chip select pin in serial mode
42	CCLK	I	Control data clock pin in serial mode
43	CDTI	I	Control data input in serial mode
44	CDTO	O	Control data output pin in serial mode

If pins TEST, ICKS0, ICKS1, $\overline{PD}$, $\overline{S}$/P, DFS, DEM0, DEM1, CAD0, CAD1, $\overline{S}$/M, $\overline{MCLK}$, SDOS are not driven, then TEST, ICKS0, ICKS1, CAD0, CAD1, must be tied to either AVSS or AVDD. $\overline{PD}$, $\overline{S}$/P, DFS, DEM0, DEM1, $\overline{S}$/M, $\overline{MCLK}$, SDOS must be tied to either DVSS or DVDD.

IC102 MB90553APF-G-138-BND DISPLAY CONTROL(DISPLAY BOARD)

Pin No.	Pin Name	I/O	Description
1	LED PHONE	O	PHONO display data output to LED.
2	LED	O	TUNER display data output to LED.
3	LED	O	CD display data output to LED.
4	LED	O	MD/DAT data output to LED.
5	LED	O	TAPE display data output to LED.
6	—	O	Not used. (Connected to Ground)
7	POWER RY	O	Power reay display.
8	5V CHECK	O	Power check (+5V)
9	—	—	Not used. (Connected to Ground)
10	—	—	Not used. (Connected to Ground)
11	VSS	—	Ground (Connected to Ground)
12	—	—	Not used. (Connected to Ground)
13	—	—	Not used. (Connected to Ground)
14	—	—	Not used. (Connected to Ground)
15	—	—	Not used. (Connected to Ground)
16	—	—	Not used. (Connected to Ground)
17	—	—	Not used. (Connected to Ground)
18	—	—	Not used. (Connected to Ground)
19	FLASH DATA OUT	O	UART data output to rewrite flash memory
20	FLASH DATA IN	I	UART data intput to rewrite flash memory
21	FL CLK	O	Clock output to flourescent display tube
22	FL DATA	O	Data output to flourescent display tube
23	VCC	—	Power supply +5 V
24	FL LAT	O	Fluorescent latch
25	FL CLEAR	O	Fluorescent clear
26	SIRCS IN	I	SIRCS input
27	C	—	External power regulator capacitor 0.1µ is connected to this terminal.
28	—	—	Not used (Connected to Ground)
29	—	—	Not used (Connected to Ground)
30	—	—	Not used (Connected to Ground)
31	—	—	Not used (Connected to Ground)
32	—	—	Not used (Connected to Ground)
33	—	—	Not used (Connected to Ground)
34	AVCC	—	Analog power supply +5 V
35	AVRH	—	AVRH (Connected to power supply +5 V)
36	AVRL	—	SVRL (Connected to Ground)
37	AVSS	—	Ground (Connected to Ground)
38	KEY INPUT 1	I	Key input 1
39	KEY INPUT 2	I	Key input 2
40	KEY INPUT 3	I	Key input 3
41	KEY INPUT 4	I	Key input 4
42	VSS	—	Ground (Connected to Ground)
43	AD KEY IN 5	I	Key input 5
44	AD KEY IN 6	I	Not used (Pull up)
45	AD KEY IN 7	I	Not used (Pull up)
46	RDS SIGNAL	I	RDS signal input (AEP only)
47	STOP	I	Stop input
48	—	—	Not used (Connected to Ground)
49	MD 0	I	MD 0
50	MD 1	I	MD 1 (Connected to power supply +5 V)

Pin No.	Pin Name	I/O	Description
51	MD 2	I	MD 2
52	HW STANDBY	I	Hardware STANDBY input
53	RDS CLOCK	I	RDS clock input
54	RDS DATA	I	RDS data input
55	VOL UP	O	Volume up output
56	VOL DOWN	O	Volume down output
57	—	—	Not used (Connected to Ground)
58	U-RESET	O	Reset output (Connected to MB90573 RESET)
59	U-SREQ	I	Slave request and data input (Connected to MB90573 SLV DATA/REQ)
60	U-MREQ	O	Master request output (Connected to MB90573 DISPMR)
61	U-DATA	O	Master data output (Connected to MB90573 DISP DATA)
62	U-CLOCK	O	Master clock output (Connected to MB90573 DISPCLK)
63	AUBUS-IN	I	Audio bus input
64	SPEAKER	I	Speaker A signal input.
65	SPEAKER	I	Speaker B signal input.
66	POW-KEY IN	I	POWER-KEY input.
67	AUBUS-OUT	O	Audio bus output
68	VIRSION IN1	I	Virsion input.
69	VIRSION IN 2	I	Virsion input.
70	VIRSION IN 3	I	Virsion input.
71	VIRSION IN 4	I	Virsion input.
72	VIRSION IN 5	I	Virsion input.
73	VIRSION OUT 1	O	Virsion output.
74	VIRSION OUT 2	O	Virsion output.
75	JOG-UP	I	Function encoder up input.
76	JOG-DOWN	I	Function encoder down input.
77	RESET	I	Reset (Display MCU)
78	FUNCTION UP	I	Rotary encoder input.
79	FUNCTION DOWN	I	Rotary encoder input.
80	—	—	Not used (Connected to Ground)
81	VSS	—	Ground (Connected to Ground)
82	X0	—	External ceramic filter 4 MHz is connected to this terminal
83	X1	—	External ceramic filter 4 MHz is connected to this terminal
84	VCC	—	Power supply +5 V
85	—	—	Not used. (Connected to Ground)
86	—	—	Not used. (Connected to Ground)
87	LED CLK	I	LED clock input.
88	LED DATA	I	LED data input.
89	LED CE	I	LED chip eneble input.
90	LED CLR	I	LED clear input.
91	—	—	Not used. (Connected to Ground)
92	—	—	Not used. (Connected to Ground)
93	MBUS-V1	I	V1 input from MBUS.
94	MBUS-DVD	I	DVD input from MBUS.
95	MBUS-TV	I	TV input from MBUS.
96	MBUS-STATUS	I	STATUS input from MBUS.
97	—	—	Not used. (Connected to Ground)
98	LAT	O	Learning microprocessor latch output.
99	RESET	O	Reset.
100	—	—	Not used. (Connected to Ground)

IC1101 LC89055W DIGITAL AUDIO I/F RECEIVER (DIGITAL BOARD)

Pin No.	Pin Name	I/O	Description
1	DISEL	I	Input data select. (connected to ground.)
2	DOUT	O	EIAJ data and parity flag output terminal (Not used)
3	DIN0	I	Amplifier integrate data input terminal
4	DIN1	O	Amplifier integrate data input terminal (Connecting to ground)
5	DIN2	I	Amplifier integrate data input terminal (Connecting to ground)
6	D. GND	—	Digital ground
7	D. VDD	O	Digital power supply
8	R	I	Input terminal for VCO generator band adjustment
9	V IN	I	Input terminal for VCO self running frequency set
10	LPF	O	External LPF for PLL is connected to this terminal
11	A. VDD	—	Analog power supply
12	A. GND	—	Analog ground
13	CK OUT	—	256fs or 128fs clock output terminal (Select CLKMD terminal)
14	BCK	O	Bit clock output terminal
15	LRCK	O	L, R clock output terminal (L-ch: “H”, R-ch: “L”)
16	DATA O	O	Audio data output terminal
17	XSTATE	O	Xtal status frag output.
18	D. GND	—	Digital ground
19	D. VDD	—	Digital power supply
20	XMCK	—	Not used.
21	XOUT	O	Crystal oscillator output terminal (Not used.)
22	XIN	I	Crystal oscillator input terminal
23	EMPHA	O	Emphasis monitor output terminal (“H” = ON) (Not used.)
24	AUDIO	—	Not used.
25	CSFLAG	O	C-bit change frag output.
26	F0/P0/C0	—	Not used.
27	F1/P1/C1	—	Not used.
28	F2/P2/C2	—	Not used.
29	F3/P3/C3	—	Not used.
30	D. VDD	—	Digital power supply
31	D. GND	—	Digital ground
32	AUTO	O	Non PCM data detect flag output.
33	BPSYNC	O	Non PCM sync detect flag output.
34	ERROR	O	Error mute output terminal
35	DO	O	Microprocessor I/F. When CCB/$\overline{\text{SUB}}$ is “H”, data output terminal (high level open drain output) (Not used)
36	DI	I	Microprocessor I/F. Data input terminal
37	CE	I	Microprocessor I/F. Chip enable/latch input terminal
38	CLK	I	Microprocessor I/F. Clock input terminal
39	XSEL	I	Xtal select. (Connected to +5V.)
40	MODE0	I	Mode 0 input. (Connected to ground.)
41	MODE1	I	Mode 1 input. (Connected to ground.)
42	D. GND	—	Digital ground
43	D. VDD	—	Digital power supply
44	DOSEL0	O	Output data select 0. (Connected to ground.)
45	DOSEL1	O	Output data select 1. (Connected to ground.)
46	CKSEL0	I	System clock select input 0. (Connected to ground.)
47	CKSEL1	I	System clock select input 1. (Connected to ground.)
48	XMODE	I	Reset input.

4-23. IC BLOCK DIAGRAMS

IC1206 NJM2103M (DIGITAL BOARD)

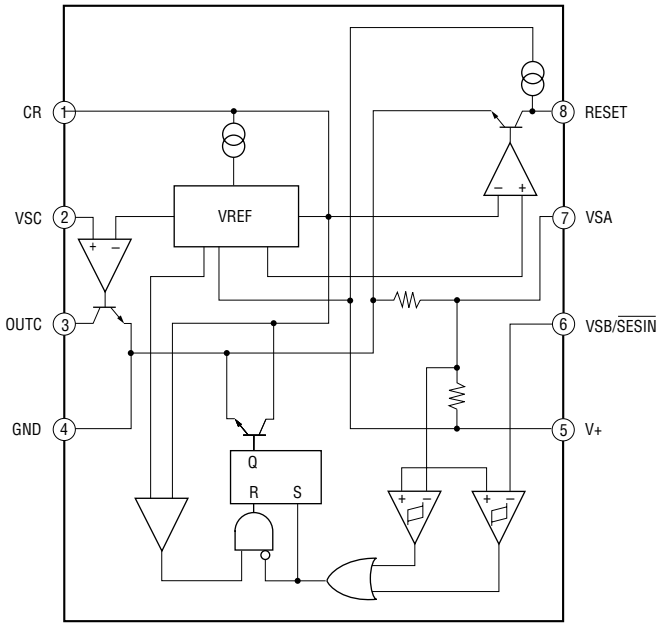

IC1 BU1924F (TUNER BOARD)

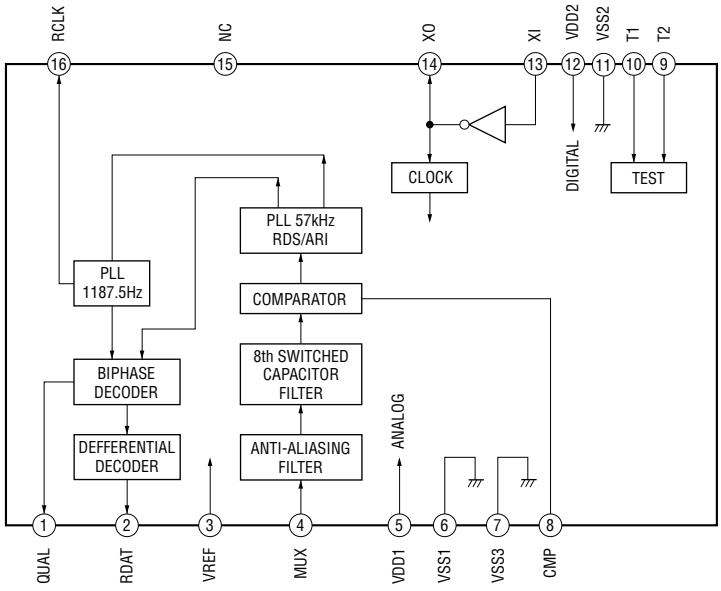

IC414, 415, 416 TC9299P (MAIN BOARD)

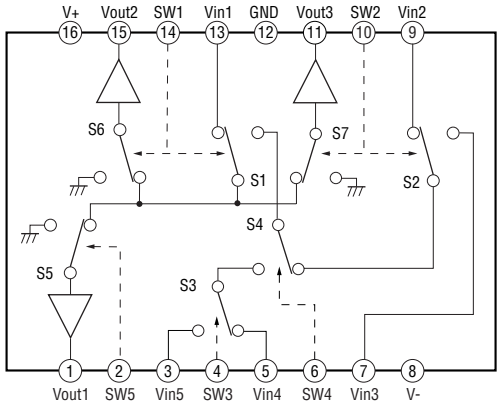

IC501, 601 µPC2581V (MAIN BOARD)

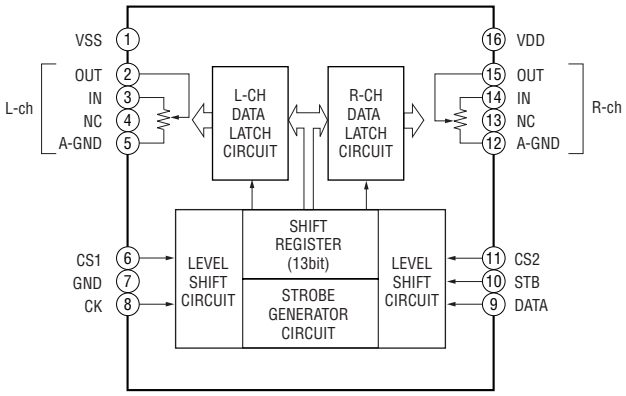

IC701 µPC2581V (REAR AMP BOARD)

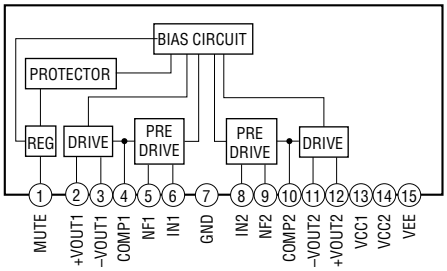
BIAS CIRCUIT
PROTECTOR
REG
DRIVE
PRE DRIVE
PRE DRIVE
DRIVE
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
MUTE +VOUT1 –VOUT1 COMP1 NF1 IN1 GND IN2 NF2 COMP2 –VOUT2 +VOUT2 VCC1 VCC2 VEE

IC201 NJM2296M (VIDEO BOARD)

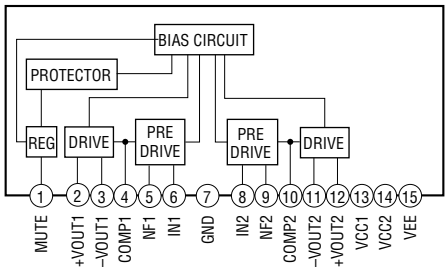
BIAS CIRCUIT
PROTECTOR
REG
DRIVE
PRE DRIVE
PRE DRIVE
DRIVE
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
MUTE +VOUT1 –VOUT1 COMP1 NF1 IN1 GND IN2 NF2 COMP2 –VOUT2 +VOUT2 VCC1 VCC2 VEE

IC251, 252 NJM2296M (S VIDEO BOARD)

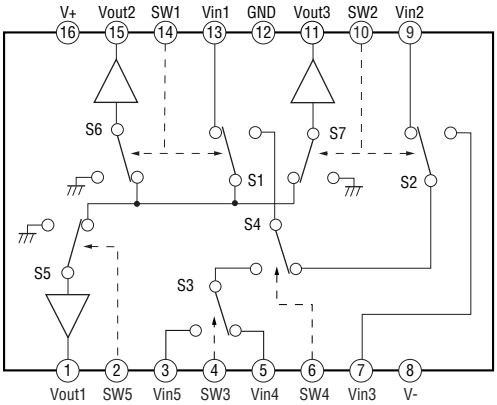

IC103 TD62C950RF (DISPLAY BOARD)

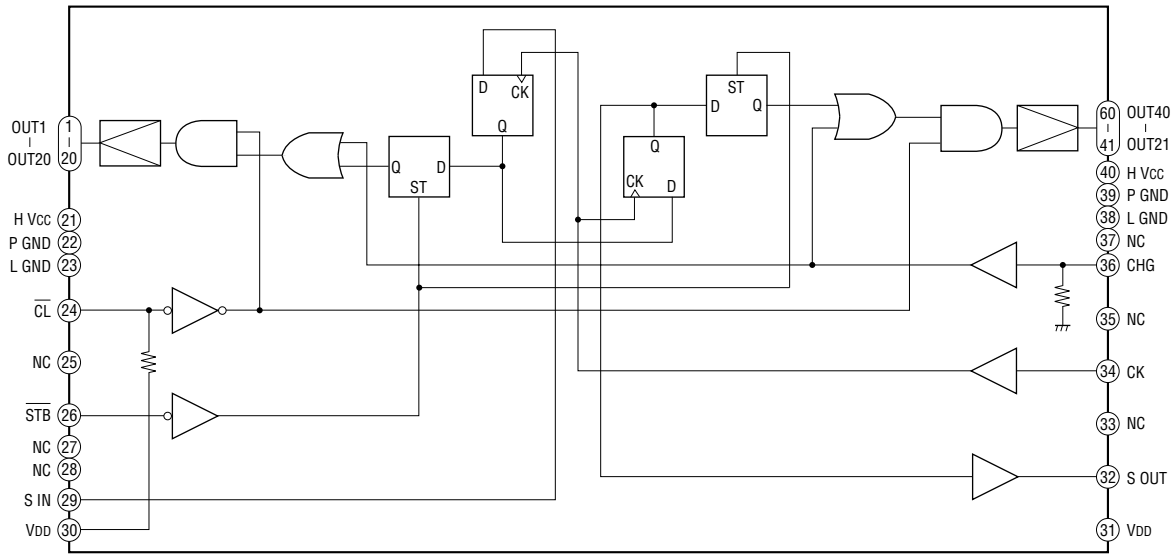

IC104 MSC1164GS (DISPLAY BOARD)

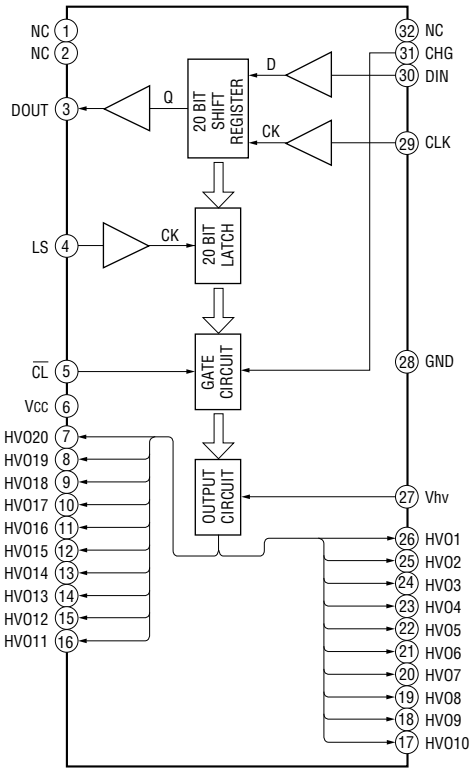

IC105 BA6208F (DISPLAY BOARD)

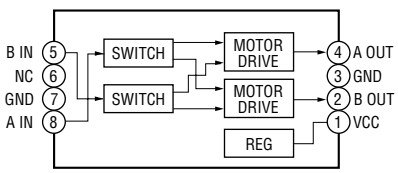

SECTION 5
EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ ↑
  Parts of Color Cabinet's Color
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
  CND : Canadian model
  AUS : Australian model
  MY : Malaysia model
  SP : Singapore model
  CH : Chinese model

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和⚠标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

5-1. FRONT PANEL SECTION

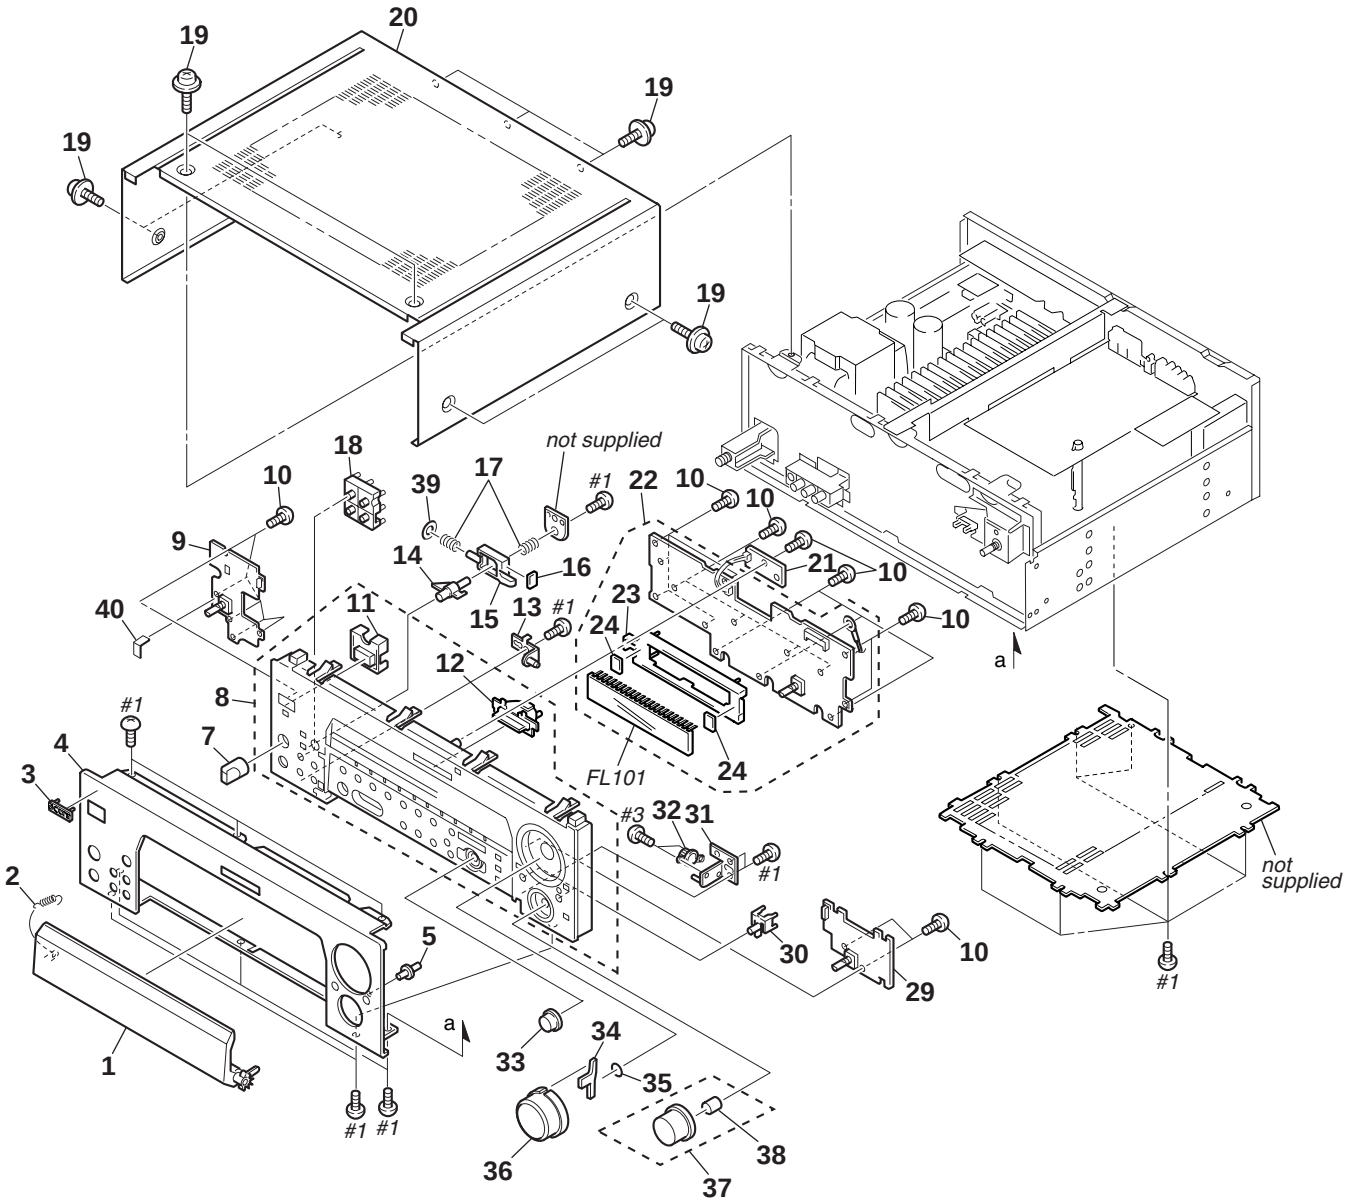

Ref. No.	Part No.	Description	Remarks
1	A-4411-475-A	LID ASSY (DB930:US,CND,AUS)	
1	A-4411-476-A	LID ASSY (DB930:MY,SP)(BLACK)	
1	A-4411-477-A	LID ASSY (V929X)	
1	A-4411-478-A	LID ASSY (DB830:US)	
1	A-4411-480-A	LID ASSY (DB830:AEP)	
1	A-4411-524-A	LID ASSY (DB930:AEP)(SILVER)	
1	A-4411-665-A	LID ASSY (DB930:AEP)(BLACK)	
1	A-4411-743-A	LID ASSY (DB930:MY,SP)(SILVER)	
2	4-217-731-01	SPRING, TENSION	
3	4-942-568-41	EMBLEM (NO.5), SONY (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
3	4-942-568-51	EMBLEM (NO.5), SONY (V929X)	
3	4-942-568-61	EMBLEM (NO.5), SONY (DB930:AEP,MY,SP) (SILVER)	
4	4-217-713-01	PANEL, FRONT (DB930:US,CND,MY,SP,AUS) (BLACK)	
4	4-217-713-11	PANEL, FRONT (V929X)	
4	4-217-713-21	PANEL, FRONT (DB830:US)	
4	4-217-713-41	PANEL, FRONT (DB930:AEP)(SILVER)	
4	4-217-713-51	PANEL, FRONT (DB930:AEP)(BLACK)	
4	4-217-713-61	PANEL, FRONT (DB830:AEP)	
4	4-217-713-71	PANEL, FRONT (DB930:MY,SP)(SILVER)	
* 5	X-4950-462-1	LENS ASSY, LED	
7	4-957-383-01	KNOB (F14) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
7	4-957-383-21	KNOB (F14) (V929X)	
7	4-957-383-41	KNOB (F14) (DB930:AEP,MY,SP)(SILVER)	
8	X-4951-215-1	BASE ASSY, PANEL (DB830:US)	
8	X-4951-217-1	BASE ASSY, PANEL (DB830:AEP)	
8	X-4951-218-1	BASE ASSY, PANEL (DB930:AEP)(SILVER)	
8	X-4951-222-1	BASE ASSY, PANEL (DB930:US,CND,AUS)	
8	X-4951-223-1	BASE ASSY, PANEL (DB930:MY,SP)(BLACK)	
8	X-4951-224-1	BASE ASSY, PANEL (V929X)	
8	X-4951-225-1	BASE ASSY, PANEL (DB930:AEP)(BLACK)	
8	X-4951-830-1	BASE ASSY, PANEL (DB930:MY,SP)(SILVER)	
9	1-673-363-11	SP-SW BOARD	
10	4-951-620-01	SCREW (2.6 × 8), +BVTP	
11	4-998-592-01	BUTTON (POWER) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
11	4-998-592-12	BUTTON (POWER) (V929X)	
11	4-998-592-23	BUTTON (POWER)(DB930:AEP,MY,SP)(SILVER)	
12	X-3375-588-1	ESCUTCHEON (WIN) ASSY (DB830,DB930)	
12	X-4950-348-1	ESCUTCHEON (WIN) ASSY (V929X)	
13	X-4951-180-1	BRACKET (FULCRUM) ASSY	
14	4-217-721-01	BUTTON (OPEN) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
14	4-217-721-11	BUTTON (OPEN)(V929X)	
14	4-217-721-21	BUTTON (OPEN)(DB930:AEP,MY,SP)(SILVER)	
15	4-217-722-01	LEVER (OPEN)	
16	4-221-143-01	CUSHION (LEVER)	
17	4-217-730-01	SPRING, COMPRESSION	
18	4-900-563-41	BUTTON (5) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
18	4-900-563-51	BUTTON (5)(V929X)	
18	4-900-563-61	BUTTON (5)(DB930:AEP,MY,SP)(SILVER)	
19	4-210-291-01	SCREW (CASE 3 TP2) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
19	4-210-291-11	SCREW (CASE 3 TP2) (DB930:AEP,MY,SP,V929X)(SILVER)	
20	X-4950-430-2	CASE ASSY (V929X)	
* 20	X-4950-431-11	CASE ASSY (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
* 20	X-4950-432-1	CASE ASSY (DB930:AEP,MY,SP)(SILVER)	
* 20	X-4950-437-1	CASE ASSY (V929X)	
21	1-673-366-11	LED BOARD	
22	A-4419-341-A	DISPLAY BOARD, COMPLETE (DB830:US)	
22	A-4419-343-A	DISPLAY BOARD, COMPLETE (DB830:AEP)	
22	A-4419-344-A	DISPLAY BOARD, COMPLETE (DB930:US,CND)	
22	A-4419-345-A	DISPLAY BOARD, COMPLETE (DB930:MY,SP,V929X)	
22	A-4419-346-A	DISPLAY BOARD, COMPLETE (DB930:AUS)	
22	A-4419-347-A	DISPLAY BOARD, COMPLETE (DB930:AEP)	
* 23	4-990-797-01	HOLDER (FL)	
* 24	4-921-941-01	CUSHION (FL)	
29	1-673-364-11	ROTARY BOARD	
30	4-900-491-01	BUTTON (MUTE) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
30	4-900-491-11	BUTTON (MUTE)(V929X)	
30	4-900-491-22	BUTTON (MUTE)(DB930:AEP,MY,SP)(SILVER)	
31	X-4951-179-1	BRACKET (DAMPER) ASSY	
32	3-973-975-31	DAMPER, OIL	
33	4-217-729-01	KNOB (JOG) (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
33	4-217-729-11	KNOB (JOG) (V929X)	
33	4-217-729-21	KNOB (JOG) (MDB930:AEP,MY,SP)(SILVER)	
34	4-998-207-11	INDICATOR (VOL)	
35	3-350-426-01	SPRING, RING	
36	X-3375-592-1	KNOB (VOL) ASSY (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
36	X-4949-977-1	KNOB (VOL) ASSY (V929X)	
36	X-4950-340-11	KNOB (VOL) ASSY (DB930:AEP,MY,SP)(SILVER)	
37	X-4948-601-1	KNOB (FUNC) ASSY (DB830/DB930:US,CND,AEP,MY,SP,AUS)(BLACK)	
37	X-4948-634-1	KNOB (FUNC) ASSY (V929X)	
37	X-4950-280-1	KNOB (FUNC) ASSY (DB930:AEP,MY,SP) (SILVER)	
38	3-703-466-00	SPRING (6600)	
39	3-701-442-21	WASHER 6	
40	3-831-441-89	CUSHION, STOPPER	
FL101	1-517-781-11	INDICATOR TUBE, FLUORESCENT	

5-2. CHASSIS SECTION

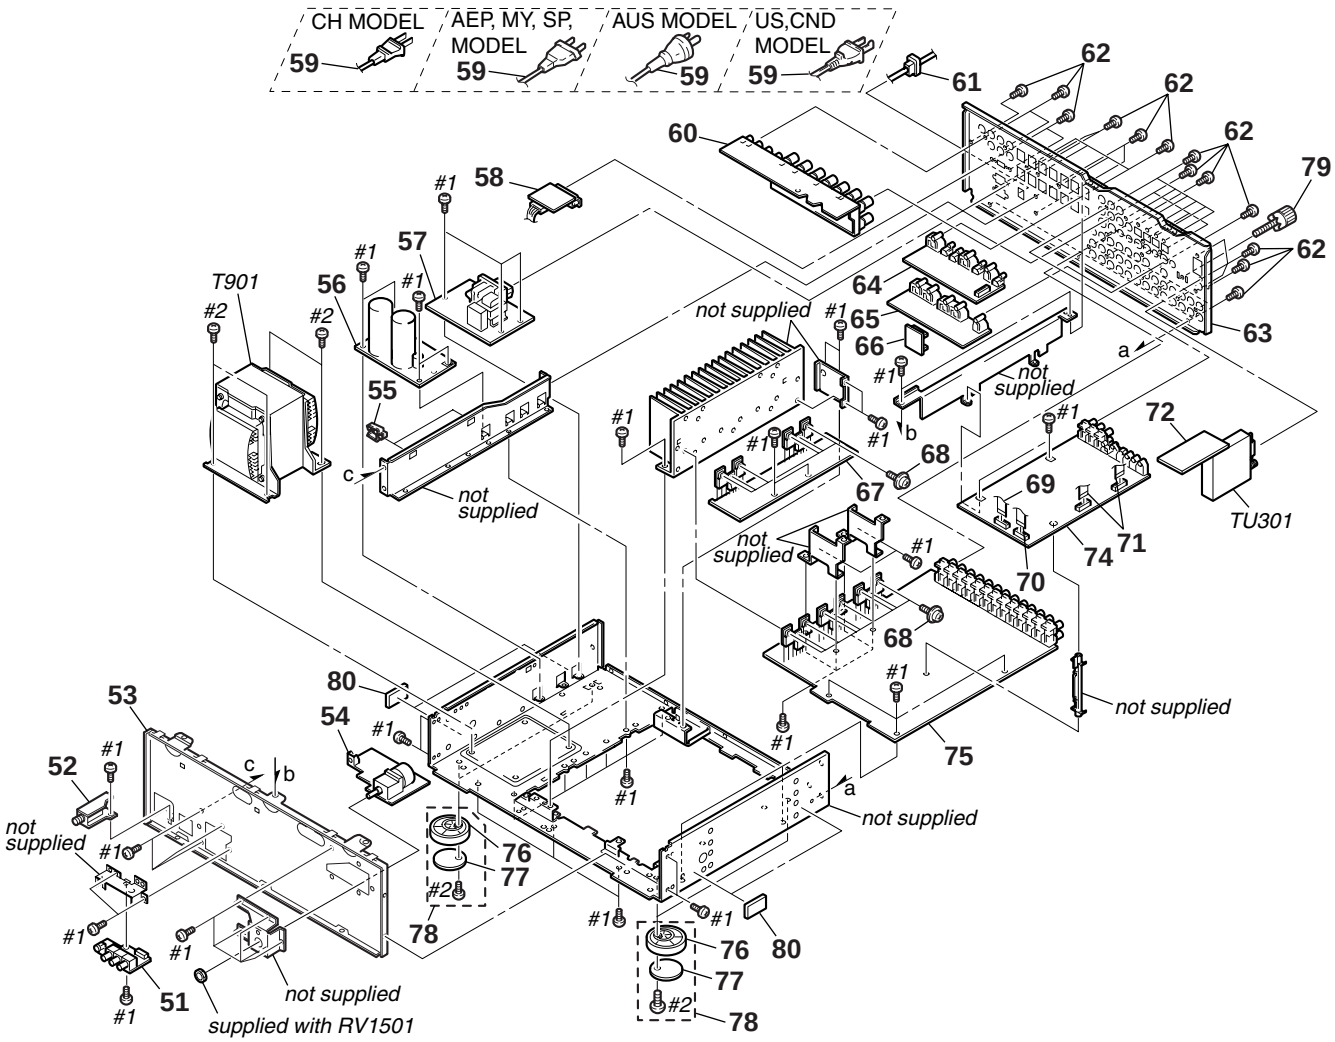

Ref. No.	Part No.	Description	Remarks
51	1-673-367-11	F-VIDEO BOARD	
52	1-673-365-11	H.P BOARD	
53	X-4951-757-1	CHASSIS ASSY, SUB	
54	1-673-362-11	VOLUME BOARD	
55	4-309-753-21	HOLDER, WIRE	
56	1-673-354-11	DC BOARD	
* 57	1-673-353-11	AC BOARD	
* 58	1-673-359-11	4/8 BOARD	
⚠59	1-696-847-11	CORD, POWER (DB930:AUS)	
⚠59	1-769-743-11	CORD, POWER (DB930:CND)	
⚠59	1-769-744-11	CORD, POWER (DB830:AEP/DB930:AEP,MY,SP)	
⚠59	1-782-464-21	CORD, POWER (V929X)	
⚠59	1-783-531-11	CORD, POWER (DB830:US/DB930:US)	
60	1-673-355-11	SP BOARD	
* 61	3-703-244-00	BUSHING (2104), CORD (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)	
61	4-916-783-01	BUSHING, CORD (DB830:US/DB930:US,CND)	
62	3-704-515-21	SCREW (BV/RING)	
63	4-217-716-01	PANEL, BACK (DB930:US)	
63	4-217-716-11	PANEL, BACK (DB930:CND)	
63	4-217-716-21	PANEL, BACK (DB930:MY,SP)	
63	4-217-716-31	PANEL, BACK (V929X)	
63	4-217-716-41	PANEL, BACK (DB930:AUS)	
63	4-217-716-51	PANEL, BACK (DB930:AEP)	
63	4-217-716-61	PANEL, BACK (DB830:US)	
63	4-217-716-91	PANEL, BACK (DB830:AEP)	
64	A-4419-368-A	S-VIDEO BOARD, COMPLETE (DB830:US)	
64	A-4419-369-A	S-VIDEO BOARD, COMPLETE (DB830:AEP)	
64	A-4419-370-A	S-VIDEO BOARD, COMPLETE (DB930:US,CND)	
64	A-4419-371-A	S-VIDEO BOARD, COMPLETE (DB930:AEP,MY,SP,AUS/V929X)	
65	1-673-356-11	VIDEO BOARD	
66	1-673-941-11	JOINT(Q) BOARD	
67	A-4419-339-A	REAR-AMP BOARD, COMPLETE (DB930,V929X)	
67	A-4419-338-A	REAR-AMP BOARD, COMPLETE (DB830)	
68	3-905-609-11	SCREW (TRANSISTOR)	
69	1-773-117-11	WIRE (FLAT TYPE)(19 CORE) (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)	
69	1-773-185-11	WIRE (FLAT TYPE) (23 CORE) (DB830:US/DB930:US,CND)	
70	1-773-048-11	WIRE (FLAT TYPE)(17 CORE)	
71	1-773-001-11	WIRE (FLAT TYPE)(15 CORE)	
72	1-673-358-11	TUNER BOARD	
74	A-4419-374-A	DIGITAL BOARD, COMPLETE (DB830:US)	
* 74	A-4419-375-A	DIGITAL BOARD, COMPLETE (DB930:US,CND)	
74	A-4426-041-A	DIGITAL BOARD, COMPLETE (DB830:AEP)	
74	A-4426-042-A	DIGITAL BOARD, COMPLETE (DB930:AEP,MY,SP,AUS/V929X)	
75	A-4419-333-A	MAIN BOARD, COMPLETE (DB830:US)	
75	A-4419-334-A	MAIN BOARD, COMPLETE (DB830:AEP)	
75	A-4419-335-A	MAIN BOARD, COMPLETE (DB930:US,CND)	
75	A-4419-336-A	MAIN BOARD, COMPLETE (DB930:MY,SP,AUS,V929X)	
75	A-4419-337-A	MAIN BOARD, COMPLETE (DB930:AEP)	
76	4-970-123-01	FOOT (F50180S) (DB830:US/DB930:US,CND)	
77	4-970-124-01	CUSHION (F50180S) (DB830:US/DB930:US,CND,V929X)	
78	X-4949-523-1	FOOT ASSY (F50180S) (DB830:AEP/DB930:AEP,AUS)	
78	X-4949-878-1	FOOT ASSY (F50180S) (V929X)	
79	4-947-010-01	SCREW, FEEDER FIXED	
80	4-985-642-01	CUSHION	
⚠T901	1-433-772-11	TRANSFORMER, POWER (DB930:MY,SP/V929X)	
⚠T901	1-433-776-11	TRANSFORMER, POWER (DB830:US/DB930:US)	
⚠T901	1-433-777-11	TRANSFORMER, POWER (DB930:CND)	
⚠T901	1-433-778-11	TRANSFORMER, POWER (DB830:AEP/DB930:AEP)	
⚠T901	1-433-780-11	TRANSFORMER, POWER (DB930:AUS)	
TU301	1-693-407-11	TUNER (DB830:US/DB930:US,CND)	
TU301	1-693-409-11	TUNER (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

4/8 AC DC

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
  uF: µF
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- COILS
  uH: µH
- Abbreviation
  CND : Canadian model
  AUS : Australian model
  MY : Malaysia model
  SP : Singapore model
  CH : Chinese model
- SEMICONDUCTORS
  In each case, u: µ, for example:
  uA...: µA... , uPA... , µPA... ,
  uPB... , µPB... , uPC... , µPC... ,
  uPD..., µPD...

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和⚠标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
*	1-673-359-11	4/8 BOARD			
		********			
		< CONNECTOR >			
CNP809	1-785-102-11	PIN, CONNECTOR 4P			
* CNP805	1-564-216-00	PIN, CONNECTOR 5P			
		< DIODE >			
D804	8-719-053-18	DIODE 1SR154-400TE-25			
D805	8-719-053-18	DIODE 1SR154-400TE-25			
		< SWITCH >			
S801	1-571-309-11	SWITCH (INPEDANCE SELECTOR)			
**********					
*	1-673-353-11	AC BOARD			
		********			
	1-533-217-41	HOLDER, FUSE			
		< CAPACITOR >			
C901	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C902	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C905	1-126-767-11	ELECT	1000uF	20%	16V
		< JACK >			
⚠CNJ901	1-251-718-11	OUTLET (2 GANG), AC			(US,CND,CH)(AC OUTLET)
⚠CNJ901	1-785-285-11	OUTLET, AC (1P)(AEP,MY,SP)(AC OUTLET)			
⚠CNJ901	1-251-417-11	OUTLET, AC (AUS)(AC OUTLET)			
		< CONNECTOR >			
CNP809	1-784-921-11	PIN, CONNECTOR 4P			
		< CONNECTOR >			
CNV901	1-564-321-00	PIN, CONNECTOR 2P			
* CNV902	1-565-792-11	PIN, CONNECTOR 2P			
		< DIODE >			
D901	8-719-053-18	DIODE 1SR154-400TE-25			
D902	8-719-053-18	DIODE 1SR154-400TE-25			
D903	8-719-053-18	DIODE 1SR154-400TE-25			
D904	8-719-053-18	DIODE 1SR154-400TE-25			
D905	8-719-801-78	DIODE 1SS184-TE85L			
D907	8-719-016-74	DIODE 1SS352-TPH3			

Ref. No.	Part No.	Description			Remarks
		< EARTH >			
* EB901	1-537-738-21	TERMINAL, EARTH (US,CND)			
		< FUSE >			
⚠F901	1-533-311-11	FUSE, GLASS CYLINDRICAL(DIA.5) 8A/125V			(US,CND)
⚠F901	1-532-504-51	FUSE TIME LAG 4A/250V (EXCEPT US,CND)			
⚠F903	1-532-464-51	FUSE TIME LAG 2.5A/250V (EXCEPT US,CND)			
		< TRANSISTOR >			
Q901	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L			
		< RESISTOR >			
R902	1-216-073-00	METAL CHIP	10K	5%	1/10W
R903	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
		< RELAY >			
RY901	1-755-298-11	RELAY			
		< TRANSFORMER >			
⚠T902	1-433-685-11	TRANSFORMER, POWER (AEP,MY,SP,AUS,CH)			
⚠T902	1-433-686-11	TRANSFORMER, POWER (US,CND)			
**********					
*	1-673-354-11	DC BOARD			
		********			
	1-533-217-41	HOLDER, FUSE			
		< CAPACITOR >			
C801	1-104-664-11	ELECT	47uF	20%	25V
C803	1-125-900-12	ELECT	15000uF	20%	71V (DB930/V929X)
C803	1-125-895-11	ELECT	12000uF	20%	71V (DB830)
C804	1-125-900-12	ELECT	15000uF	20%	71V (DB930/V929X)
C804	1-125-895-11	ELECT	12000uF	20%	71V (DB830)
C805	1-130-781-00	FILM	0.22uF	10%	100V
C806	1-130-781-00	FILM	0.22uF	10%	100V
C807	1-128-555-91	ELECT	470uF	20%	63V
C808	1-126-967-11	ELECT	47uF	20%	50V
C809	1-126-967-11	ELECT	47uF	20%	50V

Ref. No.	Part No.	Description			Remarks
		< CONNECTOR >			
CNP801	1-785-102-21	PIN, CONNECTOR 4P			
CNP802	1-785-102-11	PIN, CONNECTOR 4P			
* CNP803	1-564-104-00	PIN, CONNECTOR (B3P-VH) 3P			
CNP804	1-779-978-11	PIN, CONNECTOR 3P			
		< DIODE >			
D801	8-719-072-05	DIODE RBV-602LF-A			
D806	8-719-070-30	DIODE PTZ-TE25-5.6A			
D810	8-719-074-75	DIODE PTZ-TE25-30B			
		< EARTH >			
* EB801	1-537-738-21	TERMINAL, EARTH (DB830/DB930:AEP)			
		< FUSE >			
⚠F801	1-533-311-11	FUSE, GLASS CYLINDRICAL(DIA.5) 8A/125V			
⚠F802	1-533-311-11	FUSE, GLASS CYLINDRICAL(DIA.5) 8A/125V			
		< TRANSISTOR >			
Q801	8-729-048-78	TRANSISTOR 2SD1733-TL-QR			
		< RESISTOR >			
⚠R801	1-247-727-11	CARBON	10	5% 1/2W F	
⚠R802	1-249-401-11	CARBON	47	5% 1/4W F	
R803	1-216-061-00	METAL CHIP	3.3K	5% 1/10W	
R804	1-216-081-00	METAL CHIP	22K	5% 1/10W	
**********					
	A-4419-374-A	DIGITAL BOARD, COMPLETE (DB830:US)			
		**********			
	A-4426-041-A	DIGITAL BOARD, COMPLETE (DB830:AEP)			
		**********			
	A-4426-042-A	DIGITAL BOARD, COMPLETE			
		**********			
		(DB930:AEP,MY,SP,AUS/V929X)			
*	A-4419-375-A	DIGITAL BOARD, COMPLETE (DB930:US,CND)			
		**********			
		< CAPACITOR >			
C1001	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1002	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1003	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1004	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1005	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1006	1-124-472-11	ELECT	470uF	20% 10V	
C1007	1-119-825-41	ELECT	22uF	20% 50V	
C1008	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1009	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1010	1-163-217-11	CERAMIC CHIP	1PF	0.25PF 50V	
C1011	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1012	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1013	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1014	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1015	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	

Ref. No.	Part No.	Description			Remarks
C1016	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1017	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V	
C1018	1-163-275-11	CERAMIC CHIP	0.001uF	5% 50V	
C1019	1-163-275-11	CERAMIC CHIP	0.001uF	5% 50V	
C1020	1-163-243-11	CERAMIC CHIP	47PF	5% 50V	
C1031	1-163-275-11	CERAMIC CHIP	0.001uF	5% 50V	
C1101	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1102	1-119-799-11	ELECT	47uF	20% 16V	
C1103	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1104	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V	
C1105	1-119-799-11	ELECT	47uF	20% 16V	
C1106	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1107	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V	
C1108	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1109	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1110	1-163-275-11	CERAMIC CHIP	0.001uF	5% 50V	
C1111	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1156	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V	
C1157	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1201	1-119-824-31	ELECT	10uF	20% 50V	
C1202	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1203	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1204	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1205	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1206	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V	
C1207	1-119-799-11	ELECT	47uF	20% 16V	
C1208	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1209	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1210	1-119-799-11	ELECT	47uF	20% 16V	
C1211	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1212	1-163-251-11	CERAMIC CHIP	100PF	5% 50V	
C1213	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1214	1-119-799-11	ELECT	47uF	20% 16V	
C1215	1-119-792-21	ELECT	470uF	20% 16V	
C1216	1-119-792-21	ELECT	470uF	20% 16V	
C1217	1-119-792-21	ELECT	470uF	20% 16V	
C1218	1-126-959-11	ELECT	0.47uF	20% 50V	
C1219	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1220	1-126-957-11	ELECT	0.22uF	20% 50V	
C1221	1-119-824-31	ELECT	10uF	20% 50V	
C1222	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1223	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1224	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1225	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1226	1-126-960-11	ELECT	1uF	20% 50V	
C1227	1-119-799-11	ELECT	47uF	20% 16V	
C1228	1-163-021-91	CERAMIC CHIP	0.01uF	10% 50V	
C1229	1-119-792-21	ELECT	470uF	20% 16V	
				(EXCEPT DB830 : US,AEP)	(SUFFIX-12)
C1229	1-127-720-91	ELECT	470uF	20% 16V	
				(DB830 : US,AEP)	(SUFFIX-12)
C1230	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(SUFFIX-12)

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

DIGITAL

Ref. No.	Part No.	Description			Remarks
C1301	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1303	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1304	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1305	1-119-799-11	ELECT	47uF	20%	16V
C1306	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C1307	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1309	1-124-472-11	ELECT	470uF	20%	10V
C1310	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1311	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1312	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1313	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1314	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1315	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C1401	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1402	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1403	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C1404	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1405	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1406	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1407	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1408	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1409	1-119-799-11	ELECT	47uF	20%	16V
C1410	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1411	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1412	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1413	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1414	1-119-799-11	ELECT	47uF	20%	16V
C1416	1-119-799-11	ELECT	47uF	20%	16V
C1417	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1501	1-119-799-11	ELECT	47uF	20%	16V
C1502	1-119-799-11	ELECT	47uF	20%	16V
C1503	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C1504	1-119-799-11	ELECT	47uF	20%	16V
C1505	1-119-799-11	ELECT	47uF	20%	16V
C1507	1-119-825-41	ELECT	22uF	20%	50V
C1508	1-119-825-41	ELECT	22uF	20%	50V
C1509	1-119-799-11	ELECT	47uF	20%	16V
C1510	1-119-825-41	ELECT	22uF	20%	50V
C1511	1-119-825-41	ELECT	22uF	20%	50V
C1512	1-119-799-11	ELECT	47uF	20%	16V
C1513	1-119-824-31	ELECT	10uF	20%	50V
C1514	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1515	1-119-824-31	ELECT	10uF	20%	50V
C1516	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1517	1-119-825-41	ELECT	22uF	20%	50V
C1518	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1519	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1520	1-119-825-41	ELECT	22uF	20%	50V
C1522	1-119-825-41	ELECT	22uF	20%	50V
C1523	1-106-347-00	MYLAR	1500PF	5%	200V
C1524	1-119-825-41	ELECT	22uF	20%	50V
C1525	1-119-825-41	ELECT	22uF	20%	50V
C1526	1-119-825-41	ELECT	22uF	20%	50V
C1527	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1529	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1531	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1533	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1535	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1537	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1539	1-119-799-11	ELECT	47uF	20%	16V

Ref. No.	Part No.	Description			Remarks
C1540	1-119-799-11	ELECT	47uF	20%	16V
C1541	1-119-799-11	ELECT	47uF	20%	16V
C1542	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1543	1-119-825-41	ELECT	22uF	20%	50V
C1544	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1545	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1546	1-119-825-41	ELECT	22uF	20%	50V
C1547	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1548	1-119-825-41	ELECT	22uF	20%	50V
C1549	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1550	1-119-825-41	ELECT	22uF	20%	50V
C1551	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1552	1-119-825-41	ELECT	22uF	20%	50V
C1553	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V
C1554	1-119-825-41	ELECT	22uF	20%	50V
C1560	1-119-825-41	ELECT	22uF	20%	50V
C1561	1-119-825-41	ELECT	22uF	20%	50V
C1562	1-119-825-41	ELECT	22uF	20%	50V
C1563	1-119-825-41	ELECT	22uF	20%	50V
C1564	1-119-825-41	ELECT	22uF	20%	50V
C1565	1-119-825-41	ELECT	22uF	20%	50V
C1570	1-119-824-31	ELECT	10uF	20%	50V
C1571	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C1572	1-119-825-41	ELECT	22uF	20%	50V
C1573	1-106-347-00	MYLAR	1500PF	5%	200V
C1574	1-119-825-41	ELECT	22uF	20%	50V
C1575	1-119-825-41	ELECT	22uF	20%	50V
C1576	1-119-825-41	ELECT	22uF	20%	50V
C3118	1-163-233-11	CERAMIC CHIP	18PF	5%	50V
C3119	1-163-233-11	CERAMIC CHIP	18PF	5%	50V

< CONNECTOR >

CNP1301	1-784-923-11	PIN, CONNECTOR 7P
CNP1302	1-779-799-11	PIN, CONNECTOR 9P
CNP1303	1-779-977-11	PIN, CONNECTOR 6P
CNP1305	1-784-923-11	PIN, CONNECTOR 7P
CNS1301	1-784-778-11	CONNECTOR, FFC 17P
CNS1302	1-784-776-11	CONNECTOR, FFC 15P
CNS1303	1-784-780-11	CONNECTOR, FFC 19P (DB830:AEP/DB930:AEP,MY,SP,AUS/V929X)
CNS1303	1-784-784-11	CONNECTOR, FFC 23P (DB830:US/DB930:US,CND)
CNS1304	1-784-776-11	CONNECTOR, FFC 15P

< DIODE >

D1001	8-719-016-74	DIODE 1SS352-TPH3
D1002	8-719-016-74	DIODE 1SS352-TPH3
D1101	8-719-016-74	DIODE 1SS352-TPH3
D1102	8-719-016-74	DIODE 1SS352-TPH3
D1201	8-719-016-74	DIODE 1SS352-TPH3
D1202	8-719-016-74	DIODE 1SS352-TPH3
D1203	8-719-801-78	DIODE 1SS184-TE85L
D1204	8-719-801-78	DIODE 1SS184-TE85L
D1205	8-719-801-78	DIODE 1SS184-TE85L
D1206	8-719-016-74	DIODE 1SS352-TPH3
D1207	8-719-016-74	DIODE 1SS352-TPH3
D1208	8-719-053-18	DIODE 1SR154-400TE-25
D1209	8-719-801-78	DIODE 1SS184-TE85L
D1210	8-719-016-74	DIODE 1SS352-TPH3
D1211	8-719-053-18	DIODE 1SR154-400TE-25

Ref. No.	Part No.	Description	Remarks
D1501	8-719-820-05	DIODE 1SS181-TE85L	
D1504	8-719-820-05	DIODE 1SS181-TE85L	
D1505	8-719-820-05	DIODE 1SS181-TE85L	
		< EARTH >	
* EB1001	1-537-738-21	TERMINAL, EARTH	
* EB1002	1-537-738-21	TERMINAL, EARTH	
		< FERRITE BEAD >	
FB1101	1-414-813-11	FERRITE 0UH	
FB1102	1-414-813-11	FERRITE 0UH	
FB1103	1-414-813-11	FERRITE 0UH	
FB1301	1-414-813-11	FERRITE 0UH	
FB1302	1-414-813-11	FERRITE 0UH	
FB1401	1-414-813-11	FERRITE 0UH	
FB1402	1-414-813-11	FERRITE 0UH	
FB1403	1-414-813-11	FERRITE 0UH	
		< IC >	
IC1001	8-749-015-84	IC GP1F37R1 (DVD/LD)	
IC1002	8-749-923-05	TORX178A (TV/SAT)	
IC1003	8-749-923-05	TORX178A (MD/DA IN)	
IC1004	8-749-923-04	IC TOTX178 (MD/DA OUT)	
IC1005	8-759-595-15	IC TC74ACT153AF(EL)	
IC1006	8-759-234-20	IC TC7S08F(TE85R)	
IC1007	8-759-242-70	IC TC7WU04F(TE12R)	
IC1101	8-759-581-19	IC LC89055W	
IC1102	8-759-242-70	IC TC7WU04F(TE12R)	
IC1201	8-759-580-51	IC MB90573PFV-G-190-BND	
IC1202	8-759-186-30	IC TC74VHC14F(EL)	
IC1203	8-759-445-59	IC BA033T	
IC1204	8-759-450-47	IC BA05T	
IC1205	8-759-231-53	IC M5F7805L	
IC1206	8-759-544-04	IC NJM2103M-TE2	
IC1207	8-759-450-47	IC BA05T(SUFFIX-12)	
IC1301	8-759-582-68	IC CXD9511Q	
IC1401	8-752-391-87	IC CXD2712R	
IC1402	8-759-538-16	IC IDT71V016S15PH-AUTL	
IC1403	8-759-524-32	IC TC74VHC367FT(EL)	
IC1404	8-759-242-70	IC TC7WU04F(TE12R)	
IC1501	8-759-231-53	IC M5F7805L	
IC1502	8-759-590-10	IC TC9273F-012(EL)	
IC1503	8-759-581-18	IC AK4526A	
IC1504	8-759-636-55	IC M5218AFP-T1	
IC1505	8-759-636-55	IC M5218AFP-T1	
IC1506	8-759-636-55	IC M5218AFP-T1	
IC1507	8-759-636-55	IC M5218AFP-T1	
IC1508	8-759-636-55	IC M5218AFP-T1	
IC1509	8-759-636-55	IC M5218AFP-T1	
IC1510	8-759-636-55	IC M5218AFP-T1	
IC1554	8-759-636-55	IC M5218AFP-T1	
		< JACK >	
J1001	1-784-432-11	JACK, PIN 1P (DVD/LD COAX) (DB930/V929X)	
J1001	1-784-431-11	JACK, PIN 1P (DVD/LD COAX) (DB830)	
J1002	1-785-489-11	JACK, PIN 6P(5.1CH INPUT)(DB930/V929X)	
J1002	1-785-536-11	JACK, PIN (6P)(5.1CH INPUT)(DB830)	

Ref. No.	Part No.	Description	Remarks
		< JUMPER RESISTOR >	
JW10	1-216-295-91	SHORT 0	
JW11	1-216-295-91	SHORT 0	
JW12	1-216-295-91	SHORT 0	
JW13	1-216-295-91	SHORT 0	
JW14	1-216-295-91	SHORT 0	
JW15	1-216-295-91	SHORT 0	
JW16	1-216-295-91	SHORT 0	
JW17	1-216-295-91	SHORT 0	
		< TRANSISTOR >	
Q1201	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
Q1202	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
Q1203	8-729-027-43	TRANSISTOR RT1N141C-TP-1	
Q1204	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
Q1205	8-729-048-78	TRANSISTOR 2SD1733-TL-QR	
Q1501	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1502	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1503	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1504	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1505	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1506	8-729-107-46	TRANSISTOR 2SC3624A-T1L15L16	
Q1507	8-729-027-23	TRANSISTOR RT1P141C-TP-1	
		< RESISTOR >	
R1001	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1002	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1003	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1004	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1005	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1006	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1007	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1008	1-216-022-00	METAL CHIP 75 5% 1/10W	
R1009	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1010	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R1011	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1012	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1013	1-216-115-00	METAL CHIP 560K 5% 1/10W	
R1014	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1015	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1016	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1017	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1018	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R1019	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R1021	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R1022	1-216-121-91	RES,CHIP 1M 5% 1/10W	
R1101	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R1102	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R1103	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1104	1-216-022-00	METAL CHIP 75 5% 1/10W	
R1105	1-216-066-00	METAL CHIP 5.1K 5% 1/10W	
R1106	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
R1107	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1108	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1109	1-216-121-91	RES,CHIP 1M 5% 1/10W	
R1110	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R1111	1-216-121-91	RES,CHIP 1M 5% 1/10W	
R1112	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1113	1-216-025-91	RES,CHIP 100 5% 1/10W	
R1114	1-216-025-91	RES,CHIP 100 5% 1/10W	

DIGITAL

Ref. No.	Part No.	Description			Remarks
R1115	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1131	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R1160	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1192	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1193	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1222	1-216-073-00	METAL CHIP	10K	5%	1/10W
					(DB930/V929X)
R1201	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1202	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1203	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1204	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1205	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1206	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1207	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1208	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1209	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1210	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1211	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1212	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1213	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1214	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1215	1-216-025-91	RES,CHIP	100	5%	1/10W
R1216	1-216-025-91	RES,CHIP	100	5%	1/10W
R1217	1-216-025-91	RES,CHIP	100	5%	1/10W
R1218	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1219	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1220	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1221	1-216-073-00	METAL CHIP	10K	5%	1/10W
					(DB830)
R1224	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1225	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R1226	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R1227	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1228	1-216-075-00	METAL CHIP	12K	5%	1/10W
R1229	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1230	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1232	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1233	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1234	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1235	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1236	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1237	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1238	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1239	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1240	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1241	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1242	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1243	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1244	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1245	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1246	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1247	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1248	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1249	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1250	1-216-025-91	RES,CHIP	100	5%	1/10W
R1251	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1252	1-216-057-00	METAL CHIP	2.2K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R1253	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1254	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1255	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1256	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1257	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1258	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1259	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1261	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1262	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1263	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1264	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1265	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1266	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1267	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1269	1-216-093-91	RES,CHIP	68K	5%	1/10W
R1270	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1271	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1272	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1273	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1274	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1275	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1276	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1277	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1278	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1279	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1280	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1281	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1282	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1283	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1284	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1285	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1286	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1287	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1288	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1289	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1290	1-216-093-91	RES,CHIP	68K	5%	1/10W
R1292	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1293	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1294	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1301	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1302	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1401	1-216-025-91	RES,CHIP	100	5%	1/10W
R1402	1-216-025-91	RES,CHIP	100	5%	1/10W
R1403	1-216-025-91	RES,CHIP	100	5%	1/10W
R1404	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1405	1-216-121-91	RES,CHIP	1M	5%	1/10W
R1406	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1407	1-216-025-91	RES,CHIP	100	5%	1/10W
R1408	1-216-025-91	RES,CHIP	100	5%	1/10W
R1409	1-216-025-91	RES,CHIP	100	5%	1/10W
R1410	1-216-295-91	SHORT	0		
R1412	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1413	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1414	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1415	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1416	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1417	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1418	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1419	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1420	1-216-065-91	RES,CHIP	4.7K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R1421	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1422	1-216-025-91	RES,CHIP	100	5%	1/10W
R1501	1-216-295-91	SHORT	0		
R1502	1-216-295-91	SHORT	0		
R1503	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1504	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1505	1-216-009-91	RES,CHIP	22	5%	1/10W
R1506	1-216-009-91	RES,CHIP	22	5%	1/10W
R1508	1-216-033-00	METAL CHIP	220	5%	1/10W
R1509	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1510	1-216-033-00	METAL CHIP	220	5%	1/10W
R1511	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1512	1-216-033-00	METAL CHIP	220	5%	1/10W
R1513	1-216-033-00	METAL CHIP	220	5%	1/10W
R1514	1-216-033-00	METAL CHIP	220	5%	1/10W
R1515	1-216-033-00	METAL CHIP	220	5%	1/10W
R1516	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1517	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1518	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1519	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1522	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1523	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1524	1-216-037-00	METAL CHIP	330	5%	1/10W
R1525	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1526	1-216-037-00	METAL CHIP	330	5%	1/10W
R1527	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1528	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1529	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1530	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1532	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1533	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1534	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1535	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1536	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1537	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1538	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1539	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1540	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1541	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1542	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1543	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1544	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1545	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1546	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1547	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1548	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1549	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1550	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1551	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1552	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1553	1-216-085-00	METAL CHIP	33K	5%	1/10W
R1554	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1555	1-216-295-91	SHORT	0		
R1556	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1557	1-216-295-91	SHORT	0		
R1558	1-216-025-91	RES,CHIP	100	5%	1/10W
R1559	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1560	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1561	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1562	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1563	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1564	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1565	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1567	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1568	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1569	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1570	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1571	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R1572	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1573	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R1574	1-216-037-00	METAL CHIP	330	5%	1/10W
R1575	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1576	1-216-037-00	METAL CHIP	330	5%	1/10W
R1577	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1578	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1579	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1580	1-216-049-91	RES,CHIP	1K	5%	1/10W
R1581	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1582	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1583	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1584	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1585	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1586	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1587	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1588	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1589	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1590	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1591	1-216-105-91	RES,CHIP	220K	5%	1/10W
R1594	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1595	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1596	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1597	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1598	1-216-073-00	METAL CHIP	10K	5%	1/10W
R1599	1-216-073-00	METAL CHIP	10K	5%	1/10W
R3121	1-216-043-91	RES,CHIP	560	5%	1/10W

< VIBRATOR >

X1201	1-781-356-21	VIBRATOR, CERAMIC 16MHz	
X1401	1-781-464-21	VIBRATOR, CERAMIC 10MHz	
X3501	1-781-465-21	VIBRATOR, CRYSTAL 12.288MHz	

****

	A-4419-341-A	DISPLAY BOARD, COMPLETE (DB830:US)	
		**********	
	A-4419-343-A	DISPLAY BOARD, COMPLETE(DB830:AEP)	
		**********	
	A-4419-344-A	DISPLAY BOARD, COMPLETE (DB930:US,CND)	
		**********	
	A-4419-345-A	DISPLAY BOARD, COMPLETE	
		**********	
			(DB930:MY,SP/V929X)
	A-4419-346-A	DISPLAY BOARD, COMPLETE (DB930:AUS)	
		**********	
	A-4419-347-A	DISPLAY BOARD, COMPLETE (DB930:AEP)	
		**********	
*	4-955-901-01	CUSHION (FL)	
*	4-990-797-01	HOLDER (FL)	

DISPLAY

Ref. No.	Part No.	Description			Remarks
		< CAPACITOR >			
C101	1-126-786-11	ELECT	47uF	20%	16V
C102	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C103	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C104	1-126-795-11	ELECT	10uF	20%	50V
C105	1-104-905-11	CAPACITOR	0.22F		5.5V
C106	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C107	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C108	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C109	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C110	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C111	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C112	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C113	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C114	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C115	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C116	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C117	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C118	1-126-786-11	ELECT	47uF	20%	16V
C119	1-126-786-11	ELECT	47uF	20%	16V
C120	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C121	1-165-319-11	CERAMIC CHIP	0.1uF		50V (DB930/V929X)
C123	1-165-319-11	CERAMIC CHIP	0.1uF		50V (DB930/V929X)
C124	1-126-916-11	ELECT	1000uF	20%	6.3V (DB930/V929X)
C125	1-126-916-11	ELECT	1000uF	20%	6.3V (DB930/V929X)
C126	1-104-942-11	ELECT	1uF	20%	50V (DB930/V929X)
C127	1-104-942-11	ELECT	1uF	20%	50V (DB930/V929X)
C129	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (DB830/DB930:US,CND,MY,SP/V929X)
C130	1-163-251-11	CERAMIC CHIP	100PF	5%	50V (DB830/DB930:US,CND,MY,SP/V929X)
C131	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C132	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C133	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C134	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C135	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C136	1-126-786-11	ELECT	47uF	20%	16V
C137	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
		< CONNECTOR >			
CNP105	1-784-919-11	CONNECTOR, PC BOARD (PLUG) 5P			
CNP107	1-784-923-11	PIN, CONNECTOR 7P			
CNS101	1-568-741-11	SOCKET, CONNECTOR 23P (DB830:US/DB930:US,CND)			
CNS101	1-569-308-11	SOCKET, CONNECTOR(L TYRE)19P (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)			
CNS102	1-779-365-11	CONNECTOR, PC BOARD (PLUG) 8P			
CNS103	1-770-397-11	HOUSING, CONNECTOR(PC BOARD)4P			
		< DIODE >			
D101	8-719-016-74	DIODE 1SS352-TPH3			
D102	8-719-053-18	DIODE 1SR154-400TE-25			
D103	8-719-016-74	DIODE 1SS352-TPH3			
D104	8-719-016-74	DIODE 1SS352-TPH3 (DB930/V929X)			
D107	8-719-016-74	DIODE 1SS352-TPH3			

Ref. No.	Part No.	Description	Remarks
D124	8-719-059-14	DIODE SID313BP-TP19 (DB930/V929X)	
D125	8-719-059-14	DIODE SID313BP-TP19 (DB930/V929X)	
D126	8-719-016-74	DIODE 1SS352-TPH3 (DB930/V929X)	
D127	8-719-016-74	DIODE 1SS352-TPH3 (DB930/V929X)	
D128	8-719-064-57	DIODE SID5K23CTP15 (DB930/V929X)	
D129	8-719-016-74	DIODE 1SS352-TPH3 (DB830:AEP)	
D132	8-719-016-74	DIODE 1SS352-TPH3 (DB930:AEP,MY,SP,AUS/V929X)	
D134	8-719-016-74	DIODE 1SS352-TPH3 (DB830)	
D135	8-719-016-74	DIODE 1SS352-TPH3 (DB930/V929X)	
D136	8-719-074-92	DIODE SMLU78755CTP15	
D137	8-719-074-92	DIODE SMLU78755CTP15 (VIDEO2)	
D138	8-719-074-92	DIODE SMLU78755CTP15 (VIDEO3)	
D139	8-719-074-92	DIODE SMLU78755CTP15 (DVD/LD)	
D140	8-719-074-92	DIODE SMLU78755CTP15 (TV/SAT)	
D141	8-719-075-60	DIODE SELS5823CTP15(TAPE)(DB930/V929X)	
D142	8-719-075-60	DIODE SELS5823CTP15(MD/DAT)	
D143	8-719-075-60	DIODE SELS5823CTP15(CD)	
D144	8-719-075-60	DIODE SELS5823CTP15(TUNER)	
D145	8-719-075-60	DIODE SELS5823CTP15(PHONO)	
D147	8-719-046-39	DIODE SEL5821A-TP15(BASS BOUST)	
D149	8-719-032-98	DIODE SEL5820A-TP15(EQ)	
D150	8-719-032-98	DIODE SEL5820A-TP15(SURR)	
D151	8-719-032-98	DIODE SEL5820A-TP15(LEVEL)	
D152	8-719-032-98	DIODE SEL5820A-TP15(NAME)	
D153	8-719-032-98	DIODE SEL5820A-TP15(SET UP)	
D154	8-719-046-39	DIODE SEL5821A-TP15(2CH)	
D155	8-719-046-39	DIODE SEL5821A-TP15(MODE)	
D156	8-719-046-39	DIODE SEL5821A-TP15(AF.D)	
D157	8-719-075-59	DIODE SELS5B23CTP15 (DIGITAL CINEMA SOUND)	
		< FILTER >	
FL101	1-517-781-11	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC101	8-759-459-86	IC NJL64H400A	
IC102	8-759-577-32	IC MB90553APF-G-138-BND	
IC103	8-759-589-67	IC BA6208F-E2	
IC104	8-759-075-35	IC TD62C950RF	
IC105	8-759-463-11	IC MSC1162AGS-BK	
IC106	8-759-545-07	IC TMP87C447U-4A06 (DB930/V929X)	
IC107	8-759-925-76	IC SN74HC08ANSR (DB930/V929X)	
IC108	8-759-373-50	IC NJU3719L	
		< JUMPER RESISTOR >	
JR101	1-216-295-91	SHORT 0	
JR102	1-216-296-91	SHORT 0	
JR103	1-216-296-91	SHORT 0	
JR104	1-216-296-91	SHORT 0	
JR105	1-216-296-91	SHORT 0	
JR106	1-216-296-91	SHORT 0	
JR107	1-216-295-91	SHORT 0	
JR109	1-216-296-91	SHORT 0	
JR111	1-216-296-91	SHORT 0	
JR112	1-216-296-91	SHORT 0	
JR113	1-216-296-91	SHORT 0	
JR114	1-216-296-91	SHORT 0	
JR115	1-216-296-91	SHORT 0	
JR116	1-216-296-91	SHORT 0	
JR117	1-216-296-91	SHORT 0	

Ref. No.	Part No.	Description	Remarks
JR118	1-216-296-91	SHORT 0	
JR119	1-216-296-91	SHORT 0	
JR120	1-216-296-91	SHORT 0	
JR121	1-216-296-91	SHORT 0	
JR122	1-216-295-91	SHORT 0	
JR123	1-216-296-91	SHORT 0	
JR124	1-216-296-91	SHORT 0	
JR125	1-216-296-91	SHORT 0	
JR126	1-216-295-91	SHORT 0	
JR127	1-216-296-91	SHORT 0	
JR128	1-216-296-91	SHORT 0	
JR129	1-216-296-91	SHORT 0	
JR130	1-216-296-91	SHORT 0	
JR131	1-216-296-91	SHORT 0	
JR132	1-216-296-91	SHORT 0	
JR133	1-216-296-91	SHORT 0	
JR134	1-216-296-91	SHORT 0	
JR135	1-216-296-91	SHORT 0	
JR136	1-216-296-91	SHORT 0	
JR137	1-216-296-91	SHORT 0	
JR138	1-216-296-91	SHORT 0	
JR139	1-216-296-91	SHORT 0	
JR140	1-216-296-91	SHORT 0	
JR141	1-216-296-91	SHORT 0	
JR142	1-216-296-91	SHORT 0	
JR143	1-216-296-91	SHORT 0	
JR144	1-216-296-91	SHORT 0	
JR145	1-216-296-91	SHORT 0	
JR146	1-216-296-91	SHORT 0	
JR147	1-216-296-91	SHORT 0	
JR148	1-216-296-91	SHORT 0	
JR149	1-216-296-91	SHORT 0	
JR150	1-216-296-91	SHORT 0	
JR151	1-216-296-91	SHORT 0	
JR152	1-216-296-91	SHORT 0	
JR153	1-216-296-91	SHORT 0	
JR154	1-216-296-91	SHORT 0	
JR155	1-216-296-91	SHORT 0	
JR156	1-216-296-91	SHORT 0	
JR157	1-216-296-91	SHORT 0	
JR158	1-216-296-91	SHORT 0	
JR159	1-216-296-91	SHORT 0	
JR162	1-216-296-91	SHORT 0	
JR168	1-216-295-91	SHORT 0	
		< JUMPER RESISTOR >	
JW101	1-216-295-91	SHORT 0	
JW102	1-216-295-91	SHORT 0	
JW103	1-216-295-91	SHORT 0	
JW104	1-216-295-91	SHORT 0	
JW105	1-216-295-91	SHORT 0	
JW106	1-216-295-91	SHORT 0	
		< TRANSISTOR >	
Q101	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	
Q102	8-729-027-23	TRANSISTOR RT1P141C-TP-1	
Q103	8-729-027-43	TRANSISTOR RT1N141C-TP-1	
Q104	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	
Q105	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	(DB930/V929X)
Q129	8-729-801-93	TRANSISTOR 2SD1387-34-TP	(DB930/V929X)
Q130	8-729-801-93	TRANSISTOR 2SD1387-34-TP	(DB930/V929X)
		< RESISTOR >	
R101	1-216-298-00	METAL CHIP 2.2 5% 1/10W	(DB930/V929X)
R103	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R104	1-216-298-00	METAL CHIP 2.2 5% 1/10W	(DB930:AEP)
R104	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R105	1-216-001-00	METAL CHIP 10 5% 1/10W	
R106	1-216-001-00	METAL CHIP 10 5% 1/10W	(DB930/V929X)
R107	1-216-001-00	METAL CHIP 10 5% 1/10W	(DB930/V929X)
R108	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R109	1-216-097-91	RES,CHIP 100K 5% 1/10W	
R110	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R111	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R112	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R113	1-216-073-00	METAL CHIP 10K 5% 1/10W	(DB930/V929X)
R114	1-216-134-00	METAL CHIP 2.2 5% 1/8W	(DB930:AEP,MY,SP,AUS/V929X
R114	1-216-298-00	METAL CHIP 2.2 5% 1/10W	(DB930:US,CND,MY,SP,AUS/V929X)
R115	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R116	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R117	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R118	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R119	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R120	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R121	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R122	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R123	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R124	1-216-033-00	METAL CHIP 220 5% 1/10W	
R125	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	(DB930/V929X)
R126	1-216-073-00	METAL CHIP 10K 5% 1/10W	(DB930/V929X)
R127	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R128	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R129	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R130	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R131	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R132	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
R133	1-216-033-00	METAL CHIP 220 5% 1/10W	
R134	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R135	1-216-037-00	METAL CHIP 330 5% 1/10W	
R136	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R137	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R138	1-216-001-00	METAL CHIP 10 5% 1/10W	
R139	1-216-089-91	RES,CHIP 47K 5% 1/10W	
R140	1-216-037-00	METAL CHIP 330 5% 1/10W	
R141	1-216-041-00	METAL CHIP 470 5% 1/10W	
R142	1-216-045-00	METAL CHIP 680 5% 1/10W	
R143	1-216-049-91	RES,CHIP 1K 5% 1/10W	
R144	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	

DISPLAY **F-VIDEO**

Ref. No.	Part No.	Description			Remarks
R145	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R146	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R147	1-216-049-91	RES,CHIP	1K	5%	1/10W
R148	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R149	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R150	1-216-065-91	RES,CHIP	4.7K	5%	1/10W
R151	1-216-041-00	METAL CHIP	470	5%	1/10W
R152	1-216-045-00	METAL CHIP	680	5%	1/10W
R153	1-216-037-00	METAL CHIP	330	5%	1/10W
R154	1-216-041-00	METAL CHIP	470	5%	1/10W
R158	1-216-045-00	METAL CHIP	680	5%	1/10W
R161	1-216-049-91	RES,CHIP	1K	5%	1/10W
R162	1-216-049-91	RES,CHIP	1K	5%	1/10W
R163	1-216-073-00	METAL CHIP	10K	5%	1/10W
R164	1-216-097-91	RES,CHIP	100K	5%	1/10W
R165	1-216-049-91	RES,CHIP	1K	5%	1/10W
R166	1-216-073-00	METAL CHIP	10K	5%	1/10W
R167	1-216-309-00	METAL CHIP	5.6	5%	1/10W (DB930/V929X)
R168	1-216-049-91	RES,CHIP	1K	5%	1/10W
R169	1-216-049-91	RES,CHIP	1K	5%	1/10W
R170	1-216-049-91	RES,CHIP	1K	5%	1/10W
R171	1-216-309-00	METAL CHIP	5.6	5%	1/10W (DB930/V929X)
R172	1-216-073-00	METAL CHIP	10K	5%	1/10W (DB930/V929X)
R173	1-216-097-91	RES,CHIP	100K	5%	1/10W
R175	1-249-385-11	CARBON	2.2	5%	1/6W F
R176	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R177	1-216-049-91	RES,CHIP	1K	5%	1/10W
R178	1-216-037-00	METAL CHIP	330	5%	1/10W
R179	1-216-089-91	RES,CHIP	47K	5%	1/10W
R180	1-216-025-91	RES,CHIP	100	5%	1/10W (DB830:US/DB930:US,CND)
R181	1-216-089-91	RES,CHIP	47K	5%	1/10W
R182	1-216-097-91	RES,CHIP	100K	5%	1/10W
R183	1-216-097-91	RES,CHIP	100K	5%	1/10W
R184	1-216-037-00	METAL CHIP	330	5%	1/10W
R185	1-216-033-00	METAL CHIP	220	5%	1/10W
R186	1-216-037-00	METAL CHIP	330	5%	1/10W
R187	1-216-037-00	METAL CHIP	330	5%	1/10W
R188	1-216-037-00	METAL CHIP	330	5%	1/10W
R189	1-216-037-00	METAL CHIP	330	5%	1/10W
R190	1-216-033-00	METAL CHIP	220	5%	1/10W
R191	1-216-033-00	METAL CHIP	220	5%	1/10W
R192	1-216-033-00	METAL CHIP	220	5%	1/10W
R193	1-216-033-00	METAL CHIP	220	5%	1/10W
R194	1-216-097-91	RES,CHIP	100K	5%	1/10W
R195	1-216-037-00	METAL CHIP	330	5%	1/10W
R196	1-216-033-00	METAL CHIP	220	5%	1/10W
R197	1-216-033-00	METAL CHIP	220	5%	1/10W
R198	1-216-033-00	METAL CHIP	220	5%	1/10W
R199	1-216-029-00	METAL CHIP	150	5%	1/10W
R200	1-216-065-91	RES,CHIP	4.7K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R201	1-249-385-11	CARBON	2.2	5%	1/6W F
R202	1-216-025-91	RES,CHIP	100	5%	1/10W (DB830:US/DB930:US,CND)
R203	1-216-073-00	METAL CHIP	10K	5%	1/10W (DB930:AEP,MY,SP,AUS/V929X)
R203	1-216-025-91	RES,CHIP	100	5%	1/10W (DB830:US/DB930:US,CND)
R204	1-216-025-91	RES,CHIP	100	5%	1/10W (DB830:US/DB930:US,CND)
R205	1-216-037-00	METAL CHIP	330	5%	1/10W
R206	1-216-073-00	METAL CHIP	10K	5%	1/10W
R207	1-216-049-91	RES,CHIP	1K	5%	1/10W
R208	1-216-073-00	METAL CHIP	10K	5%	1/10W
R209	1-216-089-91	RES,CHIP	47K	5%	1/10W
R210	1-216-081-00	METAL CHIP	22K	5%	1/10W
R211	1-216-049-91	RES,CHIP	1K	5%	1/10W
		< VARIABLE RESISTOR >			
RV102	1-467-968-11	ENCODER, ROTARY (JOG DIAL)			
		< SWITCH >			
S103	1-771-349-21	SWITCH, KEYBOARD (DIMMER)			
S104	1-771-349-21	SWITCH, KEYBOARD (DISPLAY)			
S105	1-771-349-21	SWITCH, KEYBOARD (MEMORY)			
S106	1-771-349-21	SWITCH, KEYBOARD (SLEEP)			
S107	1-771-349-21	SWITCH, KEYBOARD (TEST TONE)			
S108	1-771-349-21	SWITCH, KEYBOARD (BASS BOOST)			
S109	1-771-349-21	SWITCH, KEYBOARD (LEVEL)			
S110	1-771-349-21	SWITCH, KEYBOARD (A.F.D)			
S111	1-771-349-21	SWITCH, KEYBOARD (TUNING-)			
S112	1-771-349-21	SWITCH, KEYBOARD (TUNING+)			
S113	1-771-349-21	SWITCH, KEYBOARD (SUR)			
S114	1-771-349-21	SWITCH, KEYBOARD (MODE)			
S115	1-771-349-21	SWITCH, KEYBOARD (FM MODE)			
S116	1-771-349-21	SWITCH, KEYBOARD (INPUT MODE)			
S117	1-771-349-21	SWITCH, KEYBOARD (5.1CH INPUT)			
S118	1-771-349-21	SWITCH, KEYBOARD (EQUALIZER)			
S119	1-771-349-21	SWITCH, KEYBOARD (NAME)			
S120	1-771-349-21	SWITCH, KEYBOARD (<)			
S121	1-771-349-21	SWITCH, KEYBOARD (>)			
S128	1-771-349-21	SWITCH, KEYBOARD (ENTER)			
S129	1-771-349-21	SWITCH, KEYBOARD (2CH)			
S130	1-771-349-21	SWITCH, KEYBOARD (EQ)			
S131	1-771-349-21	SWITCH, KEYBOARD (SET UP)			
		< VIBRATOR >			
X101	1-781-356-21	VIBRATOR, CERAMIC 16MHz			
X102	1-767-938-21	VIBRATOR, CERAMIC 7.28MHz (DB930/V929X)			
**********					
	1-673-367-11	F-VIDEO BOARD			
		**********			
		< CAPACITOR >			
C299	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C890	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C891	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

Ref. No.	Part No.	Description			Remarks
		< CONNECTOR >			
CNP307	1-564-723-11	PIN, CONNECTOR (SMALL TYPE) 7P			
		< EARTH >			
* EB201	1-537-738-21	TERMINAL, EARTH			
		< JACK >			
J809	1-784-808-11	TERMINAL, S (S-VIDEO)			
J810	1-770-571-11	JACK BLOCK, PIN (L TYPE) 3P (VIDEO/AUDIO)			
		< RESISTOR >			
R890	1-216-049-91	RES,CHIP	1K	5%	1/10W
R891	1-216-049-91	RES,CHIP	1K	5%	1/10W
R892	1-216-022-00	METAL CHIP	75	5%	1/10W
R893	1-216-022-00	METAL CHIP	75	5%	1/10W
R894	1-216-022-00	METAL CHIP	75	5%	1/10W
**********					
	1-673-365-11	H.P BOARD			
		********			
		< CONNECTOR >			
CNP751	1-779-978-11	PIN, CONNECTOR 3P			
		< EARTH >			
* EB701	1-537-738-21	TERMINAL, EARTH			
		(DB930:US,CND,MY,SP,AUS/V929X)			
		< JACK >			
J701	1-750-735-11	JACK (LARGE TYPE) (PHONES)			
**********					
	1-673-941-11	JOINT(Q) BOARD			
		**********			
		< CONNECTOR >			
CNP211	1-695-089-11	PIN, CONNECTOR (PC BOARD) 11P			
CNP212	1-695-089-11	PIN, CONNECTOR (PC BOARD) 11P			
**********					
	1-673-366-11	LED BOARD			
		********			
		< CAPACITOR >			
C128	1-165-319-11	CERAMIC CHIP	0.1uF		50V
		< LED >			
D122	8-719-070-83	LED SELU5E20C-TP15			
		(MULTI CANNEL DECORDER)			
**********					

Ref. No.	Part No.	Description			Remarks
	A-4419-333-A	MAIN BOARD, COMPLETE (DB830:US)			
		**********			
	A-4419-334-A	MAIN BOARD, COMPLETE (DB830:AEP)			
		**********			
	A-4419-335-A	MAIN BOARD, COMPLETE (DB930:US,CND)			
		**********			
	A-4419-337-A	MAIN BOARD, COMPLETE (DB930:AEP)			
		**********			
	A-4419-336-A	MAIN BOARD, COMPLETE			
		**********			
		(DB930:MY,SP,AUS/V929X)			
	1-533-223-11	HOLDER,FUSE			
	7-685-872-09	SCREW+BVTT	3 × 8	(S)	
		< CAPACITOR >			
C301	1-119-821-31	ELECT	2.2uF	20%	50V
C302	1-162-283-31	CERAMIC	120PF	10%	50V
		(DB830:AEP/DB930:AEP)			
C303	1-119-779-11	ELECT	220uF	20%	10V
C304	1-125-896-91	MYLAR	0.0091uF	5%	50V
C305	1-136-159-00	FILM	0.033uF	5%	50V
C306	1-119-821-31	ELECT	2.2uF	20%	50V
C307	1-164-070-11	CERAMIC	100PF	5%	50V
C308	1-162-286-31	CERAMIC	220PF	10%	50V
C310	1-162-294-31	CERAMIC	0.001uF	10%	50V
C311	1-119-825-41	ELECT	22uF	20%	50V
C320	1-119-825-41	ELECT	22uF	20%	50V
					(DB930/V929X)
C330	1-119-825-41	ELECT	22uF	20%	50V
					(DB930/V929X)
C331	1-119-825-41	ELECT	22uF	20%	50V
C340	1-119-799-11	ELECT	47uF	20%	16V
					(DB930/V929X)
C350	1-119-799-11	ELECT	47uF	20%	16V
					(DB930/V929X)
C351	1-119-821-31	ELECT	2.2uF	20%	50V
C352	1-162-283-31	CERAMIC	120PF	10%	50V
		(DB830:AEP/DB930:AEP)			
C353	1-119-779-11	ELECT	220uF	20%	10V
C354	1-125-896-91	MYLAR	0.0091uF	5%	50V
C355	1-136-159-00	FILM	0.033uF	5%	50V
C356	1-119-821-31	ELECT	2.2uF	20%	50V
C357	1-164-070-11	CERAMIC	100PF	5%	50V
C358	1-162-286-31	CERAMIC	220PF	10%	50V
C360	1-162-294-31	CERAMIC	0.001uF	10%	50V
C361	1-119-825-41	ELECT	22uF	20%	50V
C362	1-119-825-41	ELECT	22uF	20%	50V
C370	1-119-825-41	ELECT	22uF	20%	50V
					(DB930/V929X)
C380	1-119-825-41	ELECT	22uF	20%	50V
					(DB930/V929X)
C388	1-119-800-11	ELECT	100uF	20%	16V
C389	1-119-800-11	ELECT	100uF	20%	16V
C392	1-119-799-11	ELECT	47uF	20%	16V
C394	1-119-799-11	ELECT	47uF	20%	16V
C395	1-162-282-31	CERAMIC	100PF	10%	50V
C396	1-119-799-11	ELECT	47uF	20%	16V
C397	1-119-799-11	ELECT	47uF	20%	16V

MAIN

Ref. No.	Part No.	Description			Remarks
C398	1-162-282-31	CERAMIC	100PF	10%	50V
C416	1-119-825-41	ELECT	22uF	20%	50V
C417	1-119-825-41	ELECT	22uF	20%	50V
C418	1-119-825-41	ELECT	22uF	20%	50V
C419	1-162-282-31	CERAMIC	100PF	10%	50V
C427	1-162-294-31	CERAMIC	0.001uF	10%	50V (DB930:MY,SP,AUS/V929X)
C430	1-162-282-31	CERAMIC	100PF	10%	50V (DB930/V929X)
C466	1-119-825-41	ELECT	22uF	20%	50V
C467	1-119-825-41	ELECT	22uF	20%	50V
C468	1-119-825-41	ELECT	22uF	20%	50V
C481	1-136-173-00	FILM	0.47uF	5%	50V
C482	1-136-173-00	FILM	0.47uF	5%	50V
C496	1-119-800-11	ELECT	100uF	20%	16V
C497	1-119-800-11	ELECT	100uF	20%	16V
C499	1-119-799-11	ELECT	47uF	20%	16V
C501	1-119-825-41	ELECT	22uF	20%	50V
C502	1-102-108-00	CERAMIC	150PF	10%	50V
C503	1-102-233-00	CERAMIC	33PF	10%	500V
C504	1-107-586-11	CERAMIC	6PF	0.5PF	500V
C505	1-119-779-11	ELECT	220uF	20%	10V
C506	1-106-351-00	MYLAR	2200PF	5%	200V
C507	1-106-351-00	MYLAR	2200PF	5%	200V
C508	1-109-876-21	FILM	0.033uF	10%	250V
C520	1-119-799-11	ELECT	47uF	20%	16V
C521	1-107-597-11	CERAMIC	22PF	10%	500V
C522	1-107-597-11	CERAMIC	22PF	10%	500V
C523	1-162-286-31	CERAMIC	220PF	10%	50V
C524	1-119-824-31	ELECT	10uF	20%	50V
C525	1-136-157-00	FILM	0.022uF	5%	50V
C526	1-136-153-00	FILM	0.01uF	5%	50V
C539	1-164-079-11	CERAMIC	330PF	10%	50V
C549	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V
C551	1-119-825-41	ELECT	22uF	20%	50V
C552	1-102-108-00	CERAMIC	150PF	10%	50V
C553	1-102-233-00	CERAMIC	33PF	10%	500V
C554	1-107-586-11	CERAMIC	6PF	0.5PF	500V
C555	1-119-779-11	ELECT	220uF	20%	10V
C556	1-106-351-00	MYLAR	2200PF	5%	200V
C557	1-106-351-00	MYLAR	2200PF	5%	200V
C570	1-119-799-11	ELECT	47uF	20%	16V
C571	1-107-597-11	CERAMIC	22PF	10%	500V
C572	1-107-597-11	CERAMIC	22PF	10%	500V
C573	1-162-286-31	CERAMIC	220PF	10%	50V
C574	1-119-824-31	ELECT	10uF	20%	50V
C575	1-136-157-00	FILM	0.022uF	5%	50V
C576	1-136-153-00	FILM	0.01uF	5%	50V
C580	1-162-282-31	CERAMIC	100PF	10%	50V
C589	1-164-079-11	CERAMIC	330PF	10%	50V
C590	1-124-472-11	ELECT	470uF	20%	10V
C594	1-119-851-11	ELECT	22uF	20%	100V
C595	1-119-851-11	ELECT	22uF	20%	100V
C598	1-119-825-41	ELECT	22uF	20%	50V
C599	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V
C601	1-119-825-41	ELECT	22uF	20%	50V
C602	1-102-108-00	CERAMIC	150PF	10%	50V

Ref. No.	Part No.	Description			Remarks
C603	1-102-233-00	CERAMIC	33PF	10%	500V
C604	1-107-586-11	CERAMIC	6PF	0.5PF	500V
C605	1-119-779-11	ELECT	220uF	20%	10V
C606	1-106-351-00	MYLAR	2200PF	5%	200V
C607	1-106-351-00	MYLAR	2200PF	5%	200V
C620	1-119-799-11	ELECT	47uF	20%	16V
C621	1-107-597-11	CERAMIC	22PF	10%	500V
C622	1-107-597-11	CERAMIC	22PF	10%	500V
C623	1-162-286-31	CERAMIC	220PF	10%	50V
C624	1-119-824-31	ELECT	10uF	20%	50V
C625	1-136-157-00	FILM	0.022uF	5%	50V
C626	1-136-153-00	FILM	0.01uF	5%	50V
C639	1-164-079-11	CERAMIC	330PF	10%	50V
C649	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V
C651	1-119-825-41	ELECT	22uF	20%	50V
C652	1-102-108-00	CERAMIC	150PF	10%	50V
C653	1-102-233-00	CERAMIC	33PF	10%	500V
C654	1-107-586-11	CERAMIC	6PF	0.5PF	500V
C655	1-119-779-11	ELECT	220uF	20%	10V
C680	1-162-282-31	CERAMIC	100PF	10%	50V
C689	1-164-079-11	CERAMIC	330PF	10%	50V
C699	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V
C801	1-136-153-00	FILM	0.01uF	5%	50V
C802	1-136-153-00	FILM	0.01uF	5%	50V
C803	1-136-153-00	FILM	0.01uF	5%	50V
C804	1-136-153-00	FILM	0.01uF	5%	50V
C811	1-119-815-21	ELECT	2200uF	20%	35V
C812	1-119-814-21	ELECT	1000uF	20%	35V
C813	1-119-796-21	ELECT	4700uF	20%	16V
C993	1-126-960-11	ELECT	1uF	20%	50V
CC04	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC05	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC06	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC07	1-164-070-11	CERAMIC	100PF	5%	50V (DB930:AEP)
CC08	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC09	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC10	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC11	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC12	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC13	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC14	1-164-070-11	CERAMIC	100PF	5%	50V (DB930:AEP)
CC18	1-164-070-11	CERAMIC	100PF	5%	50V (DB930:AEP)
CC54	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC55	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)
CC56	1-164-070-11	CERAMIC	100PF	5%	50V (DB830:AEP/DB930:AEP)

Ref. No.	Part No.	Description	Remarks
CC57	1-164-070-11	CERAMIC 100PF 5% 50V	(DB930:AEP)
CC58	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC59	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC60	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC61	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC62	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC63	1-164-070-11	CERAMIC 100PF 5% 50V	(DB830:AEP/DB930:AEP)
CC64	1-164-070-11	CERAMIC 100PF 5% 50V	(DB930:AEP)
CC68	1-164-070-11	CERAMIC 100PF 5% 50V	(DB930:AEP)
		< CONNECTOR >	
CNP303	1-779-977-11	PIN, CONNECTOR 6P	
CNP601	1-785-104-11	PIN, CONNECTOR 6P	
CNP801	1-785-102-11	PIN, CONNECTOR 4P	
CNP802	1-785-103-11	PIN, CONNECTOR 5P	
CNS306	1-785-295-11	JACK, PIN (DB930:AEP)	
CNS305	1-779-978-11	PIN, CONNECTOR 3P	
CNS306	1-784-778-11	CONNECTOR, FFC 17P	
		< DIODE >	
D301	8-719-911-19	DIODE 1SS133T-72 (DB930/V929X)	
D490	8-719-210-21	DIODE 11EQS04-NTA2B	
D491	8-719-210-21	DIODE 11EQS04-NTA2B	
D494	8-719-210-21	DIODE 11EQS04-NTA2B	
D495	8-719-210-21	DIODE 11EQS04-NTA2B	
D496	8-719-210-21	DIODE 11EQS04-NTA2B	
D497	8-719-210-21	DIODE 11EQS04-NTA2B	
D501	8-719-911-19	DIODE 1SS133T-72	
D502	8-719-109-51	DIODE MTZJ-T-72-2.2	
D503	8-719-109-51	DIODE MTZJ-T-72-2.2	
D504	8-719-911-19	DIODE 1SS133T-72	
D505	8-719-911-19	DIODE 1SS133T-72	
D506	8-719-911-19	DIODE 1SS133T-72	
D545	8-719-911-19	DIODE 1SS133T-72	
D546	8-719-911-19	DIODE 1SS133T-72	
D547	8-719-911-19	DIODE 1SS133T-72	
D548	8-719-911-19	DIODE 1SS133T-72	
D549	8-719-911-19	DIODE 1SS133T-72	
D551	8-719-911-19	DIODE 1SS133T-72	
D552	8-719-109-51	DIODE MTZJ-T-72-2.2	
D553	8-719-109-51	DIODE MTZJ-T-72-2.2	
D554	8-719-911-19	DIODE 1SS133T-72	
D555	8-719-911-19	DIODE 1SS133T-72	
D556	8-719-911-19	DIODE 1SS133T-72	
D598	8-719-911-19	DIODE 1SS133T-72	
D599	8-719-911-19	DIODE 1SS133T-72	
D601	8-719-911-19	DIODE 1SS133T-72	
D602	8-719-109-51	DIODE MTZJ-T-72-2.2	
D603	8-719-109-51	DIODE MTZJ-T-72-2.2	
D604	8-719-911-19	DIODE 1SS133T-72	
D605	8-719-911-19	DIODE 1SS133T-72	
D606	8-719-911-19	DIODE 1SS133T-72	
D607	8-719-911-19	DIODE 1SS133T-72	
D608	8-719-911-19	DIODE 1SS133T-72	
D649	8-719-911-19	DIODE 1SS133T-72	
D671	8-719-911-19	DIODE 1SS133T-72	
D681	8-719-911-19	DIODE 1SS133T-72	
D698	8-719-911-19	DIODE 1SS133T-72	
D802	8-719-024-99	DIODE 11ES2-NTA2B	
D803	8-719-024-99	DIODE 11ES2-NTA2B	
D804	8-719-024-99	DIODE 11ES2-NTA2B	
D805	8-719-024-99	DIODE 11ES2-NTA2B	
D806	8-719-024-99	DIODE 11ES2-NTA2B	
D807	8-719-024-99	DIODE 11ES2-NTA2B	
D808	8-719-024-99	DIODE 11ES2-NTA2B	
D809	8-719-024-99	DIODE 11ES2-NTA2B	
		< EARTH >	
* EB301	1-537-738-21	TERMINAL, EARTH	
* EB302	1-537-738-21	TERMINAL, EARTH	
		< FUSE >	
⚠F803	1-532-504-51	FUSE TIME LAG 4A/250V (EXCEPT US,CND)	
⚠F803	1-533-419-11	FUSE, GLASS CYLINDRICAL(DIA.5) 4A/125V	(US,CND)
⚠F804	1-532-504-51	FUSE TIME LAG 4A/250V (EXCEPT US,CND)	
⚠F804	1-533-419-11	FUSE, GLASS CYLINDRICAL(DIA.5) 4A/125V	(US,CND)
⚠F805	1-532-504-51	FUSE TIME LAG 4A/250V (EXCEPT US,CND)	
⚠F805	1-533-419-11	FUSE, GLASS CYLINDRICAL(DIA.5) 4A/125V	(US,CND)
		< IC >	
IC309	8-759-636-74	IC M5218AP-22 (DB930/V929X)	
IC301	8-759-582-64	IC TC9273N-004	
IC302	8-759-636-74	IC M5218AP-22	
IC303	8-759-582-65	IC TC9273N-014	
IC304	8-759-636-74	IC M5218AP-22	
IC330	8-759-582-66	IC TC9273N-013 (DB930/V929X)	
IC401	8-759-231-59	IC M5F7815L	
IC402	8-759-245-87	IC M5F7915L	
IC404	8-759-708-05	IC NJM78L05A-T3	
IC414	8-759-534-63	IC TC9299P	
IC415	8-759-534-63	IC TC9299P	
IC416	8-759-534-63	IC TC9299P	
IC501	8-759-326-52	IC uPC2581V	
IC601	8-759-326-52	IC uPC2581V	
		< JACK >	
J301	1-784-430-11	JACK, PIN 4P (PHONO/CD)(DB930/V929X)	
J301	1-784-429-11	JACK, PIN 4P (PHONO/CD)(DB830)	
J302	1-784-430-11	JACK, PIN 4P (MD/DAT)(DB930/V929X)	
J302	1-784-429-11	JACK, PIN 4P (MD/DAT)(DB830)	
J303	1-784-430-11	JACK, PIN 4P (TAPE)(DB930/V929X)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

MAIN

Ref. No.	Part No.	Description	Remarks
J304	1-785-295-11	JACK, PIN (VIDEO1)	(DB930:US,CND,MY,SP,AUS/V929X)
J304	1-784-920-11	JACK, PIN 6P (VIDEO1)	(DB830/DB930:AEP)
J305	1-785-295-11	JACK, PIN (TV/SAT/DVD/LD)	(DB930:US,CND,MY,SP,AUS/V929X)
J305	1-784-920-11	JACK, PIN 6P (TV/SAT/DVD/LD)	(DB830/DB930:AEP)
J306	1-774-822-21	JACK, PIN 2P (2ND AUDIO OUT)	(DB930/V929X)
		< COIL >	
L501	1-411-906-11	COIL, AIR-CORE	
L551	1-411-906-11	COIL, AIR-CORE	
		< TRANSISTOR >	
Q301	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	(DB930/V929X)
Q501	8-729-900-36	TRANSISTOR BA1F4M-TP	
Q503	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q504	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q505	8-729-026-08	TRANSISTOR 2SC4495	
Q506	8-749-010-25	IC MN2488-OPY-M	
Q507	8-749-010-26	IC MP1620-OPY-M	
Q508	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q509	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q510	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q511	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q546	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q547	8-729-140-84	TRANSISTOR 2SC1841TP-PAFAEA	
Q548	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q549	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q554	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q555	8-729-026-08	TRANSISTOR 2SC4495	
Q556	8-749-010-25	IC MN2488-OPY-M	
Q557	8-749-010-26	IC MP1620-OPY-M	
Q558	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q559	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q560	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q561	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q596	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q598	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q599	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q601	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q604	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q605	8-729-026-08	TRANSISTOR 2SC4495	
Q606	8-749-010-25	IC MN2488-OPY-M	
Q607	8-749-010-26	IC MP1620-OPY-M	
Q608	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q609	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q610	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q611	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q613	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q645	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q671	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q681	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q698	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q745	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q992	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	

Ref. No.	Part No.	Description			Remarks
		< RESISTOR >			
R200	1-249-397-11	CARBON	22	5% 1/4W	F (DB930/V929X)
R300	1-249-397-11	CARBON	22	5% 1/4W	F (DB930/V929X)
R301	1-249-401-11	CARBON	47	5% 1/4W	F (EXCEPT AEP)
R301	1-249-425-11	CARBON	4.7K	5% 1/4W	F (AEP)
R302	1-249-441-11	CARBON	100K	5% 1/4W	
R303	1-249-440-11	CARBON	82K	5% 1/4W	
R304	1-249-408-11	CARBON	180	5% 1/4W	F
R305	1-249-428-11	CARBON	8.2K	5% 1/4W	F
R306	1-249-441-11	CARBON	100K	5% 1/4W	
R307	1-247-807-31	CARBON	100	5% 1/4W	
R308	1-249-441-11	CARBON	100K	5% 1/4W	
R309	1-249-413-11	CARBON	470	5% 1/4W	F
R310	1-249-417-11	CARBON	1K	5% 1/4W	F
R311	1-249-417-11	CARBON	1K	5% 1/4W	F
R312	1-249-417-11	CARBON	1K	5% 1/4W	F
R313	1-249-417-11	CARBON	1K	5% 1/4W	F (DB930/V929X)
R314	1-249-417-11	CARBON	1K	5% 1/4W	F (DB930/V929X)
R315	1-249-393-11	CARBON	10	5% 1/4W	F (DB930/V929X)
R316	1-249-417-11	CARBON	1K	5% 1/4W	F
R317	1-249-417-11	CARBON	1K	5% 1/4W	F
R318	1-249-417-11	CARBON	1K	5% 1/4W	F
R319	1-249-417-11	CARBON	1K	5% 1/4W	F
R320	1-249-417-11	CARBON	1K	5% 1/4W	F
R321	1-247-807-31	CARBON	100	5% 1/4W	(DB930/V929X)
R325	1-249-417-11	CARBON	1K	5% 1/4W	F
R330	1-247-887-00	CARBON	220K	5% 1/4W	(DB930/V929X)
R331	1-247-887-00	CARBON	220K	5% 1/4W	
R335	1-247-887-00	CARBON	220K	5% 1/4W	
R336	1-249-429-11	CARBON	10K	5% 1/4W	(DB930/V929X)
R337	1-249-425-11	CARBON	4.7K	5% 1/4W	F (DB930/V929X)
R338	1-249-441-11	CARBON	100K	5% 1/4W	(DB930:MY,SP,AUS/V929X)
R342	1-249-425-11	CARBON	4.7K	5% 1/4W	F (DB930/V929X)
R344	1-247-807-31	CARBON	100	5% 1/4W	
R345	1-247-807-31	CARBON	100	5% 1/4W	
R346	1-249-397-11	CARBON	22	5% 1/4W	F
R347	1-249-397-11	CARBON	22	5% 1/4W	F
R349	1-249-441-11	CARBON	100K	5% 1/4W	(DB930:MY,SP,AUS/V929X)
R351	1-249-401-11	CARBON	47	5% 1/4W	F (EXCEPT AEP)
R351	1-249-425-11	CARBON	4.7K	5% 1/4W	F (AEP)
R352	1-249-441-11	CARBON	100K	5% 1/4W	
R353	1-249-440-11	CARBON	82K	5% 1/4W	
R354	1-249-408-11	CARBON	180	5% 1/4W	F
R355	1-249-428-11	CARBON	8.2K	5% 1/4W	F
R356	1-249-441-11	CARBON	100K	5% 1/4W	
R357	1-247-807-31	CARBON	100	5% 1/4W	

Ref. No.	Part No.	Description			Remarks
R358	1-249-441-11	CARBON	100K	5%	1/4W
R359	1-249-413-11	CARBON	470	5%	1/4W F
R360	1-249-417-11	CARBON	1K	5%	1/4W F
R361	1-249-417-11	CARBON	1K	5%	1/4W F
R362	1-249-417-11	CARBON	1K	5%	1/4W F
R363	1-249-417-11	CARBON	1K	5%	1/4W F
					(DB930/V929X)
R364	1-249-417-11	CARBON	1K	5%	1/4W F
					(DB930/V929X)
R366	1-249-417-11	CARBON	1K	5%	1/4W F
R367	1-249-417-11	CARBON	1K	5%	1/4W F
R368	1-249-417-11	CARBON	1K	5%	1/4W F
R369	1-249-417-11	CARBON	1K	5%	1/4W F
R370	1-249-417-11	CARBON	1K	5%	1/4W F
R371	1-247-807-31	CARBON	100	5%	1/4W
					(DB930/V929X)
R375	1-249-417-11	CARBON	1K	5%	1/4W F
R380	1-247-887-00	CARBON	220K	5%	1/4W
					(DB930/V929X)
R381	1-247-887-00	CARBON	220K	5%	1/4W
R385	1-247-887-00	CARBON	220K	5%	1/4W
R386	1-249-437-11	CARBON	47K	5%	1/4W
R387	1-249-441-11	CARBON	100K	5%	1/4W
					(DB930/V929X)
R388	1-249-441-11	CARBON	100K	5%	1/4W
					(DB930/V929X)
R391	1-249-437-11	CARBON	47K	5%	1/4W
R392	1-249-425-11	CARBON	4.7K	5%	1/4W F
					(DB930/V929X)
R394	1-249-397-11	CARBON	22	5%	1/4W F
R395	1-249-397-11	CARBON	22	5%	1/4W F
R396	1-249-417-11	CARBON	1K	5%	1/4W F
R398	1-249-417-11	CARBON	1K	5%	1/4W F
R401	1-249-417-11	CARBON	1K	5%	1/4W F
R413	1-249-417-11	CARBON	1K	5%	1/4W F
					(DB930/V929X)
R430	1-247-887-00	CARBON	220K	5%	1/4W
					(DB930/V929X)
R480	1-247-887-00	CARBON	220K	5%	1/4W
					(DB930/V929X)
R501	1-249-417-11	CARBON	1K	5%	1/4W F
R502	1-249-439-11	CARBON	68K	5%	1/4W
R503	1-249-439-11	CARBON	68K	5%	1/4W
R504	1-247-843-11	CARBON	3.3K	5%	1/4W
R505	1-249-437-11	CARBON	47K	5%	1/4W
R509	1-247-807-31	CARBON	100	5%	1/4W
R520	1-249-429-11	CARBON	10K	5%	1/4W
R521	1-249-422-11	CARBON	2.7K	5%	1/4W F
R522	1-249-433-11	CARBON	22K	5%	1/4W
R523	1-249-411-11	CARBON	330	5%	1/4W
R523	1-249-442-11	CARBON	510	5%	1/4W
⚠R524	1-249-408-11	CARBON	180	5%	1/4W F
⚠R525	1-249-408-11	CARBON	180	5%	1/4W F
⚠R526	1-234-182-11	ENCAPSULATED COMPONENT			
R527	1-240-855-91	CARBON	6.2K	5%	1/4W

Ref. No.	Part No.	Description			Remarks
R528	1-249-425-11	CARBON	4.7K	5%	1/4W F
R529	1-247-866-11	CARBON	30K	5%	1/4W
R530	1-249-421-11	CARBON	2.2K	5%	1/4W F
R531	1-249-433-11	CARBON	22K	5%	1/4W
R532	1-249-437-11	CARBON	47K	5%	1/4W
⚠R533	1-249-393-11	CARBON	10	5%	1/4W F
⚠R534	1-249-389-11	CARBON	4.7	5%	1/4W F
R535	1-249-431-11	CARBON	15K	5%	1/4W
R539	1-249-427-11	CARBON	6.8K	5%	1/4W F
R540	1-249-417-11	CARBON	1K	5%	1/4W F
R541	1-249-429-11	CARBON	10K	5%	1/4W
R542	1-249-429-11	CARBON	10K	5%	1/4W
R547	1-249-425-11	CARBON	4.7K	5%	1/4W F
R548	1-249-429-11	CARBON	10K	5%	1/4W
⚠R549	1-249-393-11	CARBON	10	5%	1/4W F
R551	1-249-417-11	CARBON	1K	5%	1/4W F
R552	1-249-439-11	CARBON	68K	5%	1/4W
R553	1-249-439-11	CARBON	68K	5%	1/4W
R554	1-247-843-11	CARBON	3.3K	5%	1/4W
R555	1-247-881-00	CARBON	120K	5%	1/4W
R556	1-247-881-00	CARBON	120K	5%	1/4W
R559	1-247-807-31	CARBON	100	5%	1/4W
R570	1-249-429-11	CARBON	10K	5%	1/4W
R571	1-249-422-11	CARBON	2.7K	5%	1/4W F
R572	1-249-433-11	CARBON	22K	5%	1/4W
R573	1-249-411-11	CARBON	330	5%	1/4W
R573	1-249-442-11	CARBON	510	5%	1/4W
⚠R574	1-249-408-11	CARBON	180	5%	1/4W F
⚠R575	1-249-408-11	CARBON	180	5%	1/4W F
⚠R576	1-234-182-11	ENCAPSULATED COMPONENT			
R577	1-240-855-91	CARBON	6.2K	5%	1/4W
R578	1-249-425-11	CARBON	4.7K	5%	1/4W F
R579	1-247-866-11	CARBON	30K	5%	1/4W
R580	1-249-421-11	CARBON	2.2K	5%	1/4W F
R581	1-249-433-11	CARBON	22K	5%	1/4W
R582	1-249-437-11	CARBON	47K	5%	1/4W
⚠R583	1-249-393-11	CARBON	10	5%	1/4W F
⚠R584	1-249-389-11	CARBON	4.7	5%	1/4W F
R585	1-249-431-11	CARBON	15K	5%	1/4W
R586	1-249-429-11	CARBON	10K	5%	1/4W
R587	1-249-425-11	CARBON	4.7K	5%	1/4W F
R588	1-249-393-11	CARBON	10	5%	1/4W F
R590	1-249-433-11	CARBON	22K	5%	1/4W
R592	1-249-381-11	CARBON	1	5%	1/4W F
R593	1-249-381-11	CARBON	1	5%	1/4W F
R594	1-249-425-11	CARBON	4.7K	5%	1/4W F
R595	1-249-419-11	CARBON	1.5K	5%	1/4W F
R596	1-249-431-11	CARBON	15K	5%	1/4W
R597	1-249-419-11	CARBON	1.5K	5%	1/4W F
R599	1-249-431-11	CARBON	15K	5%	1/4W
R601	1-249-417-11	CARBON	1K	5%	1/4W F
R602	1-249-439-11	CARBON	68K	5%	1/4W
R603	1-249-439-11	CARBON	68K	5%	1/4W
R604	1-249-418-11	CARBON	1.2K	5%	1/4W F
R609	1-247-807-31	CARBON	100	5%	1/4W

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

MAIN REAR-AMP

Ref. No.	Part No.	Description				Remarks
R620	1-249-429-11	CARBON	10K	5%	1/4W	
R621	1-249-422-11	CARBON	2.7K	5%	1/4W	F
R622	1-249-433-11	CARBON	22K	5%	1/4W	
R622	1-247-881-00	CARBON	120K	5%	1/4W	
R623	1-249-411-11	CARBON	330	5%	1/4W	
R623	1-249-442-11	CARBON	510	5%	1/4W	
⚠R624	1-249-408-11	CARBON	180	5%	1/4W	F
⚠R625	1-249-408-11	CARBON	180	5%	1/4W	F
⚠R626	1-234-182-11	ENCAPSULATED COMPONENT				
R627	1-240-855-91	CARBON	6.2K	5%	1/4W	
R628	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R629	1-247-866-11	CARBON	30K	5%	1/4W	
R630	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R631	1-249-433-11	CARBON	22K	5%	1/4W	
R632	1-249-437-11	CARBON	47K	5%	1/4W	
R633	1-249-393-11	CARBON	10	5%	1/4W	F
R634	1-249-433-11	CARBON	22K	5%	1/4W	
R635	1-249-431-11	CARBON	15K	5%	1/4W	
R636	1-249-433-11	CARBON	22K	5%	1/4W	
R642	1-215-889-00	METAL OXIDE	330	5%	2W	F
			(DB830:US/DB930:US,CND)			
R642	1-216-453-00	METAL OXIDE	270	5%	2W	F
			(DB830:AEP/DB930:AEP,MY,SP,AUS/V929X)			
R643	1-249-433-11	CARBON	22K	5%	1/4W	
R647	1-249-429-11	CARBON	10K	5%	1/4W	
R648	1-249-425-11	CARBON	4.7K	5%	1/4W	F
⚠R649	1-249-393-11	CARBON	10	5%	1/4W	F
R650	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R651	1-249-417-11	CARBON	1K	5%	1/4W	F
R652	1-249-439-11	CARBON	68K	5%	1/4W	
R653	1-249-439-11	CARBON	68K	5%	1/4W	
R654	1-247-843-11	CARBON	3.3K	5%	1/4W	
R655	1-249-409-11	CARBON	220	5%	1/4W	F
R656	1-249-409-11	CARBON	220	5%	1/4W	F
R657	1-249-429-11	CARBON	10K	5%	1/4W	
⚠R658	1-249-393-11	CARBON	10	5%	1/4W	F
R659	1-247-807-31	CARBON	100	5%	1/4W	
R669	1-249-393-11	CARBON	10	5%	1/4W	F
R670	1-249-429-11	CARBON	10K	5%	1/4W	
R671	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R680	1-249-429-11	CARBON	10K	5%	1/4W	
R681	1-249-425-11	CARBON	4.7K	5%	1/4W	F
⚠R682	1-249-393-11	CARBON	10	5%	1/4W	F
R690	1-249-433-11	CARBON	22K	5%	1/4W	
R695	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R696	1-249-431-11	CARBON	15K	5%	1/4W	
R739	1-215-868-00	METAL OXIDE	680	5%	1W	F
R747	1-249-429-11	CARBON	10K	5%	1/4W	
R748	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R789	1-215-868-00	METAL OXIDE	680	5%	1W	F
R991	1-249-417-11	CARBON	1K	5%	1/4W	F
R992	1-249-439-11	CARBON	68K	5%	1/4W	
R993	1-249-433-11	CARBON	22K	5%	1/4W	
R995	1-249-441-11	CARBON	100K	5%	1/4W	
R996	1-249-429-11	CARBON	10K	5%	1/4W	

Ref. No.	Part No.	Description				Remarks
		< RELAY >				
RY301	1-515-793-11	RELAY (DB930/V929X)				
RY501	1-515-920-11	RELAY (24V)				
RY502	1-515-920-11	RELAY (24V)				
RY601	1-515-920-11	RELAY (24V)				
RY602	1-515-793-11	RELAY				
RY671	1-515-793-11	RELAY				
RY681	1-515-793-11	RELAY				
**********						
	A-4419-338-A	REAR-AMP BOARD, COMPLETE (DB830)				
		**********				
	A-4419-339-A	REAR-AMP BOARD, COMPLETE(DB930/V929X)				
		**********				
		< CAPACITOR >				
C701	1-119-825-41	ELECT	22uF	20%	50V	
C702	1-128-811-11	CERAMIC	150PF	5%	50V	
C703	1-102-233-00	CERAMIC	33PF	10%	500V	
C704	1-107-586-11	CERAMIC	6PF	0.5PF	500V	
C705	1-119-779-11	ELECT	220uF	20%	10V	
C706	1-106-351-00	MYLAR	2200PF	5%	200V	
C707	1-106-351-00	MYLAR	2200PF	5%	200V	
C708	1-109-876-11	FILM	0.033uF	10%	250V	
C720	1-119-799-11	ELECT	47uF	20%	16V	
C721	1-107-597-11	CERAMIC	22PF	10%	500V	
C722	1-107-597-11	CERAMIC	22PF	10%	500V	
C723	1-162-286-31	CERAMIC	220PF	10%	50V	
C724	1-119-824-31	ELECT	10uF	20%	50V	
C725	1-136-157-00	FILM	0.022uF	5%	50V	
C726	1-136-153-00	FILM	0.01uF	5%	50V	
C739	1-162-288-31	CERAMIC	330PF	10%	50V	
C749	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V	
C751	1-119-825-41	ELECT	22uF	20%	50V	
C752	1-128-811-11	CERAMIC	150PF	5%	50V	
C753	1-102-233-00	CERAMIC	33PF	10%	500V	
C754	1-107-586-11	CERAMIC	6PF	0.5PF	500V	
C755	1-119-779-11	ELECT	220uF	20%	10V	
C756	1-106-351-00	MYLAR	2200PF	5%	200V	
C757	1-106-351-00	MYLAR	2200PF	5%	200V	
C758	1-109-876-11	FILM	0.033uF	10%	250V	
C770	1-119-799-11	ELECT	47uF	20%	16V	
C771	1-107-597-11	CERAMIC	22PF	10%	500V	
C772	1-107-597-11	CERAMIC	22PF	10%	500V	
C773	1-162-286-31	CERAMIC	220PF	10%	50V	
C775	1-136-157-00	FILM	0.022uF	5%	50V	
C779	1-102-934-00	CERAMIC	1.0PF	0.25PF	50V	
C780	1-128-809-11	CERAMIC	100PF	5%	50V	
C789	1-162-288-31	CERAMIC	330PF	10%	50V	
C798	1-119-851-11	ELECT	22uF	20%	100V	
C799	1-119-851-11	ELECT	22uF	20%	100V	
		< CONNECTOR >				
CNP701	1-785-102-11	PIN, CONNECTOR 4P				
CNP711	1-784-923-11	PIN, CONNECTOR 7P				
CNP712	1-785-102-21	PIN, CONNECTOR 4P				
CNP713	1-784-924-11	PIN, CONNECTOR 8P				
CNP751	1-779-978-11	PIN, CONNECTOR 3P				

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
		< DIODE >			
D701	8-719-911-19	DIODE 1SS133T-72			
D702	8-719-109-51	DIODE MTZJ-T-72-2.2			
D703	8-719-109-51	DIODE MTZJ-T-72-2.2			
D704	8-719-911-19	DIODE 1SS133T-72			
D705	8-719-911-19	DIODE 1SS133T-72			
D706	8-719-911-19	DIODE 1SS133T-72			
D749	8-719-911-19	DIODE 1SS133T-72			
D751	8-719-911-19	DIODE 1SS133T-72			
D752	8-719-109-51	DIODE MTZJ-T-72-2.2			
D753	8-719-109-51	DIODE MTZJ-T-72-2.2			
D754	8-719-911-19	DIODE 1SS133T-72			
D798	8-719-911-19	DIODE 1SS133T-72			
D799	8-719-911-19	DIODE 1SS133T-72			
		< IC >			
IC701	8-759-326-52	IC uPC2581V			
		< TRANSISTOR >			
Q704	8-729-119-76	TRANSISTOR 2SA1115TP-EF			
Q705	8-729-026-08	TRANSISTOR 2SC4495			
Q706	8-749-010-25	IC MN2488-OPY-M			
Q707	8-749-010-26	IC MP1620-OPY-M			
Q708	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA			
Q709	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2			
Q710	8-729-900-63	TRANSISTOR BN1F4M-TP			
Q745	8-729-119-79	TRANSISTOR 2SC2785TP-FEK			
Q754	8-729-119-76	TRANSISTOR 2SA1115TP-EF			
Q755	8-729-026-08	TRANSISTOR 2SC4495			
Q756	8-749-010-25	IC MN2488-OPY-M			
Q757	8-749-010-26	IC MP1620-OPY-M			
Q758	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA			
Q798	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA			
Q799	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA			
		< RESISTOR >			
R701	1-249-417-11	CARBON	1K	5%	1/4W F
R702	1-247-881-00	CARBON	120K	5%	1/4W
R703	1-249-439-11	CARBON	68K	5%	1/4W
R704	1-249-418-11	CARBON	1.2K	5%	1/4W F
R705	1-247-807-31	CARBON	100	5%	1/4W
R712	1-249-439-11	CARBON	68K	5%	1/4W
R720	1-249-429-11	CARBON	10K	5%	1/4W
R721	1-249-422-11	CARBON	2.7K	5%	1/4W F
R722	1-249-433-11	CARBON	22K	5%	1/4W
R723	1-249-442-11	CARBON	510	5%	1/4W
⚠R724	1-249-408-11	CARBON	180	5%	1/4W F
⚠R725	1-249-408-11	CARBON	180	5%	1/4W F
⚠R726	1-234-182-11	ENCAPSULATED COMPONENT			
R727	1-240-855-91	CARBON	6.2K	5%	1/4W
R728	1-249-425-11	CARBON	4.7K	5%	1/4W F
R729	1-247-866-11	CARBON	30K	5%	1/4W
R730	1-249-421-11	CARBON	2.2K	5%	1/4W F
R731	1-249-433-11	CARBON	22K	5%	1/4W
R732	1-249-437-11	CARBON	47K	5%	1/4W
⚠R733	1-249-393-11	CARBON	10	5%	1/4W F
R735	1-249-431-11	CARBON	15K	5%	1/4W
R749	1-249-393-11	CARBON	10	5%	1/4W F
⚠R751	1-249-417-11	CARBON	1K	5%	1/4W F
R752	1-247-881-00	CARBON	120K	5%	1/4W
R753	1-249-439-11	CARBON	68K	5%	1/4W
R754	1-249-418-11	CARBON	1.2K	5%	1/4W F
R755	1-247-807-31	CARBON	100	5%	1/4W
R762	1-249-439-11	CARBON	68K	5%	1/4W
R770	1-249-429-11	CARBON	10K	5%	1/4W
R771	1-249-422-11	CARBON	2.7K	5%	1/4W F
R772	1-249-433-11	CARBON	22K	5%	1/4W
R773	1-249-442-11	CARBON	510	5%	1/4W
⚠R774	1-249-408-11	CARBON	180	5%	1/4W F
⚠R775	1-249-408-11	CARBON	180	5%	1/4W F
⚠R776	1-234-182-11	ENCAPSULATED COMPONENT			
R777	1-240-855-91	CARBON	6.2K	5%	1/4W
R778	1-249-425-11	CARBON	4.7K	5%	1/4W F
R782	1-249-437-11	CARBON	47K	5%	1/4W
⚠R783	1-249-393-11	CARBON	10	5%	1/4W F
R790	1-249-433-11	CARBON	22K	5%	1/4W
R795	1-249-419-11	CARBON	1.5K	5%	1/4W F
R796	1-249-431-11	CARBON	15K	5%	1/4W
R798	1-249-419-11	CARBON	1.5K	5%	1/4W F
R799	1-249-431-11	CARBON	15K	5%	1/4W
		< VARIABLE RESISTOR >			
RV701	1-238-595-11	RES, ADJ, CARBON 220			
RV751	1-238-595-11	RES, ADJ, CARBON 220			
		< RELAY >			
RY701	1-515-920-11	RELAY (24V)			
		< TEST PIN >			
* TP701	1-560-060-00	PIN, CONNECTOR 2P			
* TP751	1-560-060-00	PIN, CONNECTOR 2P			
**********					
	1-673-364-11	ROTARY BOARD			
		**********			
		< LED >			
D108	8-719-046-39	LED SEL5821A-TP15 (MUTING)			
		< RESISTOR >			
R102	1-216-037-00	METAL CHIP	330	5%	1/10W
R159	1-216-037-00	METAL CHIP	330	5%	1/10W
R160	1-216-041-00	METAL CHIP	470	5%	1/10W
		< VARIABLE RESISTOR >			
RV101	1-467-808-21	ENCODER, ROTARY (FUNCTION)			
		< SWITCH >			
S126	1-771-349-21	SWITCH, KEYBOARD (MODE)			
S127	1-771-349-21	SWITCH, KEYBOARD (MUTING)			
**********					

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

SP **SP-SW** **S-VIDEO**

Ref. No.	Part No.	Description			Remarks
*	1-673-355-11	SP BOARD			
		********			
		< CAPACITOR >			
CC41	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
CC42	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
CC43	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
CC47	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
CC48	1-136-153-00	FILM	0.01uF	5%	50V
CC49	1-136-153-00	FILM	0.01uF	5%	50V
CC97	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
CC98	1-136-153-00	FILM	0.01uF	5%	50V
CC99	1-136-153-00	FILM	0.01uF	5%	50V
CC101	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
CC151	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
CC201	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
CC251	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
CC301	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
CC351	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
		< JACK >			
JJ101	1-784-935-21	JACK, PIN 6P (PRE OUT) (DB930/V929X)			
JJ101	1-784-935-11	JACK, PIN 6P (PRE OUT) (DB830)			
JJ102	1-785-298-11	JACK, PIN 1P (CENTER) (DB930/V929X)			
JJ102	1-774-785-11	JACK, PIN 1P (CENTER) (DB830)			
		< COIL >			
L601	1-411-906-11	COIL, AIR-CORE			
L701	1-411-906-11	COIL, AIR-CORE			
L751	1-411-906-11	COIL, AIR-CORE			
		< RESISTOR >			
R634	1-249-389-11	CARBON	4.7	5%	1/4W F
R734	1-249-389-11	CARBON	4.7	5%	1/4W F
R784	1-249-389-11	CARBON	4.7	5%	1/4W F
RR48	1-249-393-11	CARBON	10	5%	1/4W F
RR49	1-249-393-11	CARBON	10	5%	1/4W F
RR98	1-249-393-11	CARBON	10	5%	1/4W F
RR99	1-249-393-11	CARBON	10	5%	1/4W F
RR101	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR102	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR103	1-216-077-00	METAL CHIP	15K	5%	1/10W
RR151	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR152	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR153	1-216-077-00	METAL CHIP	15K	5%	1/10W
RR201	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR202	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR203	1-216-077-00	METAL CHIP	15K	5%	1/10W
RR251	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR301	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR302	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR303	1-216-077-00	METAL CHIP	15K	5%	1/10W
RR351	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR352	1-216-049-91	RES,CHIP	1K	5%	1/10W
RR353	1-216-077-00	METAL CHIP	15K	5%	1/10W
		< TERMINAL >			
* TM501	1-694-454-21	TERMINAL BOARD (SP)(FRONT SPEAKERS)			
TM701	1-694-432-21	TERMINAL BOARD (SP)(REAR SPEAKERS)			

****

Ref. No.	Part No.	Description			Remarks
	1-673-363-11	SP-SW BOARD			
		**********			
		< CONNECTOR >			
* CNP102	1-695-808-11	CONNECTOR, PC BOARD 8P			
		< DIODE >			
D105	8-719-820-05	DIODE 1SS181-TE85L			
		< RESISTOR >			
R155	1-216-041-00	METAL CHIP	470	5%	1/10W
R156	1-216-045-00	METAL CHIP	680	5%	1/10W
R157	1-216-049-91	RES,CHIP	1K	5%	1/10W
		< SWITCH >			
S101	1-771-349-21	SWITCH, KEYBOARD (POWER)			
S102	1-762-268-11	SWITCH, ROTARY (SPEAKERS)			
S122	1-771-349-21	SWITCH, KEYBOARD (PRESET TUNING+)			
S123	1-771-349-21	SWITCH, KEYBOARD (PRESET TUNING-)			
S124	1-771-349-21	SWITCH, KEYBOARD (SHIFT)			
S125	1-771-349-21	SWITCH, KEYBOARD (FM/AM)			

****

	A-4419-368-A	S-VIDEO BOARD, COMPLETE (DB830:US)			
		**********			
	A-4419-369-A	S-VIDEO BOARD, COMPLETE (DB830:AEP)			
		**********			
	A-4419-371-A	S-VIDEO BOARD, COMPLETE			
		**********			
		(DB930:AEP,MY,SP,AUS/V929X)			
	A-4419-370-A	S-VIDEO BOARD, COMPLETE (DB930:US,CND)			
		**********			
		< CAPACITOR >			
C214	1-104-664-11	ELECT	47uF	20%	16V
C251	1-136-165-00	FILM	0.1uF	5%	50V
C252	1-136-165-00	FILM	0.1uF	5%	50V
C253	1-126-964-11	ELECT	10uF	20%	50V
C254	1-136-165-00	FILM	0.1uF	5%	50V
C255	1-136-165-00	FILM	0.1uF	5%	50V
C256	1-126-964-11	ELECT	10uF	20%	50V
C257	1-136-165-00	FILM	0.1uF	5%	50V
C258	1-126-964-11	ELECT	10uF	20%	50V
C259	1-126-964-11	ELECT	10uF	20%	50V
C260	1-136-165-00	FILM	0.1uF	5%	50V
C261	1-104-664-11	ELECT	47uF	20%	16V
C262	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C263	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C264	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C265	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C266	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C267	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C268	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C269	1-163-133-00	CERAMIC CHIP	470PF	5%	50V

Ref. No.	Part No.	Description	Remarks
C270	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C271	1-163-275-11	CERAMIC CHIP 0.001uF 5% 50V	(DB830:US/DB930:US,CND)
C272	1-163-275-11	CERAMIC CHIP 0.001uF 5% 50V	(DB830:US/DB930:US,CND)
C273	1-126-964-11	ELECT 10uF 20% 50V	(DB830:US/DB930:US,CND)
C274	1-163-275-11	CERAMIC CHIP 0.001uF 5% 50V	(DB830:US/DB930:US,CND)
C275	1-163-275-11	CERAMIC CHIP 0.001uF 5% 50V	(DB830:US/DB930:US,CND)
		< CONNECTOR >	
* CNS210	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
CNS211	1-695-094-11	SOCKET, CONNECTOR 11P	
CNS215	1-784-776-11	CONNECTOR, FFC 15P	
		< DIODE >	
D251	8-719-801-78	DIODE 1SS184-TE85L	
		< IC >	
IC202	8-759-245-79	IC M5F7905L	
IC251	8-759-536-24	IC NJM-2296M-TE2	
IC252	8-759-536-24	IC NJM-2296M-TE2	
IC253	8-759-356-27	IC NJM2129M-TE2	(DB830:US/DB930:US,CND)
IC254	8-759-135-80	IC LM358P (DB830:US/DB930:US,CND)	
		< JACK >	
J251	1-779-800-11	TERMINAL, S (S-VIDEO OUT)(DB930/V929X)	
J251	1-537-943-11	TERMINAL, S (S-VIDEO OUT)(DB830)	
J252	1-779-801-11	CONNECTOR (ROUND TYPE) (S-VIDEO IN/OUT)	(DB930/V929X)
J252	1-764-676-11	CONNECTOR (ROUND TYPE) (S-VIDEO IN/OUT)	(DB830)
J253	1-779-801-11	CONNECTOR (ROUND TYPE) (S-VIDEO IN)	(DB930/V929X)
J253	1-537-943-11	TERMINAL, S(S-VIDEO IN)(DB830)	
J255	1-563-330-11	JACK (CONTROL S OUT)	(DB830:US/DB930:US,CND)
J256	1-563-330-11	JACK (CONTROL S OUT)	(DB830:US/DB930:US,CND)
J257	1-563-330-11	JACK (CONTROL S IN)	(DB830:US/DB930:US,CND)
J258	1-563-330-11	JACK (CONTROL S IN)	(DB830:US/DB930:US,CND)
		< TRANSISTOR >	
Q251	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	(DB830:US/DB930:US,CND)
Q252	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	(DB830:US/DB930:US,CND)
Q253	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	(DB830:US/DB930:US,CND)
Q254	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	(DB830:US/DB930:US,CND)
Q255	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	(DB830:US/DB930:US,CND)
Q256	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	(DB830:US/DB930:US,CND)
Q257	8-729-216-22	TRANSISTOR 2SA1162-YG-TE85L	(DB830:US/DB930:US,CND)
Q258	8-729-230-49	TRANSISTOR 2SC2712-YG-TE85L	(DB830:US/DB930:US,CND)
		< RESISTOR >	
R251	1-216-022-00	METAL CHIP 75 5% 1/10W	
R252	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R253	1-216-022-00	METAL CHIP 75 5% 1/10W	
R254	1-216-022-00	METAL CHIP 75 5% 1/10W	
R255	1-216-022-00	METAL CHIP 75 5% 1/10W	
R256	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R257	1-216-022-00	METAL CHIP 75 5% 1/10W	
R258	1-216-022-00	METAL CHIP 75 5% 1/10W	
R259	1-216-022-00	METAL CHIP 75 5% 1/10W	
R260	1-216-022-00	METAL CHIP 75 5% 1/10W	
R261	1-216-022-00	METAL CHIP 75 5% 1/10W	
R262	1-216-022-00	METAL CHIP 75 5% 1/10W	
R263	1-216-073-00	METAL CHIP 10K 5% 1/10W	(DB830:US/DB930:US,CND)
R264	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(DB830:US/DB930:US,CND)
R265	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R266	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R267	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R268	1-216-089-91	RES,CHIP 47K 5% 1/10W	(DB830:US/DB930:US,CND)
R269	1-216-081-00	METAL CHIP 22K 5% 1/10W	(DB830:US/DB930:US,CND)
R270	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	(DB830:US/DB930:US,CND)
R271	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R272	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R273	1-216-043-91	RES,CHIP 560 5% 1/10W	(DB830:US/DB930:US,CND)
R274	1-216-041-00	METAL CHIP 470 5% 1/10W	(DB830:US/DB930:US,CND)
R275	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R276	1-216-049-91	RES,CHIP 1K 5% 1/10W	(DB830:US/DB930:US,CND)
R277	1-216-041-00	METAL CHIP 470 5% 1/10W	(DB830:US/DB930:US,CND)
R278	1-216-043-91	RES,CHIP 560 5% 1/10W	(DB830:US/DB930:US,CND)
R279	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(DB830:US/DB930:US,CND)
R280	1-216-073-00	METAL CHIP 10K 5% 1/10W	(DB830:US/DB930:US,CND)

****

TUNER VIDEO VOLUME

Ref. No.	Part No.	Description			Remarks
*	1-673-358-11	TUNER BOARD			
		**********			
		< CAPACITOR >			
C1	1-163-263-11	CERAMIC CHIP	330PF	5%	50V
					(DB830:AEP/DB930:AEP)
C2	1-126-961-11	ELECT	2.2uF	20%	50V
					(DB830:AEP/DB930:AEP)
C3	1-126-964-11	ELECT	10uF	20%	50V
					(DB830:AEP/DB930:AEP)
C4	1-165-319-11	CERAMIC CHIP	0.1uF		50V
					(DB830:AEP/DB930:AEP)
C5	1-163-135-00	CERAMIC CHIP	560PF	5%	50V
					(DB830:AEP/DB930:AEP)
C6	1-163-249-11	CERAMIC CHIP	82PF	5%	50V
					(DB830:AEP/DB930:AEP)
C7	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
					(DB830:AEP/DB930:AEP)
C381	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C382	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C399	1-126-964-11	ELECT	10uF	20%	50V
		< CONNECTOR >			
* CNS303	1-569-306-11	SOCKET, CONNECTOR (L TYRE) 15P			
CNS305	1-774-289-11	PIN, CONNECTOR (PC BOARD) 15P			
		< IC >			
IC1	8-759-557-36	IC BU1924F-E2 (DB830:AEP/DB930:AEP)			
IC399	8-759-708-12	IC NJM78L12A-T3			
		< COIL >			
L1	1-408-982-11	INDUCTOR	100uH		
					(DB830:AEP/DB930:AEP)
		< RESISTOR >			
R1	1-216-025-91	RES,CHIP	100	5%	1/10W
					(DB830:AEP/DB930:AEP)
R2	1-216-025-91	RES,CHIP	100	5%	1/10W
					(DB830:AEP/DB930:AEP)
R3	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
					(DB830:AEP/DB930:AEP)
		< VIBRATOR >			
X1	1-579-900-21	VIBRATOR, CRYSTAL 4.33MHz			
					(DB830:AEP/DB930:AEP)
**********					
*	1-673-356-11	VIDEO BOARD			
		**********			
		< CAPACITOR >			
C201	1-126-964-11	ELECT	10uF	20%	50V
C202	1-126-964-11	ELECT	10uF	20%	50V
C203	1-126-964-11	ELECT	10uF	20%	50V
C204	1-126-964-11	ELECT	10uF	20%	50V
C205	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C206	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C207	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C208	1-126-964-11	ELECT	10uF	20%	50V
C209	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C210	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C211	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C212	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C213	1-104-664-11	ELECT	47uF	20%	16V
C215	1-165-319-11	CERAMIC CHIP	0.1uF		50V
C216	1-104-664-11	ELECT	47uF	20%	16V
		< CONNECTOR >			
CNS212	1-695-094-11	SOCKET, CONNECTOR 11P			
		< DIODE >			
D201	8-719-801-78	DIODE 1SS184-TE85L			
		< IC >			
IC201	8-759-536-24	IC NJM-2296M-TE2			
		< JACK >			
J201	1-785-867-21	JACK, PIN 1P (MONITOR) (DB930/V929X)			
J201	1-785-867-11	JACK, PIN 1P (MONITOR) (DB830)			
J202	1-785-866-21	JACK, PIN 3P (DVD/VIDEO2) (DB930/V929X)			
J202	1-785-866-11	JACK, PIN 3P (DVD/VIDEO2) (DB830)			
J203	1-785-866-21	JACK, PIN 3P (VIDEO2/VIDEO1)(DB930/V929X)			
J203	1-785-866-11	JACK, PIN 3P (VIDEO2/VIDEO1)(DB830)			
J204	1-563-330-11	JACK (S-LINK)			
		< RESISTOR >			
R201	1-216-022-00	METAL CHIP	75	5%	1/10W
R202	1-216-022-00	METAL CHIP	75	5%	1/10W
R203	1-216-022-00	METAL CHIP	75	5%	1/10W
R204	1-216-022-00	METAL CHIP	75	5%	1/10W
R205	1-216-022-00	METAL CHIP	75	5%	1/10W
R206	1-216-022-00	METAL CHIP	75	5%	1/10W
R207	1-216-022-00	METAL CHIP	75	5%	1/10W
**********					
	1-673-362-11	VOLUME BOARD			
		**********			
		< CAPACITOR >			
C1410	1-119-825-41	ELECT	22uF	20%	50V
C1411	1-119-825-41	ELECT	22uF	20%	50V
C1412	1-119-825-41	ELECT	22uF	20%	50V
C1416	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1417	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1418	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1460	1-119-825-41	ELECT	22uF	20%	50V
C1461	1-119-825-41	ELECT	22uF	20%	50V
C1462	1-119-825-41	ELECT	22uF	20%	50V
C1466	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1467	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1468	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C1492	1-119-787-31	ELECT	33uF	20%	16V
C1493	1-119-787-31	ELECT	33uF	20%	16V
		< CONNECTOR >			
CNP101	1-770-388-11	PIN, CONNECTOR (PC BOARD) 4P			
		< IC >			
IC1401	8-759-636-55	IC M5218AFP-T1			
IC1402	8-759-636-55	IC M5218AFP-T1			
IC1403	8-759-636-55	IC M5218AFP-T1			

Ref. No.	Part No.	Description			Remarks
		< RESISTOR >			
R1411	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1412	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1413	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1414	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1415	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1416	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1419	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1420	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1421	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1461	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1462	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1463	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1464	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1465	1-216-097-91	RES,CHIP	100K	5%	1/10W
R1466	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1469	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1470	1-216-089-91	RES,CHIP	47K	5%	1/10W
R1471	1-216-089-91	RES,CHIP	47K	5%	1/10W
		< VARIABLE RESISTOR >			
RV1501	1-225-445-12	RES, VAR, CARBON 100K/100KX5 (MASTER VOLUME)			
**********					
		MISCELLANEOUS			
		**********			
⚠59	1-696-847-11	CORD, POWER (DB930:AUS)			
⚠59	1-769-743-11	CORD, POWER (DB930:CND)			
⚠59	1-769-744-11	CORD, POWER (DB830:AEP/DB930:AEP,MY,SP)			
⚠59	1-782-464-21	CORD, POWER (V929X)			
⚠59	1-783-531-11	CORD, POWER (DB830:US/DB930:US)			
69	1-773-117-11	WIRE (FLAT TYPE)(19 CORE) (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)			
69	1-773-185-11	WIRE (FLAT TYPE) (23 CORE) (DB830:US/DB930:US,CND)			
70	1-773-048-11	WIRE (FLAT TYPE)(17 CORE)			
71	1-773-001-11	WIRE (FLAT TYPE)(15 CORE)			
⚠T901	1-433-772-11	TRANSFORMER, POWER(DB930:MY,SP/V929X)			
⚠T901	1-433-776-11	TRANSFORMER, POWER(DB830:US/DB930:US)			
⚠T901	1-433-777-11	TRANSFORMER, POWER (DB930:CND)			
⚠T901	1-433-778-11	TRANSFORMER, POWER (DB830:AEP/DB930:AEP)			
⚠T901	1-433-780-11	TRANSFORMER, POWER (DB930:AUS)			
TU301	1-693-407-11	TUNER (DB830:US/DB930:US,CND)			
TU301	1-693-409-11	TUNER (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)			
**********					

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-418-293-11	REMOTE COMMANDER (RM-LJ302) (DB930,V929X)	
	1-501-594-11	ANTENNA (FM) (DB830:AEP/DB930:AEP,MY,SP,AUS,V929X)	
	1-501-721-11	ANTENNA (LOOP)	
	1-777-172-11	CORD, CONNECTION(CONTROL A1 CABLE 1P) (DB830:US/DB930:US,CND)	
	1-777-560-11	CORD, CONNECTION(AVC CABLE 4P) (DB830:US/DB930:US,CND)	
	3-866-295-11	MANUAL, INSTRUCTION (RM-LJ302) (ENGLISH)(DB930,V929X)	
	3-866-295-21	MANUAL, INSTRUCTION (RM-LJ302) (FRENCH,SPANISH)(DB930:CND,AEP)	
	3-866-295-31	MANUAL, INSTRUCTION (RM-LJ302) (CHINESE)(DB930:MY,SP,V929X)	
	3-866-295-41	MANUAL, INSTRUCTION (RM-LJ302) (DUTCH,SWEDISH,GERMAN,ITALIAN, PORTUGUESE)(DB930:AEP)	
	3-866-296-11	MANUAL, INSTRUCTION (RM-PP402)(ENGISH)(DB830)	
	3-866-296-21	MANUAL, INSTRUCTION (RM-PP402)(FRENCH,SPANISH)(DB830:AEP)	
	3-866-296-41	MANUAL, INSTRUCTION(RM-PP402) (DUTCH,SWEDISH,GERMAN,ITALIAN, PORTUGUESE)(DB830:AEP)	
	3-866-670-11	MANUAL,COMMONNESS INSTRUCTION (ENGLISH)(DB830:US/DB930:US,AUS)	
	3-866-670-21	MANUAL,COMMONNESS INSTRUCTION (ENGLISH,FRENCH,GERMAN,SPANISH,DUTCH) (DB830:AEP/DB930:CND,AEP,MY,SP)	
	3-866-670-41	MANUAL,COMMONNESS INSTRUCTION (ENGLISH,ARABIC,CHINESE)(V929X)	
	3-866-968-11	MANUAL, INSTRUCTION(ENGLISH) (DB830:US/DB930:US,CND)	
	3-866-968-21	MANUAL, INSTRUCTION (FRENCH)(DB930:CND)	
	3-866-968-31	MANUAL, INSTRUCTION(ENGLISH,CHINESE) (DB930:MY,SP,AUS)	
	3-866-968-41	MANUAL, INSTRUCTION (ENGLISH,CHINESE)(V929X)	
	3-866-968-51	MANUAL, INSTRUCTION (ENGLISH,FRENCH,DUTCH,SWEDISH) (DB830:AEP/DB930:AEP)	
	3-866-968-61	MANUAL, INSTRUCTION (GERMAN,SPANISH,ITALIAN,PORTUGUESE) (DB830:AEP/DB930:AEP)	
	4-981-643-11	COVER BATTERY (FOR RM-LJ302)(DB930,V929X)	
	8-917-666-90	REMOTE COMMANDER RM-PP402(DB830)	
**********			
		**********	
		HARDWARE LIST	
		**********	
#1	7-685-646-79	SCREW +BVTP 3 × 8 TYPE2 IT-3	
#2	7-685-885-09	SCREW +BVTT 4 × 16 (S)	
#3	7-685-853-04	SCREW +BVTT 2 × 6 (S)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	1999.04	New
1.1	2002.02	DIGITAL board suffix-12 contents addition (ECN-TAC01242)